



Tecnam P2006T (P06T)

N60KK

AFM copy

There has been a considerable  
effort to make this as close to  
N60KK AFM but errors are possible.

If errors are found please  
let me know.

Thanks for interest in the airplane.


Rick

## Aircraft Flight Manual

Doc. No. 2006/044

4<sup>th</sup> Edition – Rev. 20

March 13, 2023

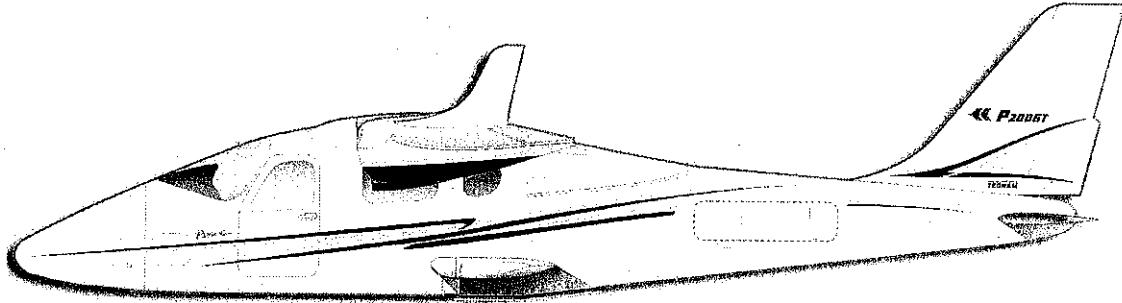

## **TECNAM P2006T**

MANUFACTURER: *COSTRUZIONI AERONAUTICHE* **TECNAM** S.p.A.

AIRCRAFT MODEL: **P2006T**

EASA TYPE CERTIFICATE NO: **A .185** (DATED 2009, JUNE 5<sup>TH</sup>)

SERIAL NUMBER: .....

BUILD YEAR: .....

REGISTRATION MARKINGS: .....

*This Aircraft Flight Manual is approved by **European Aviation Safety Agency (EASA)**.*

*This Manual contains information required by the FAA to be furnished to the pilot for operation in the U.S.A. plus information supplied by the manufacturer. It is approved by EASA on behalf of the FAA per FAR 21.29.*

*This Manual must be carried in the airplane at all times.  
The airplane has to be operated in compliance with procedures and limitations contained herein.*

---

Costruzioni Aeronautiche **TECNAM** S.p.A.

Via Maiorise

CAPUA (CE) – Italy

Tel. +39 (0) 823.62.01.34

WEB: [www.tecnam.com](http://www.tecnam.com)

---

**SECTION 0**

**INDEX**

<b>1. RECORD OF REVISIONS .....</b>	<b>3</b>
<b>2. LIST OF EFFECTIVE PAGES .....</b>	<b>7</b>
<b>3. FOREWORD .....</b>	<b>10</b>
<b>4. SECTIONS LIST.....</b>	<b>11</b>

## **1. RECORD OF REVISIONS**

Any revision to the present Manual, except actual weighing data, is recorded: a Record of Revisions is provided at the front of this manual and the operator is advised to make sure that the record is kept up-to-date.

The Manual issue is identified by Edition and Revision codes reported on each page, lower right side.

The revision code is numerical and consists of the number "0"; subsequent revisions are identified by the change of the code from "0" to "1" for the first revision to the basic publication, "2" for the second one, etc.

Should be necessary to completely reissue a publication for contents and format changes, the Edition code will change to the next number ("2" for the second edition, "3" for the third edition etc).

Additions, deletions and revisions to existing text will be identified by a revision bar (black line) in the left-hand margin of the page, adjacent to the change.

When technical changes cause expansion or deletion of text which results in unchanged text appearing on a different page, a revision bar will be placed in the right-hand margin adjacent to the page number of all affected pages providing no other revision bar appears on the page.

These pages will be updated to the current regular revision date.

**NOTE:** It is the responsibility of the owner to maintain this handbook in a current status when it is being used for operational purposes.

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	First issue	D. Ronca	M. Oliva	M. Oliva	
1	0-4,8	Amended ROR and LOEP	D. Ronca	M. Oliva	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/270.160429)
	6-12	Amended Equipment List				
	9-1,2,5,7	Amended Supplement List				
2	0-4,8	Amended ROR and LOEP	D. Ronca	M. Oliva	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/290.170316)
	4-3,4,18,19	Amended General recommendations and "Prior to Takeoff" procedure				
	5-16	Amended Cruise performances				
	9-1,2,4,5,7	Amended Supplement List Index				
3	0-1,4,7	Amended cover page, ROR and LOEP	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/315.170901)
	6-11, 12, 13	Amended Equipment List				
	9-2,3,8	Amended Supplement List, Modified Introduction,				
4	0-1,4,7, 12	Amended cover page, ROR and LOEP. Blank page added.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/318.171205)
	4-3,11,16, 17,19,20,25	Amended "Pre-flight", "Engine starting", "Prior to takeoff" and "Parking/Shut down" checklists				
	5-23	Blank page removed				
	6-11, 12, 13	Amended Equipment List				
5	0-1,4,7,12	Amended cover pages, ROR and LOEP. Blank page added.	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/325.180112)
	2-11	Amended caution on supplemental oxygen use.				
	2-12	Integration of info formerly contained in Supp. A27, G16, G18.				
	4-19,22	Amended procedures.				
	6-11,12,13	Amended equipment list.				
	9-all	Amended Supplement List.				

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
6	0-1, 5, 7	Amended. Blank page added.	A. Sabino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/345.181120)
	1-6	Typo in stabilator deflections values corrected.				
	2-12	Reference to Oil Temp. Indicator MOD corrected				
	2-20	Warning amended				
	4-22, 24, 25	Normal procedures amended				
	6-13	Eq. list amended				
	9-2, 7, 8	Supplement G23 added.				
7	0-1, 5, 7	Amended cover pages, ROR and LOEP.	A. Sabino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/357.190226)
	6-11, 6-13	Amended equipment list				
	9-2, 9-7, 9-8	Amended Supplements List.				
8	0-1, 5, 7	Amended cover pages, ROR and LOEP.	A. Sabino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/359.190404)
	9-all pages	Supplements list layout changed				
9	0-1, 5, 7	Amended cover page, ROR and LOEP.	G. Valentino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/362.190417)
	6-11	Amended Equipment List.				
	9-3	Amended Supplements List.				
10	0-1, 5, 7	Amended cover page, ROR and LOEP.	A. Sabino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/368.190719)
	3-1, 2, 22	Added electrical pitch trim failure				
	6-5,6,13	Amended weighing form and equipment List.				
	9-4	Amended Supplements List.				
11	0-1,5,7	Cover pages, ROR and LOEP updated	A. Glorioso (OJT) G. Valentino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/375.190826)
	3-22	Electrical pitch trim control failure procedures updated				
	9-3	Supplements List updated				
12	0-1,5,7	Cover pages, ROR and LOEP updated	A. Glorioso	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/380.191111)
	9-1, 3, 4	Supplements List updated ant typo errors				

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
13	0-1, 6, 7	Cover pages, ROR and LOEP Updated and typo errors	A. Glorioso	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/382.200129)
	4-16, 17	Update "Engine starting" checklist				
	5-17	Typo error				
	7-22	Updated description of Landing Gear System				
	9-2, 3, 4	Supplements List updated				
14	0-1, 6, 7	Cover pages, ROR and LOEP	G. Valentino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/389.200303)
	9-4	Supplements List updated				
15	0-1,6,7	Cover pages, ROR and LOEP	G. Valentino L. De Salvi (OJT)	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/398.210318)
	1-7	Update Oil stick minimum recommended level				
	2-10,12,24	Update fuel pump part No. for powerplant limitations and typo errors.				
	3-15	Typo Errors				
	4-19,22,27	Updated Fuel Pump Part No. and Towing procedure optimization				
	6-11	Update Instrument & Avionics List.				
9-3,4	Supplements List updated					
16	0-1,6,7	Cover pages, ROR and LOEP	G. Valentino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/402.210401)
	9-3	Supplements List updated				
17	0-1,6,7	Cover pages, RoR and LoEP	L. De Salvi	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/405.210702)
	3-10,14	Typo errors				
	9-3,4	Supplement List updated				
18	0-1,6,7	Cover pages, RoR and LoEP	F. Paloni	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/431.230117)
	6-13	Equipment List updated for MOD2006/208 and MOD2006/409				
	7-26, 31, 34	Placard correction, MOD2006/208, MOD2006/317, MOD2006/266, MOD2006/409				
	8-5	MOD2006/317, MOD2006/266				
	9-2,3,4	Supplement updates				

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
19	0-1, 7, 8	Cover pages, ROR and LOEP Updated	F. Paloni	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/432.230203)
	9-3,4	Supplement list update for: MOD2006/430 Typos				
20	0-1, 7, 8	Cover pages, ROR and LOEP Updated	F. Paloni	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/439.230313)
	6-13	Equipment List Updates				
	9-3, 4	Supplement list update for: System Optimization				



## 2. LIST OF EFFECTIVE PAGES

The List of Effective Pages (LOEP), applicable to manuals of every operator, lists all the basic AFM pages: each manual could contain either basic pages or one variant of these pages when the pages of some Supplements are embodied.

Should the Supplements be embodied in accordance with approved instructions, make reference to the LOEP addressed on the Supplements themselves.

- Ed 1     May 25, 2009
- Ed 2     March 29, 2010
- Ed 3     December 22, 2011
- Ed 4     July 25, 2015

Section	Pages	Revision
Section 0	2, 3, 8, 9, 11	Rev 0
	4, 12	Rev 5
	5, 10	Rev 12
	1, 7, 8	Rev 20
Section 1	1 thru 5, 8 thru 18	Rev 0
	6	Rev 6
	7	Rev. 15
Section 2	1 thru 9, 13 thru 19, 21 thru 23, 25 thru 32	Rev 0
	11	Rev 5
	20	Rev 6
	10,12,24	Rev 15
Section 3	1, 2	Rev 10
	3 thru 9, 11 thru 13, 16 thru 21, 23 thru 54	Rev 0
	22	Rev 11
	15	Rev. 15
Section 4	10,14	Rev. 17
	1, 2, 5 thru 10, 12 thru 15, 18, 21, 26, 28 thru 30	Rev 0
	4	Rev 2
	3, 11, 20	Rev 4
	23	Rev 5
Section 5	24, 25	Rev 6
	16, 17	Rev 13
	19,22,27	Rev 15
	1 thru 15,18 thru 22	Rev 0
Section 6	16	Rev 2
	17	Rev 13
	1 thru 4, 7 thru 10, 14	Rev 0
	5, 6	Rev 10
Section 7	12	Rev 5
	11	Rev 15
	13	Rev 20
	1 thru 21, 23, 24, 25, 27 thru 30, 32, 33, 35 thru 44	Rev 0
Section 8	22	Rev. 13
	26, 31, 34	Rev. 18
	1 thru 4, 6 thru 10	Rev 0
Section 9	5	Rev. 18
	1	Rev 12
	2	Rev 18
Supplements LOEP: make reference to the Supplements Cover Pages		Rev. 20

INTENTIONALLY LEFT BLANK

### 3. FOREWORD

Tecnam *P2006T* is a twin-engine four-seat aircraft with high cantilevered wing and tri-cycle retractable landing gear.

Section 1 supplies general information and it contains definitions, symbols explanations, acronyms and terminology used.

Before using the airplane, you are recommended to read carefully this manual: a deep knowledge of airplane features and limitations will allow you for operating the airplane safely.

For further information, please contact:

COSTRUZIONI AERONAUTICHE **TECNAM** S.p.A.

Via MAIORISE

CAPUA (CE) - ITALY

☎ +39 (0) 823.62.01.34 🌐 [www.tecnam.com](http://www.tecnam.com)

#### **4. SECTIONS LIST**

<b>General</b>	Section 1 (a non-approved Chapter)
<b>Limitations</b>	Section 2 - <b>EASA Approved Chapter</b>
<b>Emergency Procedures</b>	Section 3 (a non-approved Chapter)
<b>Normal Procedures</b>	Section 4 (a non-approved Chapter)
<b>Performances</b>	Section 5 (a non-approved Chapter)
<b>Weight and Balance</b>	Section 6 (a non-approved Chapter)
<b>Airframe and Systems description</b>	Section 7 (a non-approved Chapter)
<b>Airplane Care and Maintenance</b>	Section 8 (a non-approved Chapter)
<b>Supplements</b>	Section 9 (*)

(\*) EASA approved parts, if any, are reported on the supplements

INTENTIONALLY LEFT BLANK

**SECTION 1 - GENERAL****INDEX**

<b>1. Introduction .....</b>	<b>3</b>
<b>2. Three-view and dimensions .....</b>	<b>4</b>
<b>3. Control Surfaces Travel Limits .....</b>	<b>6</b>
<b>4. Engine .....</b>	<b>6</b>
<b>5. Propeller.....</b>	<b>6</b>
<b>6. Governor .....</b>	<b>7</b>
<b>7. Fuel .....</b>	<b>7</b>
<b>8. Lubrication.....</b>	<b>7</b>
<b>9. Cooling .....</b>	<b>8</b>
<b>10. Maximum weights .....</b>	<b>8</b>
<b>11. Standard weights .....</b>	<b>8</b>
<b>12. Specific loadings .....</b>	<b>8</b>
<b>13. Acronyms and terminology .....</b>	<b>10</b>
<b>14. Unit conversion chart.....</b>	<b>15</b>
<b>15. Litres / US gallons conversion chart .....</b>	<b>16</b>

INTENTIONALLY LEFT BLANK

## 1. INTRODUCTION

The Aircraft Flight Manual has been implemented to provide the owners with information for a safe and efficient use of the aircraft TECNAM P2006T.

### **Warning - Caution - Note**

Following definitions apply to warnings, cautions and notes used in the Aircraft Flight Manual.



The non-observation of the corresponding procedure can lead, as immediate effect, to a significant reduction of the flight safety.



The non-observation of the corresponding procedure can lead to an equipment damage which leads to a reduction of the flight safety in a short or longer time interval.



Draws the attention to a procedure not directly related to safety of flight.



**2. THREE-VIEW AND DIMENSIONS**

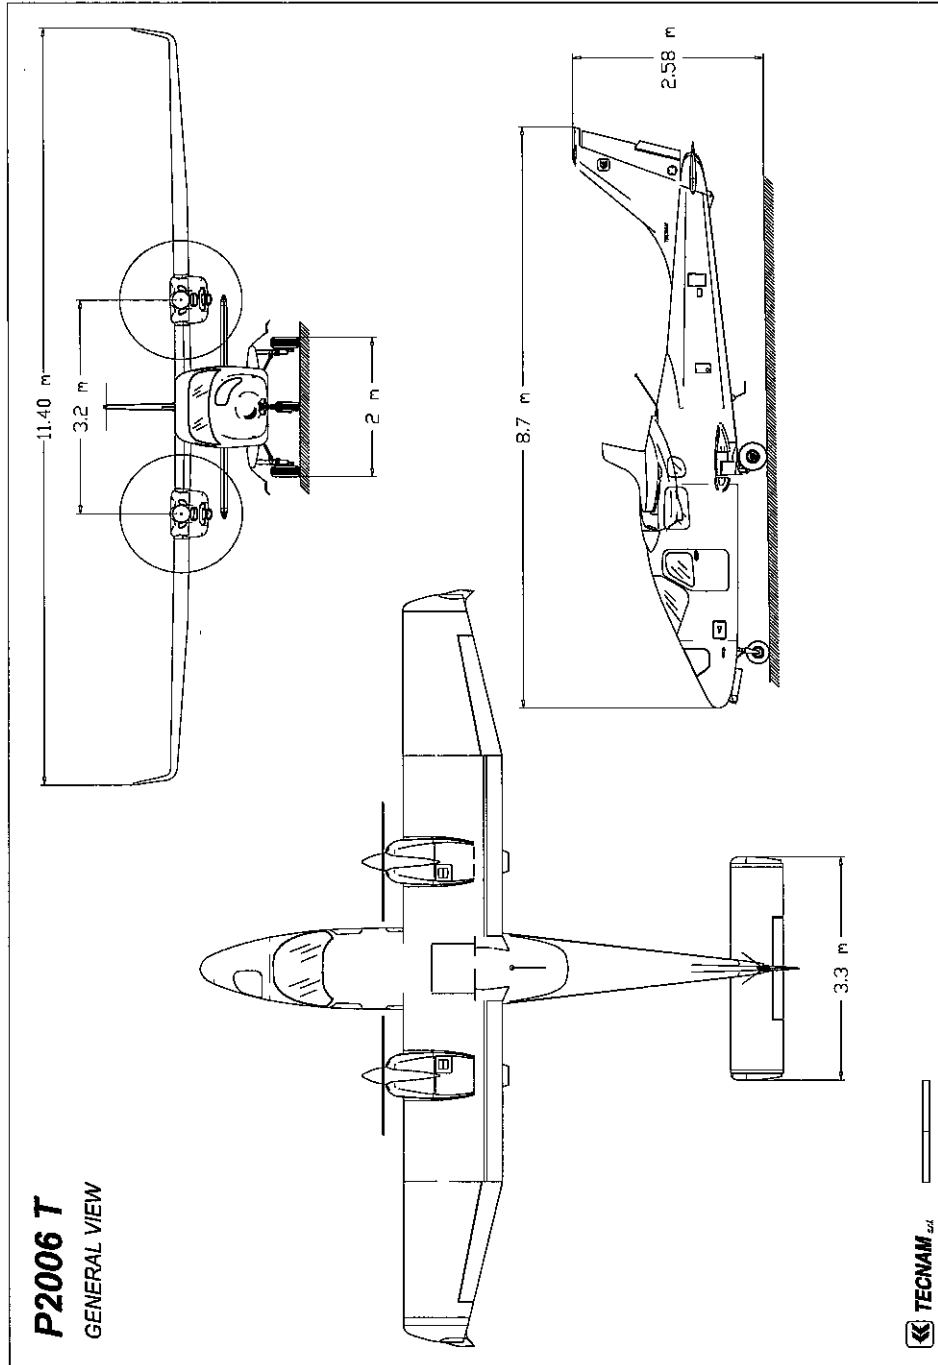


Figure 1 – General views

## **Dimensions**

### **Overall dimensions**

Wingspan	11,4 m	37,4 ft
Length	8,7 m	28,5 ft
Overall height	2,58 m	8,46 ft

### **Wing**

Wing surface	14,76 m <sup>2</sup>	158,9 ft <sup>2</sup>
Mean Geometric Chord	1,295 m	4,25 ft
Dihedral	1°	
Aspect ratio	8,80	

### **Main Landing Gear**

Track	2.0 m
Wheelbase	2.9 m
Tire	6.00-6
Wheel rim assembly (Cleveland)	P/N 40-59A

### **Nose Landing Gear**

Tire	5.00 - 5
Wheel rim assembly (Cleveland)	P/N 40-77C

### 3. CONTROL SURFACES TRAVEL LIMITS

Ailerons	Up 20° Down 17° (± 2°)
Stabilator (refer to Trailing Edge)	Up 15° Down 4° (± 2°)
Stabilator trim tab (refer to Trailing Edge)	Up 2°; Down 19° (± 2°)
Rudder	RH 26° LH 26° (± 2°)
Rudder trim tab	RH 20° LH 20° (± 2°)
Flaps	0°; 40° (- 2°)

### 4. ENGINE

Manufacturer	Bombardier-Rotax GmbH
Model	912 S3
Certification basis	FAR 33 - Amendment 15
Type Certificate	EASA TCDS no. E.121 dated 1 April 2008
Engine type	4 cylinders horizontally opposed with 1352 c.c. of overall displacement, liquid cooled cylinder heads, ram-air cooled cylinders, two carburetors, integrated reduction gear box with torsional shock absorber and overload clutch.
Maximum power (at declared rpm)	73.5 kW (98.6hp) @ 5800 rpm –5 minutes maximum. 69.0 kW (92.5hp) @ 5500 rpm (continuous)

### 5. PROPELLER

Manufacturer	MT Propeller
Type Certificate	LBA 32.130/086 (MTV-21 series)
Model	MTV-21-A-C-F/CF178-05
Blades/hub	2 wood/composite blades – aluminum hub
Diameter	1780 mm (no reduction allowed)
Type	Variable pitch - hydraulically controlled

## 6. GOVERNOR

Manufacturer	Mt Propeller
Model	P-875-12
Type	Hydraulic

## 7. FUEL

Approved fuel:	MOGAS ASTM D4814
	MOGAS EN 228 Super/Super plus (min. RON 95)
	AVGAS 100LL (ASTM D910)
	<i>(see also Section 2)</i>

Fuel tanks	Two integrated tanks (one in each wing) fitted with drainable sump and drain valve
Capacity of each wing tank	100 litres (26,42 US gallons)
Tanks overall capacity	200 litres (52,8 US gallons)
Overall usable fuel	194.4 litres (51,35 US gallons)
Overall unusable fuel	5.6 litres (1,48 US gallons)

## 8. LUBRICATION

Lubrication system	Forced type with external reservoir
Oil	Use only oil with API classification "SG" or higher. For additional info, refer to "Rotax Operators Manual" – last issue -, "Operating Media" Section.
Oil capacity	Max. 3.0 litres – min. 2.0 litres <i>(per tank) (*)</i>

(\*) :In accordance with SB-912-04 R1 the minimum oil level is recommended to 2.50 liters.

## 9. COOLING

Cooling system	Ram-air cooled cylinders, liquid cooled cylinder heads (closed and pressurized circuit)
Coolant liquid	Certified for Water/Coolant mixture. Make reference to "Rotax Operators Manual" – last issue
Overall circuit capacity	1410 cm <sup>3</sup>

## 10. WEIGHTS

See Section 2.

## 11. STANDARD WEIGHTS

Empty Weight: see weighing record on Section 6

## 12. SPECIFIC LOADINGS

	MTOW 1180 kg (2601 lb)	MTOW 1230 kg (2712 lb)
Wing Loading	80 kg/m <sup>2</sup> (16,37 lb/sqft )	83 kg/m <sup>2</sup> (17,1 lb/sqft )
Power Loading	6.0 kg/hp (13,26 lb/hp )	6.28 kg/hp (13,84 lb/hp )

NOTE. Reference is made to both MTOW: 1180 kg and 1230 kg (if Supplement A19 or G10 - Increased MTOW @1230 KG - is applicable).

INTENTIONALLY LEFT BLANK

### 13. ACRONYMS AND TERMINOLOGY

KCAS	<u>Calibrated Airspeed</u> is the indicated airspeed expressed in knots, corrected taking into account the errors related to the instrument itself and its installation.
KIAS	<u>Indicated Airspeed</u> is the speed shown on the airspeed indicator and it is expressed in knots.
KTAS	<u>True Airspeed</u> is the KCAS airspeed corrected taking into account altitude and temperature.
V <sub>A</sub>	<u>Design Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement.
V <sub>FE</sub>	<u>Maximum Flap Extended speed</u> is the highest speed permissible with flaps extended.
V <sub>LO</sub>	<u>Maximum Landing Gear Operating speed</u> is the maximum speed allowed to retract or to extend the landing gear.
V <sub>LE</sub>	<u>Maximum Landing Gear Extended speed</u> is the maximum speed allowed with the landing gear extended.
V <sub>MC</sub>	<u>Minimum control speed</u> : is the minimum speed necessary to ensure an efficient aircraft control in case of one engine inoperative.
V <sub>NO</sub>	<u>Maximum Structural Cruising Speed</u> is the speed that should not be exceeded, except in smooth air and only with caution.
V <sub>NE</sub>	<u>Never Exceed Speed</u> is the speed limit that may not be exceeded at any time.
V <sub>O</sub>	<u>Operating Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement
V <sub>S</sub>	<u>Stall Speed.</u>
V <sub>S0</sub>	<u>Stall Speed in landing configuration</u> (flaps and landing gear extended).
V <sub>S1</sub>	<u>Stall speed in the given flap and landing gear configuration.</u>
V <sub>SSE</sub>	<u>Recommended safe simulated OEI speed</u> is the minimum speed at which simulated OEI training operation should be executed.
V <sub>X</sub>	<u>Best Angle-of-Climb Speed</u> is the speed which allows best ramp climb performances.
V <sub>Y</sub>	<u>Best Rate-of-Climb Speed</u> is the speed which allows the best gain in altitude over a given time.
V <sub>R</sub>	<u>Rotation speed</u> : is the speed at which the aircraft rotates about the pitch axis during takeoff
V <sub>YSE</sub>	<u>Best Rate-of-Climb speed</u> in case of one engine inoperative.

**Meteorological terminology**

ISA	<u>International Standard Atmosphere</u> : is the air atmospheric standard condition at sea level, at 15°C (59°F) and at 1013.25hPa (29.92inHg).
QFE	<u>Official atmospheric pressure at airport level</u> : it indicates the aircraft absolute altitude with respect to the official airport level.
QNH	<u>Theoretical atmospheric pressure at sea level</u> : is the atmospheric pressure reported at the medium sea level, through the standard air pressure-altitude relationship, starting from the airport QFE.
OAT	<u>Outside Air Temperature</u> is the air static temperature expressed in degrees Celsius (°C).
Ts	<u>Standard Temperature</u> is 15°C at sea level pressure altitude and decreased by 2°C for each 1000 ft of altitude.
H <sub>p</sub>	<u>Pressure Altitude</u> is the altitude read from an altimeter when the barometric subscale has been set to 1013 mb.





---

**Aircraft performance and flight planning terminology**

<i>Crosswind Velocity</i>	is the velocity of the crosswind component for the which adequate control of the airplane during takeoff and landing is assured.
<i>Usable fuel</i>	is the fuel available for flight planning.
<i>Unusable fuel</i>	is the quantity of fuel that cannot be safely used in flight.
<i>G</i>	is the acceleration of gravity.
<i>TOR</i>	is the takeoff distance measured from actual start to wheel liftoff point.
<i>TOD</i>	is total takeoff distance measured from start to 15m obstacle clearing.
<i>GR</i>	is the distance measured during landing from actual touchdown to stop point.
<i>LD</i>	is the distance measured during landing, from 15m obstacle clearing to actual stop.
<i>S/R</i>	is the specific range, that is the distance (in nautical miles) which can be expected at a specific power setting and/or flight configuration per kilogram of fuel used.

**Weight and balance terminology**

<i>Datum</i>	“Reference datum” is an imaginary vertical plane from which all horizontal distances are measured for balance purposes.
<i>Arm</i>	is the horizontal distance of an item measured from the reference datum.
<i>Moment</i>	is the product of the weight of an item multiplied by its arm.
<i>C.G.</i>	<u>Center of Gravity</u> is the point at which the airplane, or equipment, would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the aircraft.
<i>Standard Empty Weight</i>	is the weight of the aircraft with engine fluids and oil at operating levels.
<i>Basic Empty Weight</i>	is the standard empty weight to which it is added the optional equipment weight.
<i>Useful Load</i>	is the difference between maximum takeoff weight and the basic empty weight.
<i>Maximum Takeoff Weight</i>	is the maximum weight approved to perform the takeoff.
<i>Maximum Landing Weight</i>	is the maximum weight approved for the landing touchdown (for <i>P2006T</i> it is equivalent to the Maximum Takeoff Weight).

INTENTIONALLY LEFT BLANK

**14. UNIT CONVERSION CHART**

<i>MULTIPLYING</i>		<i>BY</i> →	<i>YIELDS</i>	
<b>TEMPERATURE</b>				
Fahrenheit	[°F]	$\frac{5}{9} \cdot (F - 32)$	Celsius	[°C]
Celsius	[°C]	$\left(\frac{9}{5} \cdot C\right) + 32$	Fahrenheit	[°F]
<b>FORCES</b>				
Kilograms	[kg]	2.205	Pounds	[lbs]
Pounds	[lbs]	0.4536	Kilograms	[kg]
<b>SPEED</b>				
Meters per second	[m/s]	196.86	Feet per minute	[ft/min]
Feet per minute	[ft/min]	0.00508	Meters per second	[m/s]
Knots	[kts]	1.853	Kilometres / hour	[km/h]
Kilometres / hour	[km/h]	0.5396	Knots	[kts]
<b>PRESSURE</b>				
Atmosphere	[atm]	14.7	Pounds / sq. in	[psi]
Pounds / sq. in	[psi]	0.068	Atmosphere	[atm]
<b>LENGTH</b>				
Kilometres	[km]	0.5396	Nautical miles	[nm]
Nautical miles	[nm]	1.853	Kilometres	[km]
Meters	[m]	3.281	Feet	[ft]
Feet	[ft]	0.3048	Meters	[m]
Centimetres	[cm]	0.3937	Inches	[in]
Inches	[in]	2.540	Centimetres	[cm]
<b>VOLUME</b>				
Litres	[l]	0.2642	U.S. Gallons	[US Gal]
U.S. Gallons	[US Gal]	3.785	Litres	[l]
<b>AREA</b>				
Square meters	[m <sup>2</sup> ]	10.76	Square feet	[sq ft]
Square feet	[sq ft]	0.0929	Square meters	[m <sup>2</sup> ]

**15. LITRES / US GALLONS CONVERSION CHART**

Litres	US Gallons
5	1.3
10	2.6
15	4.0
20	5.3
25	6.6
30	7.9
35	9.2
40	10.6
45	11.9
50	13.2
60	15.9
70	18.5
80	21.1
90	23.8
100	26.4
110	29.1
120	31.7
130	34.3
140	37.7
150	39.6
160	42.3
170	44.9
180	47.6
190	50.2
200	52.8

US Gallons	Litres
1	3.8
2	7.6
3	11.4
4	15.1
6	22.7
8	30.3
10	37.9
12	45.4
14	53.0
16	60.6
18	68.1
20	75.7
22	83.3
24	90.9
26	98.4
28	106.0
30	113.6
32	121.1
34	128.7
36	136.3
38	143.8
40	151.4
45	170.3
50	189.3
55	208.2

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

**SECTION 2 – LIMITATIONS**

**INDEX**

1.	Introduction.....	3
2.	Speed limitations .....	5
3.	Airspeed indicator markings.....	7
4.	Powerplant limitations.....	9
5.	Lubricant .....	10
6.	Coolant liquid .....	10
7.	Propeller.....	10
8.	Governor .....	10
9.	Maximum operating altitude.....	11
10.	Ambient temperature .....	11
11.	Powerplant instruments markings.....	12
12.	Other instruments markings.....	12
13.	Warnings, cautions and advisories lights .....	13
14.	Weights .....	15
15.	Center of gravity range.....	17
16.	Approved maneuvers.....	19
17.	Maneuvers load factor limits.....	19
18.	Flight crew .....	19
19.	Flight conditions .....	20
20.	Fuel .....	20
21.	Limitations placards .....	21
21.1.	Speed limitations.....	21
21.2.	Operating limitations.....	22
21.3.	Inflight engine restart.....	23
21.4.	Baggage compartment capacity .....	23
21.5.	Engine oil level .....	24
21.6.	Fuel type .....	24
21.7.	Landing Gear Hydraulic System .....	25
21.8.	Rear seats.....	26
21.9.	Other placards.....	27
22.	Kinds of Operations Equipment List.....	29



INTENTIONALLY LEFT BLANK

## **1. INTRODUCTION**

Section 2 includes operating limitations, instrument markings and basic placards necessary for safe operation of *P2006T* aircraft, its engines and standard systems and equipment.

This AFM Section is EASA approved.

INTENTIONALLY LEFT BLANK

## 2 SPEED LIMITATIONS

The following table addresses the airspeed limitations and their operational significance:

SPEED		KIAS	KCAS	REMARKS
V <sub>NE</sub>	Never exceed speed	171	172	Do not exceed this speed in any operation.
V <sub>NO</sub>	Maximum Structural Cruising Speed	138	136	Do not exceed this speed except in smooth air, and only with caution.
V <sub>A</sub>	Design Manoeuvring speed	122	119	Do not make full or abrupt control movement above this speed, because under certain conditions the aircraft may be overstressed by full control movement.
V <sub>O</sub>	Operating Manoeuvring speed			
V <sub>LE</sub>	Maximum Landing Gear extended speed	93	93	Do not exceed this speed with the landing gear extended.
V <sub>LO</sub>	Maximum Landing Gear operating speed	93	93	Do not exceed this speed when operating the landing gear.
V <sub>FE</sub>	Maximum flaps extended speed	<i>FULL</i>	93	Do not exceed this speed for indicated flaps setting.
		<i>T.O.</i>	122	
V <sub>MC</sub>	Aircraft minimum control speed with one engine inoperative	62	62	Do not reduce speed below this value in event of one engine inoperative condition.

INTENTIONALLY LEFT BLANK

### 3 AIRSPEED INDICATOR MARKINGS

Airspeed indicator markings and their colour code are explained in the following table.

MARKING	KIAS	EXPLANATION
White arc	54-93	Lower limit is $V_{SO}$ , upper limit is the maximum allowable speed with flaps extended in <i>FULL</i> position.
Red line	62	Minimum aircraft control speed with one engine inoperative and flaps set to T.O.
Green arc	66-138	Normal aircraft operating range (lower limit is $V_{S1}$ , stall speed in "clean" configuration, and upper limit is the maximum structural cruise speed $V_{NO}$ ).
Blue line	84	Best rate-of-climb speed with one engine inoperative at sea level.
Yellow arc	138-171	Speed range where manoeuvres must be conducted with caution and only in smooth air.
Red line	171	Maximum speed for all operations.

INTENTIONALLY LEFT BLANK

**4. POWERPLANT LIMITATIONS**

Following table reports the operating limitations for both engines installed:

**ENGINE MANUFACTURER:** Bombardier Rotax GmbH.

**ENGINE MODEL:** 912 S3

**MAXIMUM POWER:**

	<b>Max Power kW (hp)</b>	<b>Max rpm. Prop. rpm (engine)</b>	<b>Time max. (minutes)</b>
<b>Max. T.O.</b>	73.5 (98.6)	2388 (5800)	5
<b>Max. Cont.</b>	69 (92.5)	2265 (5500)	-

**Temperatures:**

Max CHT*	135° C
Max CT	120° C
Min/Max Oil	50° C / 130° C
Oil normal operating range (approx.)	90° C / 110° C

\* applicable for Engines up to serial no. 4924543(included) and repaired engine which doesn't change the cylinder head n°3 with new one (part no. 413195)

**Oil Pressure:**

Minimum	0.8 Bar / 12psi	(below 1400 rpm prop)
Normal	2 – 5 Bar / 29-73psi	(above 1400 rpm prop)
Maximum	7 Bar / 102 psi	(above 1400 rpm prop)

**Engine starting: allowable temperature range**

OAT Min	-25° C
OAT Max	+50° C



*In event of cold starting operation, it is permitted a maximum oil pressure of 7 bar for a short period.*



**9. COOLING**

Cooling system	Ram-air cooled cylinders, liquid cooled cylinder heads (closed and pressurized circuit)
Coolant liquid	Certified for Water/Coolant mixture. Make reference to "Rotax Operators Manual" – last issue
Overall circuit capacity	1410 cm <sup>3</sup>

**10. WEIGHTS**

See Section 2.

**11. STANDARD WEIGHTS**

Empty Weight: see weighing record on Section 6

**12. SPECIFIC LOADINGS**

	<b>MTOW 1180 kg (2601 lb)</b>	<b>MTOW 1230 kg (2712 lb)</b>
Wing Loading	80 kg/m <sup>2</sup> (16,37 lb/sqft )	83 kg/m <sup>2</sup> (17,1 lb/sqft )
Power Loading	6.0 kg/hp (13,26 lb/hp )	6.28 kg/hp (13,84 lb/hp )

NOTE. Reference is made to both MTOW: 1180 kg and 1230 kg (if Supplement A19 or G10 - Increased MTOW @1230 KG - is applicable).

### 13. ACRONYMS AND TERMINOLOGY

KCAS	<u>Calibrated Airspeed</u> is the indicated airspeed expressed in knots, corrected taking into account the errors related to the instrument itself and its installation.
KIAS	<u>Indicated Airspeed</u> is the speed shown on the airspeed indicator and it is expressed in knots.
KTAS	<u>True Airspeed</u> is the KCAS airspeed corrected taking into account altitude and temperature.
V <sub>A</sub>	<u>Design Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement.
V <sub>FE</sub>	<u>Maximum Flap Extended speed</u> is the highest speed permissible with flaps extended.
V <sub>LO</sub>	<u>Maximum Landing Gear Operating speed</u> is the maximum speed allowed to retract or to extend the landing gear.
V <sub>LE</sub>	<u>Maximum Landing Gear Extended speed</u> is the maximum speed allowed with the landing gear extended.
V <sub>MC</sub>	<u>Minimum control speed</u> : is the minimum speed necessary to ensure an efficient aircraft control in case of one engine inoperative.
V <sub>NO</sub>	<u>Maximum Structural Cruising Speed</u> is the speed that should not be exceeded, except in smooth air and only with caution.
V <sub>NE</sub>	<u>Never Exceed Speed</u> is the speed limit that may not be exceeded at any time.
V <sub>O</sub>	<u>Operating Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement
V <sub>S</sub>	<u>Stall Speed.</u>
V <sub>S0</sub>	<u>Stall Speed in landing configuration</u> (flaps and landing gear extended).
V <sub>S1</sub>	<u>Stall speed in the given flap and landing gear configuration.</u>
V <sub>SSE</sub>	<u>Recommended safe simulated OEI speed</u> is the minimum speed at which simulated OEI training operation should be executed.
V <sub>X</sub>	<u>Best Angle-of-Climb Speed</u> is the speed which allows best ramp climb performances.
V <sub>Y</sub>	<u>Best Rate-of-Climb Speed</u> is the speed which allows the best gain in altitude over a given time.
V <sub>R</sub>	<u>Rotation speed</u> : is the speed at which the aircraft rotates about the pitch axis during takeoff
V <sub>YSE</sub>	<u>Best Rate-of-Climb speed</u> in case of one engine inoperative.



---

**Aircraft performance and flight planning terminology**

<i>Crosswind Velocity</i>	is the velocity of the crosswind component for the which adequate control of the airplane during takeoff and landing is assured.
<i>Usable fuel</i>	is the fuel available for flight planning.
<i>Unusable fuel</i>	is the quantity of fuel that cannot be safely used in flight.
<i>G</i>	is the acceleration of gravity.
<i>TOR</i>	is the takeoff distance measured from actual start to wheel liftoff point.
<i>TOD</i>	is total takeoff distance measured from start to 15m obstacle clearing.
<i>GR</i>	is the distance measured during landing from actual touchdown to stop point.
<i>LD</i>	is the distance measured during landing, from 15m obstacle clearing to actual stop.
<i>S/R</i>	is the specific range, that is the distance (in nautical miles) which can be expected at a specific power setting and/or flight configuration per kilogram of fuel used.

INTENTIONALLY LEFT BLANK

**15. LITRES / US GALLONS CONVERSION CHART**

Litres	US Gallons
5	1.3
10	2.6
15	4.0
20	5.3
25	6.6
30	7.9
35	9.2
40	10.6
45	11.9
50	13.2
60	15.9
70	18.5
80	21.1
90	23.8
100	26.4
110	29.1
120	31.7
130	34.3
140	37.7
150	39.6
160	42.3
170	44.9
180	47.6
190	50.2
200	52.8

US Gallons	Litres
1	3.8
2	7.6
3	11.4
4	15.1
6	22.7
8	30.3
10	37.9
12	45.4
14	53.0
16	60.6
18	68.1
20	75.7
22	83.3
24	90.9
26	98.4
28	106.0
30	113.6
32	121.1
34	128.7
36	136.3
38	143.8
40	151.4
45	170.3
50	189.3
55	208.2

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK



INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

## 9. COOLING

Cooling system	Ram-air cooled cylinders, liquid cooled cylinder heads (closed and pressurized circuit)
Coolant liquid	Certified for Water/Coolant mixture. Make reference to "Rotax Operators Manual" – last issue
Overall circuit capacity	1410 cm <sup>3</sup>

## 10. WEIGHTS

See Section 2.

## 11. STANDARD WEIGHTS

Empty Weight: see weighing record on Section 6

## 12. SPECIFIC LOADINGS

	MTOW 1180 kg (2601 lb)	MTOW 1230 kg (2712 lb)
Wing Loading	80 kg/m <sup>2</sup> (16,37 lb/sqft )	83 kg/m <sup>2</sup> (17,1 lb/sqft )
Power Loading	6.0 kg/hp (13,26 lb/hp )	6.28 kg/hp (13,84 lb/hp )

NOTE. Reference is made to both MTOW: 1180 kg and 1230 kg (if Supplement A19 or G10 - Increased MTOW @1230 KG - is applicable).

## 9. COOLING

Cooling system	Ram-air cooled cylinders, liquid cooled cylinder heads (closed and pressurized circuit)
Coolant liquid	Certified for Water/Coolant mixture. Make reference to "Rotax Operators Manual" – last issue
Overall circuit capacity	1410 cm <sup>3</sup>

## 10. WEIGHTS

See Section 2.

## 11. STANDARD WEIGHTS

Empty Weight: see weighing record on Section 6

## 12. SPECIFIC LOADINGS

	MTOW 1180 kg (2601 lb)	MTOW 1230 kg (2712 lb)
Wing Loading	80 kg/m <sup>2</sup> (16,37 lb/sqft )	83 kg/m <sup>2</sup> (17,1 lb/sqft )
Power Loading	6.0 kg/hp (13,26 lb/hp )	6.28 kg/hp (13,84 lb/hp )

NOTE. Reference is made to both MTOW: 1180 kg and 1230 kg (if Supplement A19 or G10 - Increased MTOW @1230 KG - is applicable).

### 13. ACRONYMS AND TERMINOLOGY

KCAS	<u>Calibrated Airspeed</u> is the indicated airspeed expressed in knots, corrected taking into account the errors related to the instrument itself and its installation.
KIAS	<u>Indicated Airspeed</u> is the speed shown on the airspeed indicator and it is expressed in knots.
KTAS	<u>True Airspeed</u> is the KCAS airspeed corrected taking into account altitude and temperature.
V <sub>A</sub>	<u>Design Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement.
V <sub>FE</sub>	<u>Maximum Flap Extended speed</u> is the highest speed permissible with flaps extended.
V <sub>LO</sub>	<u>Maximum Landing Gear Operating speed</u> is the maximum speed allowed to retract or to extend the landing gear.
V <sub>LE</sub>	<u>Maximum Landing Gear Extended speed</u> is the maximum speed allowed with the landing gear extended.
V <sub>MC</sub>	<u>Minimum control speed</u> : is the minimum speed necessary to ensure an efficient aircraft control in case of one engine inoperative.
V <sub>NO</sub>	<u>Maximum Structural Cruising Speed</u> is the speed that should not be exceeded, except in smooth air and only with caution.
V <sub>NE</sub>	<u>Never Exceed Speed</u> is the speed limit that may not be exceeded at any time.
V <sub>O</sub>	<u>Operating Manoeuvring speed</u> is the speed above the which it is not allowed to make full or abrupt control movement
V <sub>S</sub>	<u>Stall Speed.</u>
V <sub>S0</sub>	<u>Stall Speed in landing configuration</u> (flaps and landing gear extended).
V <sub>S1</sub>	<u>Stall speed in the given flap and landing gear configuration.</u>
V <sub>SSE</sub>	<u>Recommended safe simulated OEI speed</u> is the minimum speed at which simulated OEI training operation should be executed.
V <sub>X</sub>	<u>Best Angle-of-Climb Speed</u> is the speed which allows best ramp climb performances.
V <sub>Y</sub>	<u>Best Rate-of-Climb Speed</u> is the speed which allows the best gain in altitude over a given time.
V <sub>R</sub>	<u>Rotation speed</u> : is the speed at which the aircraft rotates about the pitch axis during takeoff
V <sub>YSE</sub>	<u>Best Rate-of-Climb speed</u> in case of one engine inoperative.



---

## **Aircraft performance and flight planning terminology**

<i>Crosswind Velocity</i>	is the velocity of the crosswind component for the which adequate control of the airplane during takeoff and landing is assured.
<i>Usable fuel</i>	is the fuel available for flight planning.
<i>Unusable fuel</i>	is the quantity of fuel that cannot be safely used in flight.
<i>G</i>	is the acceleration of gravity.
<i>TOR</i>	is the takeoff distance measured from actual start to wheel liftoff point.
<i>TOD</i>	is total takeoff distance measured from start to 15m obstacle clearing.
<i>GR</i>	is the distance measured during landing from actual touchdown to stop point.
<i>LD</i>	is the distance measured during landing, from 15m obstacle clearing to actual stop.
<i>S/R</i>	is the specific range, that is the distance (in nautical miles) which can be expected at a specific power setting and/or flight configuration per kilogram of fuel used.

INTENTIONALLY LEFT BLANK

**15. LITRES / US GALLONS CONVERSION CHART**

Litres	US Gallons
5	1.3
10	2.6
15	4.0
20	5.3
25	6.6
30	7.9
35	9.2
40	10.6
45	11.9
50	13.2
60	15.9
70	18.5
80	21.1
90	23.8
100	26.4
110	29.1
120	31.7
130	34.3
140	37.7
150	39.6
160	42.3
170	44.9
180	47.6
190	50.2
200	52.8

US Gallons	Litres
1	3.8
2	7.6
3	11.4
4	15.1
6	22.7
8	30.3
10	37.9
12	45.4
14	53.0
16	60.6
18	68.1
20	75.7
22	83.3
24	90.9
26	98.4
28	106.0
30	113.6
32	121.1
34	128.7
36	136.3
38	143.8
40	151.4
45	170.3
50	189.3
55	208.2



INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

**Fuel pressure:**

Minimum	2.2 psi (0.15 Bar)
Maximum	5.8 psi (0.40 Bar) or 7.26 psi* (0.5 Bar)

*\*only applicable for fuel pump part no. 893110,893114 or 893115.*

**5. LUBRICANT**

Use only oil with API classification “SG” or higher.

For additional info, refer to “Rotax Operators Manual” – last issue -, “Operating Media” Section.

**6. COOLANT LIQUID**

Refer to “Rotax Operators Manual” – last issue -, “Operating Media” Section.

**7. PROPELLER**

MANUFACTURER:	MT Propeller
MODEL:	MTV-21-A-C-F/CF178-05
TYPE:	wood/composite 2-blade, variable pitch hydraulically controlled and fully featherable
DIAMETER:	1780 mm (no reduction is permitted)

**8. GOVERNOR**

MANUFACTURER:	MT Propeller
MODEL:	P-875-12
OPERATION:	Hydraulically controlled (oil pressure to reduce the pitch)

**Fuel pressure:**

Minimum	2.2 psi (0.15 Bar)
Maximum	5.8 psi (0.40 Bar) or 7.26 psi* (0.5 Bar)

*\*only applicable for fuel pump part no. 893110,893114 or 893115.*

**5. LUBRICANT**

Use only oil with API classification “SG” or higher.

For additional info, refer to “Rotax Operators Manual” – last issue -, “Operating Media” Section.

**6. COOLANT LIQUID**

Refer to “Rotax Operators Manual” – last issue -, “Operating Media” Section.

**7. PROPELLER**

MANUFACTURER:	MT Propeller
MODEL:	MTV-21-A-C-F/CF178-05
TYPE:	wood/composite 2-blade, variable pitch hydraulically controlled and fully featherable
DIAMETER:	1780 mm (no reduction is permitted)

**8. GOVERNOR**

MANUFACTURER:	MT Propeller
MODEL:	P-875-12
OPERATION:	Hydraulically controlled (oil pressure to reduce the pitch)

## **9. MAXIMUM OPERATING ALTITUDE**

Maximum operating altitude is 14000 ft (4260 m) MSL.



**CAUTION**

*Flight crew is required to use supplemental oxygen according to applicable Air Operation Rules.*

## **10. AMBIENT TEMPERATURE**

Ambient temperature: from -25°C to +50°C.



**WARNING**

*Flight in expected and/or known icing conditions is forbidden.*



## 11. POWERPLANT INSTRUMENTS MARKINGS

Powerplant instrument markings and their colour code significance are shown below:

INSTRUMENT		RED LINE Minimum limit	GREEN ARC Normal operating	YELLOW ARC Caution	RED LINE Maximum limit
Propeller	rpm	----	580 - 2265	2265 - 2388	2388
Oil temp.	°C	50	90 - 110	50 - 90 110-130	130
			50 - 130 <sup>(1)</sup>	---- <sup>(2)</sup>	
CT	°C	----	50 - 120	----	120
CHT <sup>(3)</sup>	°C	----	50 - 135	----	135
Oil pressure	bar	0.8	2 - 5	0.8 - 2 5 - 7 <sup>(4)</sup>	7
Fuel press.	psi	2.2	2.2 - 5.8 or 7.2 <sup>(5)</sup>	----	5.8 or 7.2 <sup>(3)</sup>
Fuel Q.ty	litres	0 <sup>(6)</sup>	----	----	----

## 12. OTHER INSTRUMENTS MARKINGS

INSTRUMENT	RED LINE Minimum limit	GREEN ARC Normal operating	YELLOW ARC Caution	RED LINE Maximum limit
Voltmeter	10,5 Volt	12 - 14 Volt	----	----

If MOD2006/212 is embodied, markings are unchanged so refer to the basic AFM for information.

- 1 Applicable for aircraft with MOD2006/280 embodied.
- 2 Applicable for aircraft with MOD2006/280 embodied.
- 3 Applicable for Engines up to serial no. 4924543(included) and repaired engine which doesn't change the cylinder head n°3 with new one (part no. 413195).
- 4 In event of cold starting operation, it is permitted a maximum oil pressure of 7 bar for a short period.
- 5 Only applicable for fuel pump part no. 893110,893114 or 893115.
- 6 "0" indication shows the unusable fuel quantity (2,8 litres for each fuel tank).

### 13. WARNINGS, CAUTIONS AND ADVISORIES LIGHTS

Following table addresses the warning, caution and advisory lights installed (unless differently specified) on the annunciator panel:

<b>Warnings (RED)</b>	<b>Cause</b>
LH OVERVOLT	LH electric system overvoltage
RH OVERVOLT	RH electric system overvoltage
MAIN DOOR OPEN ALERT	Main door open and/or unlocked
REAR DOOR OPEN ALERT	Rear door open and/or unlocked
LH LOW COOLANT	Left engine - coolant liquid low level
RH LOW COOLANT	Right engine - coolant liquid low level
LH ENGINE FIRE	Left engine compartment: fire detected
RH ENGINE FIRE	Right engine compartment: fire detected
LG TRANSITION (warning light installed near the landing gear control lever)	One or more legs are in transition phase and/or the selected retracted/extended position is not yet reached.
<b>Cautions (Amber)</b>	<b>Cause</b>
LH GENERATOR	LH generator failure
RH GENERATOR	RH generator failure
EXT POWER	External electrical supply connected
PITOT HEAT	Pitot heating system failure/not activated
GEAR PUMP ON	LG pump electrically supplied
<b>Advisories (Green)</b>	<b>Indication</b>
LH FUEL PUMP	Left engine - electrical fuel pump ON
RH FUEL PUMP	Right engine - electrical fuel pump ON
PITOT HEAT	Pitot heating system ON
LG Down & Locked (3 advisory lights, one for each leg, installed near the landing gear control lever)	Landing gear extended and locked

INTENTIONALLY LEFT BLANK

**14 WEIGHTS**

Condition	Weight	
	Maximum takeoff weight	1230 kg
Maximum landing weight	1230 kg	2712 lb
Maximum zero wing fuel weight	1195 kg	2635 lb

**NOTE** Refer to Para. 21.4 of this AFM Section for baggage loading limitations.

INTENTIONALLY LEFT BLANK

**15. CENTER OF GRAVITY RANGE**

Datum	Vertical plane tangent to the wing leading edge (the aircraft must be levelled in the longitudinal plane)
Levelling	Refer to the seat track supporting beams (see procedure in Section 6)
Forward limit	0.221 m (16.5% MAC) aft of datum for all weights
Aft limit	0.415 m (31% MAC) aft of datum for all weights



*The pilot is responsible for ensuring that the airplane is properly loaded. Refer to Section 6 for appropriate instructions.*

INTENTIONALLY LEFT BLANK

## 16. APPROVED MANEUVERS

The aircraft is certified in normal category in accordance with EASA CS-23 regulation.

Non aerobatic operations include:

- Any manoeuvre pertaining to “normal” flight
- Stalls (except whip stalls)
- Lazy eights
- Turns in which the angle of bank is not more than 60°
- Chandelle



*Acrobatic manoeuvres, including spins and turns with angle of bank of more than 60°, are not approved for such a category. In addition, stall with one engine inoperative is forbidden.*



*Limit load factor could be exceeded by moving flight controls to maximum deflection at a speed above  $V_A=V_O$  (118 KIAS, Manoeuvring Speed).*

## 17. MANEUVERS LOAD FACTOR LIMITS

Maneuver load factors limits are as follows:

<b>Positive</b>	<b>Negative</b>
<b>+ 3.8 g</b>	<b>- 1.78 g</b>

Maneuver load factors limits with flaps extended are as follows:

<b>Positive</b>	<b>Negative</b>
<b>+ 2 g</b>	<b>0 g</b>

## 18. FLIGHT CREW

Minimum crew:	1 pilot
Maximum number of occupants:	4 people (including the pilot)



## 19. FLIGHT CONDITIONS

The aircraft can be equipped for following flight operations (make reference to Para. 22 concerning the equipment list required on board to allow them):

- VFR Day and Night
- IFR Day and Night including IMC



*Flight in expected and/or known icing conditions, in proximity of storms or severe turbulence is forbidden.*



*Additional equipment can be required to fulfil national or specific operational requirements. The owner is responsible for fulfilling these requirements.*



*Equipment list is addressed in Section 6.*

## 20. FUEL

<b>2 TANKS:</b>	100 litres each one (26,42 US gallons)
<b>MAXIMUM CAPACITY:</b>	200 litres (52,8 US gallons)
<b>MAXIMUM USABLE FUEL:</b>	194.4 litres (51,35 US gallons)
<b>APPROVED FUEL:</b>	MOGAS ASTM D4814
	MOGAS EN 228 Super/Super plus (min. RON 95)
	AVGAS 100 LL (ASTM D910)




*Prolonged use of Aviation Fuel Avgas 100LL results in greater wear of valve seats and greater combustion deposits inside cylinders due to higher lead content. It is therefore suggested to avoid using this type of fuel unless strictly necessary. Make reference to Rotax Maintenance Manual which prescribes dedicated checks due to the prolonged use of Avgas.*

## **21. LIMITATIONS PLACARDS**

Hereinafter the placards, related to the operating limitations and installed on *P2006T*, are reported.

### **21.1 SPEED LIMITATIONS**

On the left side instrument panel, above on the left, it is placed the following placard reporting the speed limitations:

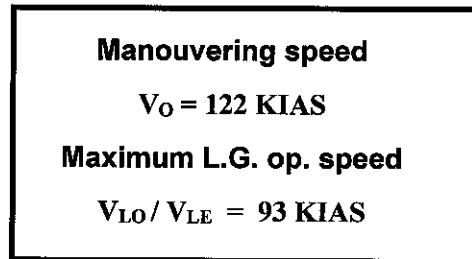

Speed limitations placard for MTOW @1230 kg (2712 lb)


## 21.2 OPERATING LIMITATIONS

On the instrument panel, it is placed the following placard reminding the observance of aircraft operating limitations; make reference to Para. 22 for the list of equipment required on board to allow flight operations in VFR Day, VFR Night, IFR Day and IFR Night conditions.

**This A/C can be operated only in normal category DAY-NIGHT-VFR-IFR (with required equipment) in non-icing conditions. All aerobatics manoeuvres including spinning are prohibited. For operational limitations refer to FLIGHT MANUAL**

**21.3. INFLIGHT ENGINE RESTART**


The inflight engine restart procedure is reported on a placard (shown below) installed on the central console.

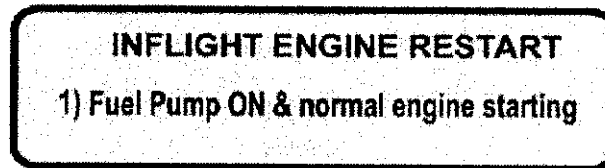

**21.4. BAGGAGE COMPARTMENT CAPACITY**


The placard shown below, and installed on the baggage compartment (vertical panel), concerns the baggage compartment load limitations herein reported:

- Maximum allowable load: 80kg/176lb
- Maximum intensity of loading: 0.9 kg/dm<sup>2</sup> – 19 lbs/sqft

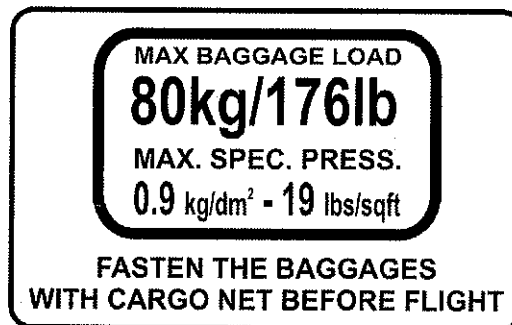

**21.5. ENGINE OIL LEVEL**


On the engine nacelle, in correspondence of the engine oil reservoir access door, it is located the following placard addressing the limitations concerning the oil level, the oil volume and the oil type.

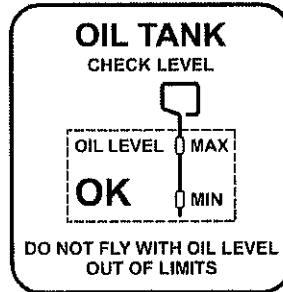


**USE ONLY OIL WITH API  
CLASSIFICATION SG OR HIGHER**

**21.6. FUEL TYPE**

In correspondence of each fuel tank filler cap, it is located the following placard reporting the approved fuel type and the tank usable fuel.

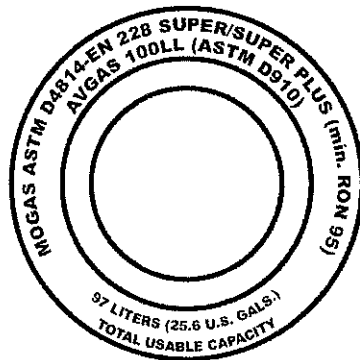

OR

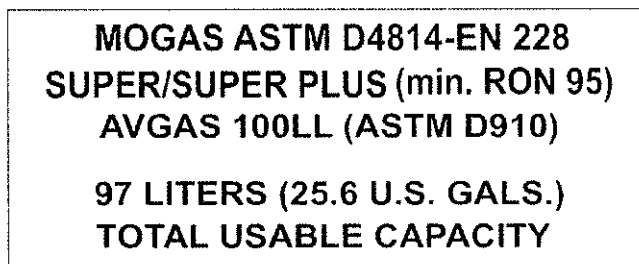

## **21.7. LANDING GEAR HYDRAULIC SYSTEM**

The placard shown below, and located on the tail cone, concerns the allowed low pressure limit for the landing gear emergency accumulator.

The low pressure limit is **20 bar**.

If during pre-flight inspection the value is below **20 bar**, the system must be re-charged by means of the override button (see Section 7, Para. 9).

**EMERGENCY OIL TANK PRESS**

**LOW PRESSURE LIMIT**

**20 BAR**







**21.8. REAR SEATS**

During Taxi, Take OFF, Landing (including Emergency Landing), both rear seats must be kept in the lowest and full aft position.

The following placard is located aside both rear seats.

<b>Rear seats must be kept in lowest and full aft position during Taxi, Take Off, Landing and Emergency Landing</b>
---

**21.9. OTHER PLACARDS**

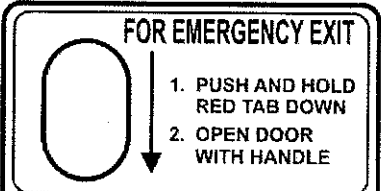Description	Placard	Place
Smoking ban		Instruments panel, right side
Ditching emergency exit: opening instructions		Ditching emergency exit handle: internal side
Ditching emergency exit: opening instructions		Ditching emergency exit handle: external side
Door locking system: bypass instructions		Main door and emergency exit: external side
Door locking system: bypass instructions		Main door and emergency exit: internal side
Main door: exit instructions		Main door, internal side
Emergency exit label	<p><b>EMERGENCY EXIT</b></p>	Emergency exit: internal and external side



INTENTIONALLY LEFT BLANK

## **22. KINDS OF OPERATIONS EQUIPMENT LIST**







This paragraph reports the KOEL table, concerning the equipment list required on board under CS-23 regulations to allow flight operations in VFR Day, VFR Night, IFR Day and IFR Night conditions.

Flight in VFR Day and Night, IFR Day and Night is permitted only if the prescribed equipment is installed and operational.

Additional equipment, or a different equipment list, for the intended operation may be required by national operational requirements and also depends on the airspace classification and route to be flown.

Equipment	VFR Day	VFR Night	IFR Day	IFR Night
Magnetic compass	•	•	•	•
Airspeed indicator	•	•	•	•
Altimeter	•	•	•	•
Vertical speed indicator	•	•	•	•
Attitude indicator (electric)	•	•	•	•
Turn coordinator	•	•	•	•
OAT indicator	•	•	•	•
Pitot heating system	•	•	•	•
Directional Gyro (electric)	•	•	•	•
Clock	•	•	•	•
Breakers panels	•	•	•	•
First Aid kit	•	•	•	•
Fire extinguisher	•	•	•	•
Fire detectors (2)	•	•	•	•
Instruments lights	•	•	•	•
Position lights	•	•	•	•
Landing light	•	•	•	•
Taxi light	•	•	•	•
Strobe lights	•	•	•	•
Torch	•	•	•	•
Cabin light	•	•	•	•
Cockpit lights	•	•	•	•
Emergency light	•	•	•	•
Volt-Ammeter	•	•	•	•
COMM/NAV/GPS equipment	•	•	•	•
VOR/LOC/GS/GPS CDI	•	•	•	•
LG position and transition lights	•	•	•	•
Transponder	•	•	•	•
Audio Panel/Marker beacon	•	•	•	•
Altitude encoder	•	•	•	•
ELT	•	•	•	•
Alternate static source	•	•	•	•
MAP indicator (dual)	•	•	•	•
RPM indicator (2)	•	•	•	•
Oil pressure indicator (2)	•	•	•	•
Oil temperature indicator (2)	•	•	•	•
CHT (2)	•	•	•	•
Fuel pressure indicator (2)	•	•	•	•
Fuel quantity indicator (2)	•	•	•	•
Longitudinal trim indicator	•	•	•	•
Rudder trim indicator	•	•	•	•
Flaps position indicator	•	•	•	•
Stall warning system	•	•	•	•
Annunciator panel	•	•	•	•
2 <sup>nd</sup> VHF COMM/NAV equipment		•	•	•
2 <sup>nd</sup> VOR/LOC/GS CDI			•	•
DME			•	•
ADF			•	•
2 <sup>nd</sup> Airspeed indicator			•	•
2 <sup>nd</sup> Attitude indicator (electric)			•	•
2 <sup>nd</sup> Altimeter			•	•
	<b>VFR Day</b>	<b>VFR Night</b>	<b>IFR Day</b>	<b>IFR Night</b>

**21.9. OTHER PLACARDS**

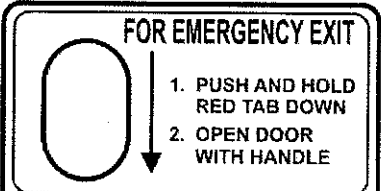Description	Placard	Place
Smoking ban		Instruments panel, right side
Ditching emergency exit: opening instructions		Ditching emergency exit handle: internal side
Ditching emergency exit: opening instructions		Ditching emergency exit handle: external side
Door locking system: bypass instructions		Main door and emergency exit: external side
Door locking system: bypass instructions		Main door and emergency exit: internal side
Main door: exit instructions		Main door, internal side
Emergency exit label	<p><b>EMERGENCY EXIT</b></p>	Emergency exit: internal and external side

## **22. KINDS OF OPERATIONS EQUIPMENT LIST**

This paragraph reports the KOEL table, concerning the equipment list required on board under CS-23 regulations to allow flight operations in VFR Day, VFR Night, IFR Day and IFR Night conditions.

Flight in VFR Day and Night, IFR Day and Night is permitted only if the prescribed equipment is installed and operational.

Additional equipment, or a different equipment list, for the intended operation may be required by national operational requirements and also depends on the airspace classification and route to be flown.

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK



**SECTION 3 – EMERGENCY PROCEDURES**

**INDEX**

<b>1. Introduction .....</b>	<b>3</b>
<b>1.1. Engine failure during takeoff run .....</b>	<b>3</b>
<b>2. Airplane alerts .....</b>	<b>5</b>
<b>2.1. Single generator failure / overvoltage .....</b>	<b>5</b>
<b>2.2. Both generators failure .....</b>	<b>6</b>
<b>2.3. Both generators overvoltage .....</b>	<b>7</b>
<b>2.4. Failed door closure .....</b>	<b>8</b>
<b>2.5. Pitot heating system failure.....</b>	<b>9</b>
<b>2.6. Coolant liquid low level.....</b>	<b>10</b>
<b>2.7. Gear Pump failure .....</b>	<b>11</b>
<b>2.8. Engine fire .....</b>	<b>12</b>
<b>3. Engine securing .....</b>	<b>13</b>
<b>4. Powerplant emergencies .....</b>	<b>14</b>
<b>4.1. Propeller overspeeding .....</b>	<b>14</b>
<b>4.2. CHT/CT limit exceedance .....</b>	<b>14</b>
<b>4.3. Oil temperature limit exceedance .....</b>	<b>15</b>
<b>4.4. Oil pressure limits exceedance .....</b>	<b>16</b>
<b>4.5. Low fuel pressure.....</b>	<b>17</b>
<b>5. Other emergencies .....</b>	<b>18</b>
<b>5.1. Emergency descent .....</b>	<b>18</b>
<b>5.2. Total electrical failure .....</b>	<b>18</b>
<b>5.3. Static ports failure .....</b>	<b>19</b>
<b>5.4. Unintentional flight into icing conditions .....</b>	<b>20</b>
<b>5.5. Carburettor icing .....</b>	<b>21</b>
<b>5.6. Flaps control failure .....</b>	<b>22</b>
<b>5.7. Electrical pitch trim control failure .....</b>	<b>22</b>
<b>6. One engine inoperative procedures .....</b>	<b>23</b>
<b>6.1 Characteristic airspeeds with one engine inoperative .....</b>	<b>24</b>
<b>6.2 Inflight engine restart .....</b>	<b>25</b>
<b>6.3 Engine failure during takeoff run .....</b>	<b>26</b>
<b>6.4 Engine failure during climb .....</b>	<b>28</b>
<b>6.5. Engine failure in flight.....</b>	<b>29</b>
<b>6.6. One engine inoperative landing .....</b>	<b>30</b>
<b>7. Landing gear failures.....</b>	<b>32</b>
<b>7.1. Emergency landing gear extension .....</b>	<b>32</b>

---

<b>7.2. Complete Gear up or nose gear up landing .....</b>	<b>33</b>
<b>7.3. Partial Main LG extension.....</b>	<b>34</b>
<b>7.4. Failed retraction.....</b>	<b>36</b>
<b>7.5. Unintentional landing gear extension .....</b>	<b>36</b>
<b>8. Smoke and fire occurrence.....</b>	<b>38</b>
<b>8.1 Engine fire on the ground.....</b>	<b>38</b>
<b>8.2 Engine fire during takeoff run .....</b>	<b>39</b>
<b>8.3 Engine fire in flight.....</b>	<b>41</b>
<b>8.4 Electrical smoke in cabin on the ground .....</b>	<b>41</b>
<b>8.5 Electrical smoke in cabin during flight.....</b>	<b>42</b>
<b>9. Unintentional spin recovery.....</b>	<b>44</b>
<b>10. Landing emergencies .....</b>	<b>46</b>
<b>10.1 Landing without engine power .....</b>	<b>46</b>
<b>10.2 Landing with Nose landing gear tire deflated .....</b>	<b>48</b>
<b>10.3 Landing with a known main landing gear tire deflated .....</b>	<b>49</b>
<b>10.4 Landing without brakes .....</b>	<b>50</b>
<b>11. Aircraft evacuation.....</b>	<b>51</b>
<b>12. Ditching.....</b>	<b>52</b>

**1. INTRODUCTION**

Section 3 includes checklists and detailed procedures for coping with various types of emergency conditions that could arise after a system failure.

Before operating the aircraft, the pilot should become thoroughly familiar with this manual and, in particular, with this Section. Further on a continued and appropriate training and self-study should be done.

Emergency procedures associated with those optional systems and equipment which require handbook supplements are provided in separate Supplements.

Two types of emergency procedures are hereby given.

- a. "BOLD FACES" which must be known by heart by the pilot and executed, in the correct and complete sequence, immediately after the failure is detected and confirmed.

These procedures characters are boxed and highlighted:

**1.1. ENGINE FAILURE DURING TAKEOFF RUN**

<b><u>BEFORE ROTATION: ABORT TAKE OFF</u></b>	
1. <b>Throttle Lever</b>	<b>BOTH IDLE</b>
2. <b>Rudder</b>	<b>Keep heading control</b>
3. --	
4. --	

- b. "other procedures" which should be well theoretically known and mastered, but that can be executed entering and following step by step the AFM current section appropriate checklist.

*In any case, as a failure or abnormal behaviour is detected pilots should act as follows:*

- 1. *Keep self-control and maintain aircraft flight attitude and parameters*
- 2. *Analyse the situation identifying, if required, the area for a possible emergency landing*
- 3. *Apply the pertinent procedure*
- 4. *Inform the Air Traffic Control as applicable*



*For the safe conduct of later flights, any anomaly and/or failure must be communicated to the National Authorities in charge, in order to put the aircraft in a fully operational and safe condition.*

**NOTE**

*In this Chapter, following definitions apply:*

***Land as soon as possible:*** land without delay at the nearest suitable area at which a safe approach and landing is assured.


***Land as soon as practical:*** land at the nearest approved landing area where suitable repairs can be made.

**2. AIRPLANE ALERTS**

The annunciator panel, located on the left side instrument panel, contains 16 lights for warnings, cautions and advisories. The colours are as follows:

- GREEN:** to indicate that pertinent device is turned ON
- AMBER:** to indicate no-hazard situations which have to be considered and which require a proper crew action
- RED:** to indicate emergency conditions

**2.1. SINGLE GENERATOR FAILURE / OVERVOLTAGE**

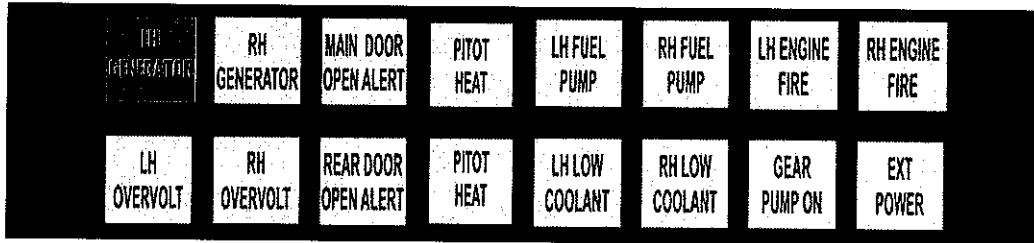

In event of LH or RH GENERATOR caution light turned ON, apply following procedure:

1. FIELD LH (or RH) OFF
2. FIELD LH (or RH) ON

**If the LH (or RH) GENERATOR caution stays displayed**

3. FIELD LH (or RH) OFF
4. Avionic LH OFF
5. ADF OFF



*Switching OFF avionic LH and ADF will permit to shed non essential electrical power.*

*The battery and a single generator are able to supply the electrical power necessary for flight, but redundancy is lost.*

**If conditions permit:**



*Switching CROSS BUS OFF will further reduce alternator load; the decision mainly depends on weather conditions.*


6. CROSS BUS LH (or RH) OFF

Equipment will be lost accordingly to the following table:

LH Gen Bus	LH Avionic Bus	RH Avionic Bus	RH Gen Bus
Pitot Heat	DME	ADF	NAV Lights
Landing Light	Transponder	COM 2	Rudder Trim
Taxi Light	Encoder Altimeter	NAV 2	Stall Warning
		A/P	RH attitude indicator
		A/P Pitch Trim	

7. Land as soon as practicable

**2.2. BOTH GENERATORS FAILURE**

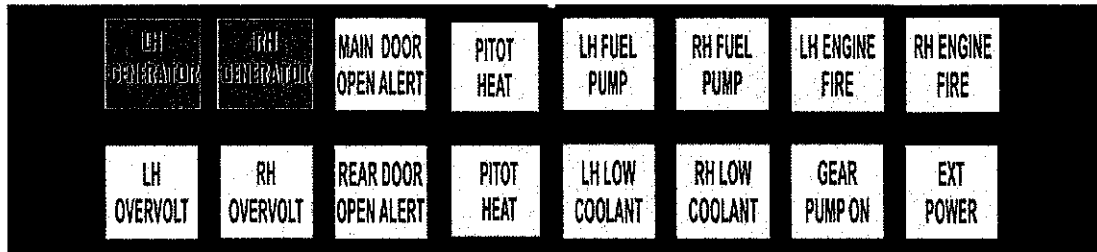

In event of both LH and RH GENERATOR caution lights turned ON:

1. FIELD LH and RH *BOTH OFF*
2. FIELD LH and RH *BOTH ON*

**If the LH (or RH) GENERATOR caution stays displayed**

3. Verify good ammeter indications on restored alternator
4. Refer to Single generator failure / overvoltage drill (Para 2.1)

**If both LH and RH GENERATOR cautions stay displayed**

3. FIELD LH and RH *BOTH OFF*
4. CROSS BUS LH and RH *BOTH OFF*

**If engine starting battery modification is applied**

5. EMERG BATT switch ON
6. Land as soon as practical.

**If engine starting battery modification is not applied**

5. Land as soon as possible.


Equipment will be lost accordingly to the following table:

LH Gen Bus	LH Avionic Bus	RH Avionic Bus	RH Gen Bus
Pitot Heat	DME	ADF	NAV Lights
Landing Light	Transponder	COM 2	Rudder Trim
Taxi Light	Encoder Altimeter	NAV 2	Stall Warning
		A/P	RH attitude indicator
		A/P Pitch Trim	

**NOTE**

*The battery alone can supply electrical power for at least 30 minutes.*

**2.3. BOTH GENERATORS OVERVOLTAGE**

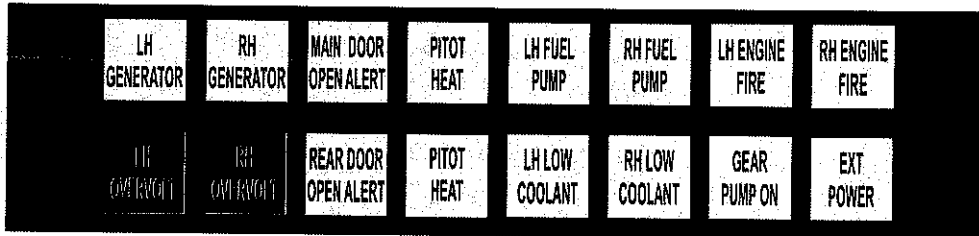

In event of both LH and RH OVERVOLT warning lights turned ON:

- 1. FIELD LH and RH *BOTH OFF*
- 2. FIELD LH and RH *BOTH ON*

**If the LH (or RH) GENERATOR caution stays displayed**

- 3. Verify good ammeter indications on restored alternator
- 4. Refer to Single generator failure / overvoltage drill (Para 2.1)

**If both LH and RH OVERVOLT warning stay displayed**

- 3. CROSS BUS LH and RH *BOTH OFF*
- 4. FIELD LH and RH *BOTH OFF*
- 5. FIELD LH and RH *BOTH ON*

**If LH (or RH) OVERVOLT warning stays displayed**

- 6. Verify good ammeter indications on restored alternator
- 7. Switch CROSS BUS on the restored alternator side
- 8. Refer to Single generator failure / overvoltage drill (Para 2.1)

**If both LH and RH OVERVOLT warning stay displayed**

- 6. FIELD LH and RH *BOTH OFF*

**If engine starting battery modification is applied**

- 7. EMERG BATT switch *ON*

LH Gen Bus	LH Avionic Bus	RH Avionic Bus	RH Gen Bus
Pitot Heat	DME	ADF	NAV Lights
Landing Light	Transponder	COM 2	Rudder Trim
Taxi Light	Encoder Altimeter	NAV 2	Stall Warning
		A/P	RH attitude indicator
		A/P Pitch Trim	

- 8. Land as soon as practical.

**If engine starting battery modification is not applied**


- 7. Land as soon as possible.

Equipment will be lost accordingly to the following table:



*The battery alone can supply electrical power for at least 30 minutes.*

**2.4. FAILED DOOR CLOSURE**

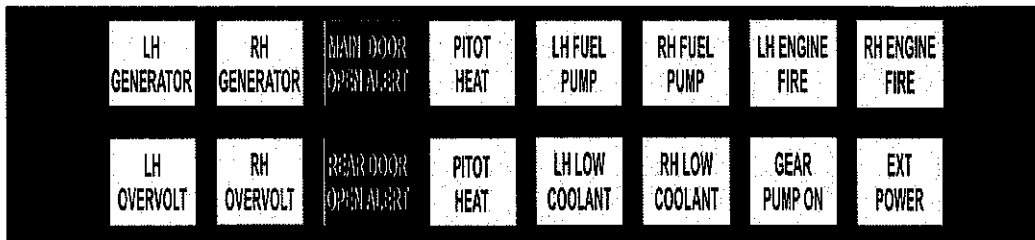

In case of door opening / unlocking, related MAIN or REAR DOOR ALERT warning light turns ON.

**ON THE GROUND**

1. Passengers and crew seat belts *Fasten and tighten*
2. Affected door *Verify correctly closed*

**If door is open**

3. Relevant engine *Shut down*
4. Affected door *Close and check*

**If door is closed**

3. Locking device *Check*

**If down in unlocked position**

4. Abort mission.

**IN FLIGHT**


1. Passengers and crew seat belts *Fasten and tighten*
2. Affected door and locked device *Verify correctly closed*

**If door is open or locking device is unlocked**

3. Land as soon as possible



**2.5. PITOT HEATING SYSTEM FAILURE**

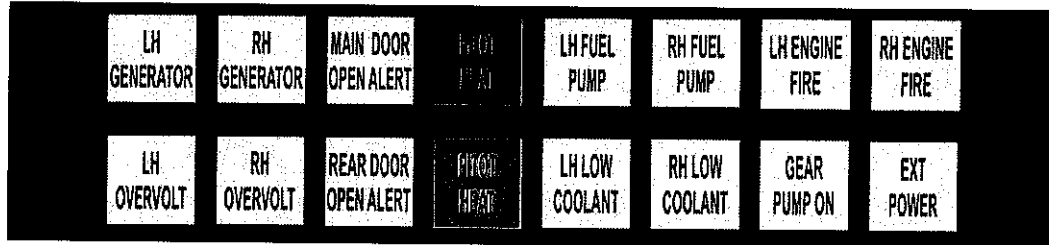

When the Pitot Heating system is activated, the green PITOT HEAT advisory light is turned ON.

If the amber PITOT HEAT caution light turns OFF, then the Pitot Heating system is functioning properly. Anytime the amber PITOT HEAT caution light is ON at the same time the green PITOT HEAT light is ON, then the Pitot Heating system is not functioning properly.

1. Pitot heat switch *OFF*
2. Verify Pitot Heating circuit breaker is IN
3. Pitot heat switch *ON*
4. Check PITOT HEAT caution light:

If the amber light stays ON, assume a failure in the pitot heating system. Avoid visible moisture and OATs below 10 deg C.

**2.6. COOLANT LIQUID LOW LEVEL**

LH GENERATOR	RH GENERATOR	MAIN DOOR OPEN ALERT	PITOT HEAT	LH FUEL PUMP	RH FUEL PUMP	LH ENGINE FIRE	RH ENGINE FIRE
LH OVERVOLT	RH OVERVOLT	REAR DOOR OPEN ALERT	PITOT HEAT	LH LOW COOLANT	RH LOW COOLANT	GEAR PUMP ON	EXT POWER

When the engine coolant liquid level goes under the lower limit, the related LH or RH LOW COOLANT is turned ON. This condition may lead to high CHT/CT. When the warning light turns ON, apply following procedure:

1. Check affected engine CHT/CT

**If CHT is above 135°C or CT is above 120°C**

2. Affected engine *Reduce power setting to reduce CHT/CT up to the minimum practical*
3. Land as soon as practical

**If CHT/CT continues to rise and engine shows roughness or power loss**

4. Affected engine *SECURE (see engine securing procedure on Para. 3)*
5. Land as soon as possible applying one engine inoperative landing procedure. See Para. 6.6

**2.7. GEAR PUMP FAILURE**

LH GENERATOR	RH GENERATOR	MAIN DOOR OPEN ALERT	PITOT HEAT	LH FUEL PUMP	RH FUEL PUMP	LH ENGINE FIRE	RH ENGINE FIRE
LH OVERVOLT	RH OVERVOLT	REAR DOOR OPEN ALERT	PITOT HEAT	LH LOW COOLANT	RH LOW COOLANT	<b>GEAR PUMP ON</b>	EXT POWER

The GEAR PUMP ON caution light turns ON when the landing gear hydraulic pump is electrically supplied.

After the landing gear retraction, if the red TRANS light turns OFF and the GEAR PUMP ON caution stays turned ON, this could indicate a gear pump relay failure to ON.

**If TRANS light is OFF**

1. Continue the mission monitoring the caution light.


**If TRANS light is ON**

2. Landing gear is not locked in UP position

**NOTE**

*The electrical gear pump, continuously supplied, causes a current absorption which does not affect the mission unless this failure is coupled with the overall electrical failure. In this case, the residual battery endurance may be consistently lower than 30 minutes.*

**2.8. ENGINE FIRE**

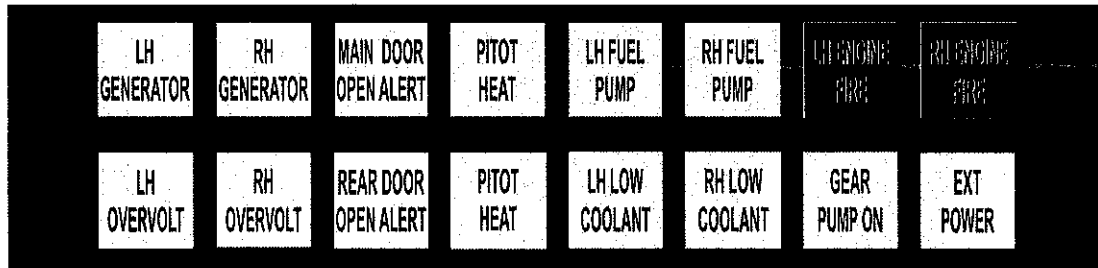

In event of engine fire, LH or RH ENGINE FIRE warning light will turn ON. Refer to following procedures:

FIRE ON THE GROUND:  
 FIRE DURING TAKEOFF RUN:  
 FIRE IN FLIGHT:

see Para. 8.1  
 see Para. 8.2  
 see Para. 8.3

### **3. ENGINE SECURING**

Following procedure is applicable to shut-down one engine in flight:

- |                         |                 |
|-------------------------|-----------------|
| 1. Throttle Lever       | <i>IDLE</i>     |
| 2. Ignition             | <i>BOTH OFF</i> |
| 3. Propeller Lever      | <i>FEATHER</i>  |
| 4. Fuel Selector        | <i>OFF</i>      |
| 5. Electrical fuel pump | <i>OFF</i>      |

After securing engine(s), after analysing situation, refer immediately to following procedures:

ENGINE FAILURE IN FLIGHT: see Para. 6.5

SINGLE GENERATOR FAILURE: see Para. 2.1

or BOTH GENERATOR FAILURE: see Para. 2.2

INFLIGHT ENGINE RESTART: see Para. 6.2

ONE ENGINE INOPERATIVE LANDING: see Para. 6.6

or LANDING WITHOUT ENGINE POWER: see Para. 10.1

## 4. POWERPLANT EMERGENCIES

### 4.1. PROPELLER OVERSPEEDING

The aircraft is fitted with propeller/governor set by MT-Propeller such a way that the maximum propeller rpm exceedance is prevented. In case of propeller overspeeding in flight, apply following procedure:

- |                    |   |
|--------------------|---|
| 1. Throttle Lever  | <i>REDUCE power to minimum practical</i>              |
| 2. Propeller Lever | <i>REDUCE as practical (<u>not in feathering</u>)</i> |
| 3. RPM indicator   | <i>CHECK</i>  |

If it is not possible to decrease propeller rpm, apply *engine securing procedure* (see Para. 3) and **land as soon as possible** applying *one engine inoperative landing procedure* (See Para. 6.6).



*Maximum propeller rpm exceedance may cause engine components damage. Propeller and engine shall be inspected in accordance with related Operators Manuals.*

### 4.2. CHT/CT LIMIT EXCEEDANCE

If CHT/CT exceeds its limit, apply following procedure:

1. Check affected engine CHT/CT
 

**If CHT is above 135°C or CT is above 120°C**
2. Affected engine *Reduce power setting to reduce CHT/CT up to the minimum practical*
3. **Land as soon as practical**

**If CHT/CT continues to rise and engine shows roughness or power loss**

4. Affected engine *SECURE (see engine securing procedure on Para. 3)*
5. **Land as soon as possible** applying *one engine inoperative landing procedure*. See Para. 6.6

**4.3. OIL TEMPERATURE LIMIT EXCEEDANCE**

If oil temperature exceeds maximum limit (130°C):

1. OIL PRESS                      *CHECK*

**If oil pressure is within limits**

2. Affected engine              *Reduce power setting to minimum applicable*
3. Affected engine              *Keep propeller speed higher than 2000 RPM*

**If oil temperature does not decrease**

4. Airspeed                              *INCREASE*

*If oil temperature does not come back within limits, the thermostatic valve, regulating the oil flow to the heat exchangers, could be damaged or an oil leakage can be present in the oil supply line.*



5. **Land as soon as practical** keeping the affected engine to the minimum necessary power
6. Monitor OIL PRESS and CHT/CT

**if engine roughness / vibrations or erratic behaviour is detected:**

7. Affected engine                      *SECURE (see engine securing procedure on Para. 3)*
8. **Land as soon as possible** applying one engine inoperative landing procedure. See Para. 6.6



*Excessive oil pressure drop leads to a high pitch propeller configuration with consequent propeller feathering and engine stopping.*

**4.4. OIL PRESSURE LIMITS EXCEEDANCE**

If oil pressure exceeds its lower or upper limit (0.8 – 7 bar), apply following procedure:



*Excessive oil pressure drop leads to a high pitch propeller configuration with consequent propeller feathering and engine stopping.*



*An excessive oil pressure value can be counteracted by decreasing propeller rpm.*

1. OIL PRESS *CHECK*

**If oil pressure exceeds upper limit (7 bar)**

2. Throttle Lever *first REDUCE affected engine power by 10%*
3. Propeller Lever *Keep low rpm*
4. OIL PRESS *CHECK (verify if within limits)*
5. **Land as soon as practical**

**If oil pressure is under the lower limit (0.8 bar)**

2. **Land as soon as practical**

**If oil pressure is continuously decreasing**

3. Affected engine *SECURE (see engine securing procedure Para. 3)*
4. **Land as soon as possible** applying one engine inoperative landing procedure.  
See Para. 6.6



**4.5. LOW FUEL PRESSURE**

If fuel pressure decreases below the lower limit (2.2 psi), apply following procedure:

1. Fuel press *CHECK*
2. Fuel quantity *CHECK*
3. Fuel consumption *MONITOR*

**If a fuel leakage is deemed likely**

4. Land as soon as possible.

**If a fuel leakage can be excluded:**

4. Electrical fuel pump *ON*
5. Feed the affected engine by means of opposite side fuel tank

**If pressure does not come back within the limits**

6. Land as soon as practical

**5. OTHER EMERGENCIES**

**5.1. EMERGENCY DESCENT**



CAUTION

*Descent with airspeed at VLE, idle power and gear down will provide high descent rates and pitch attitudes up to -15°.*

*Anticipate altitude capture and return to level flight during emergency descent in order to assure a safe and smooth recovery from maneuver.*

- |                 |               |
|-----------------|---------------|
| 1. Power levers | IDLE          |
| 2. Flaps        | UP            |
| 3. IAS          | below VLO/VLE |
| 4. Landing gear | DOWN          |
| 5. Airspeed     | Up to VLO/VLE |

**5.2. TOTAL ELECTRICAL FAILURE**

In case of electrical system overall failure, apply following procedure:

- |                                      |                 |
|--------------------------------------|-----------------|
| 1. Emergency light                   | ON if necessary |
| 2. Standby attitude indicator switch | ON              |
| 3. MASTER SWITCH                     | OFF             |
| 4. FIELD LH and RH                   | BOTH OFF        |
| 5. MASTER SWITCH                     | ON              |
| 6. FIELD LH and RH                   | BOTH ON         |

**If failure persists**

- |  |   |
|--|---|
| 9. EMERG BATT switch   | ON (if engine starting battery installed) |
| 10. Land as soon as possible applying emergency landing gear extension procedure (see Para. 7.1) |   |



WARNING

*An electrical system overall failure prevents flaps operation: landing distance without flaps increases of about 25%.*




CAUTION

*A fully charged battery can supply electrical power for at least 30 minutes.*

**5.3. STATIC PORTS FAILURE**

In case of static ports failure, the alternate static port in the cabin (shown below) must be activated.

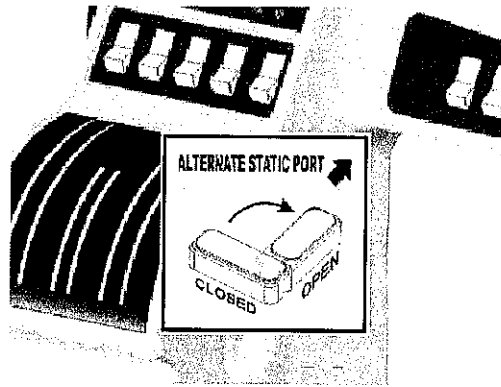

- |                                |                               |
|--------------------------------|-------------------------------|
| 1. Cabin ventilation           | <i>OFF (hot and cold air)</i> |
| 2. ALTERNATE STATIC PORT VALVE | <i>OPEN</i>                   |
| 3. Continue the mission        |                               |



**5.4. UNINTENTIONAL FLIGHT INTO ICING CONDITIONS**

1. Carburettor heat *BOTH ON*
2. Pitot heat *ON*
3. Fly as soon as practical toward a zone clear of visible moisture, precipitation and with higher temperature, changing altitude and/or direction.
4. Control surfaces *Move continuously to avoid locking*
5. Propellers rpm *INCREASE to prevent ice build-up on the blades*



*In event of ice build-up in correspondence of wing leading edges, stall speed increases.*



*Ice build-up on wing, tail fin or flight control surfaces unexpected sudden roll and/or pitch tendencies can be experienced and may lead to unusual attitude and loss of aircraft control.*



*Do not use Autopilot when icing formation is suspected or detected.*

## **5.5. CARBURETTOR ICING**

### **DURING TAKEOFF**

The carburettor icing in “full throttle” mode is unlikely.

Take off in known or suspected icing condition is forbidden.

Therefore, and in order to dispose of full engine take off power, the take-off must be performed with carburettor heating OFF.

### **IN FLIGHT**

Carburettor icing is considered probable when external air temperature is below 15° C and visible air moisture (clouds, mist, haze or fog) or atmospheric precipitation are present.

Generally, an OAT-to-dew point temperature spread lower than 10°C and OAT less than 15°C with visibility lower than 5 km is a positive indication of likely icing formation condition.

Should an inadvertent flight into known or forecast icing condition happen carburettor heating should be selected “ON” as soon as possible: the earlier carburettors are warmed the better the chances not to form ice and avoid engine loss or reduction of power.

Keep Carb Heating “ON” until engine power is restored and area of possible icing condition is exited.



*Carburettor Heating to “ON” will cause engine RPM reduction of about 100 RPM, causing a sensible available engine power decrease.*

**5.6. FLAPS CONTROL FAILURE****DURING TAKEOFF****CAUTION**

*Flap UP take off, requires a T/O distance (50 ft height obstacle distance) increased by about 20%.*

1. Airspeed *Keep below 93 KIAS*
2. **Land as soon as practical**

**DURING APPROACH/LANDING****CAUTION**

*If the flaps control fails, consider the higher stall speed (see Section 5, Para 6 (Stall Speed) and an increased landing distance of about 25%.*

1. Airspeed *Keep over 75 KIAS*
2. **Land as soon as practical** on a runway of appropriate length

**5.7. ELECTRICAL PITCH TRIM CONTROL FAILURE****a) Trim Runaway:**

In the event of trim runaway:

- |  |                |
|--|----------------|
| 1. AP DISC switch (if AP is installed) | PRESS and HOLD |
| 2. TRIM DISC switch                    | OFF            |
| 3. AP DISC switch (if AP is installed) | RELEASE        |
| 4. Trim aircraft using trim wheel      |                |

**b) Trim Jamming:**

Should trim control be jammed / inoperative:

- |                       |       |
|-----------------------|-------|
| 1. Pitch trim breaker | CHECK |
|-----------------------|-------|

*If circuit breaker is OUT:*

2. Trim aircraft using trim wheel

*If circuit breaker is IN:*

- |                                   |     |
|-----------------------------------|-----|
| 2. TRIM DISC switch               | OFF |
| 3. Trim aircraft using trim wheel |     |

**6. ONE ENGINE INOPERATIVE PROCEDURES**

*The ineffectiveness of one engine results in asymmetric traction which tends to yaw and bank the aircraft towards the inoperative engine. In this condition it is essential to maintain the direction of flight compensating the lower traction and counteracting the yawing effects by means of rudder pedals. To improve directional control, it is advisable to bank the aircraft of about 5° to the side of the operating engine.*



*In addition, reduced available overall power and extended control surfaces will lead to a performances drop: a quick pitch attitude reduction will allow to keep a minimum safety airspeed.*

*The higher is the airspeed the better will be lateral and directional control efficiency: never allow airspeed to drop below  $V_{MCA}$ .*

*Best residual climb performances in OEI (One Engine Inoperative) condition have been recorded in Flap Up configuration and at  $V_{YSE}$ , which is marked as a Blue Line on the Airspeed indicator (calculated for maximum Take Off Weight and Sea, Level ISA condition) For actual condition  $V_{YSE}$  refer to Section 5 Para. 13 (One engine rate of climb).*



*$V_{XSE}$  is actually very close to  $V_{YSE}$  in any condition, thus best climb performance will also be associated with best climb angle (gradient) performance. Refer to Section 5 Para. 14, One-Engine Rate of Climb at  $V_{XSE}$ , for relevant data.*

## 6.1 CHARACTERISTIC AIRSPEEDS WITH ONE ENGINE INOPERATIVE

In case of one engine inoperative condition (OEI), pilot shall take into account the airspeeds shown below:

Conditions	Speed (KIAS)	
	Minimum aircraft control speed with one engine inoperative and flaps set to T.O. ( $V_{MC}$ )	62
Best rate-of-climb speed OEI ( $V_{YSE}$ )	MTOW 1180 kg	MTOW 1230 kg
	80	84
Best gradient speed OEI ( $V_{XSE}$ )	79	83

*Reference is made to MTOW, 1180 kg and 1230 kg, at Sea Level and ISA condition (if Supplement A19 - Increased MTOW @1230 KG - is applicable).*





**6.2 INFLIGHT ENGINE RESTART**

*After:*



**WARNING**

- *mechanical engine seizure;*
- *fire;*
- *major propeller damage*

*engine restart is not recommended.*

- |  |  |
|--|--|
| 1. Carburettor heat                      | <i>ON if required</i>                  |
| 2. Electrical fuel pump                  | <i>ON</i>                              |
| 3. Fuel quantity indicator               | <i>CHECK</i>                           |
| 4. Fuel Selector                         | <i>CHECK (Crossfeed if required)</i>   |
| 5. FIELD                                 | <i>OFF</i>                             |
| 6. Ignition                              | <i>BOTH ON</i>                         |
| 7. Operating engine Throttle Lever       | <i>SET as practical</i>                |
| 8. <b>Stopped engine Throttle Lever</b>  | <b><i>IDLE</i></b>                     |
| 9. <b>Stopped engine Propeller Lever</b> | <b><i>FULL FORWARD</i></b>             |
| 10. Start push-button inoperative engine | <i>PUSH</i>                            |
| 11. Propeller Lever inoperative engine   | <i>SET at desired rpm</i>              |
| 12. FIELD                                | <i>ON (check for positive ammeter)</i> |
| 13. Engine throttle levers               | <i>SET as required</i>                 |

**If engine restart is unsuccessful**

- |                                     |   |
|-------------------------------------|---|
| 14. EMERG BATT switch               | <i>ON (if starting battery installed)</i> |
| 15. Repeat engine restart procedure |   |



**CAUTION**

*After engine restart, if practical, moderate propeller rpm and throttle increase to allow OIL and CHT/CT temperatures for stabilizing in the green arcs.*



*If the fuel quantity in the tank which feeds the stopped engine is low, select the opposite side fuel tank by means of the fuel selector.*

**If engine restart is still unsuccessful:**

- |  |   |
|--|---|
| 16. Affected engine  | <i>SECURE (see engine securing procedure Para. 3)</i> |
| 17. <b>Land as soon as possible</b> applying <i>one engine inoperative landing procedure.</i><br>See Para. 6.6 |   |

**6.3 ENGINE FAILURE DURING TAKEOFF RUN**

**BEFORE ROTATION: ABORT TAKE OFF**

- |                          |                             |
|--------------------------|-----------------------------|
| 1. <b>Throttle Lever</b> | <b>BOTH IDLE</b>            |
| 2. <b>Rudder</b>         | <i>Keep heading control</i> |
| 3. <b>Brakes</b>         | <i>As required</i>          |

**When safely stopped:**

- |                                       |                 |
|---------------------------------------|-----------------|
| 4. Failed Engine Ignition             | <b>BOTH OFF</b> |
| 5. Failed Engine Field                | <b>OFF</b>      |
| 6. Failed Engine Electrical fuel pump | <b>OFF</b>      |

**IF THE DECISION IS TAKEN TO CONTINUE THE TAKEOFF:**



*A take-off abort should always be preferred if a safe stop can be performed on ground.*

*A suggested "GO-NO-GO" criteria is: abort take-off until LG is still down and locked.*

*Once airborne accelerate to Blue Line Speed ( $V_{YSE}$ ) before commanding LG retraction.*

*Take-off planning should take into account that high density altitude and aircraft mass may result in OEI negative climb rate.*

*$V_{YSE}$  with flap up shall be flown in order to achieve best possible rate of climb after landing gear retraction and engine feathering.*

- |   |  |
|---|--|
| 1. <b>Operating engine Throttle Lever</b>           | <b>FULL POWER</b>  |
| 2. <b>Operating engine Propeller Lever</b>          | <b>FULL FORWARD</b>  |
| 3. <b>Heading</b>                                   | <i>Keep control using rudder and ailerons</i>              |
| 4. <b>Attitude</b>                                  | <i>Reduce as appropriate to keep airspeed over 62 KIAS</i> |
| 5. <b><u>Inoperative engine Propeller Lever</u></b> | <b>FEATHER</b>   |
| 6. <b>Landing gear control lever</b>                | <b>UP</b>  |
| 7. <b>Airspeed</b>                                  | <i><math>V_{XSE}/V_{YSE}</math> as required</i>            |
| 8. <b>Flaps</b>                                     | <b>0°</b>  |

**At safe altitude**

- |     |                                       |  |
|-----|---------------------------------------|--|
| 9.  | <u>Inoperative engine</u>             | <i>Confirm and SECURE</i>                          |
| 10. | Operative engine Electrical fuel pump | <i>Check ON</i>                                    |
| 11. | Operating engine                      | <i>Check engine instruments</i>                    |
| 12. | Operating engine Fuel Selector        | <i>Check correct feeding (crossfeed if needed)</i> |

**If engine restart is recommended:**

13. Apply INFLIGHT ENGINE RESTART procedure *see Para 6.2*

**If engine restart is unsuccessful or it is not recommended:**

13. **Land as soon as possible**
14. One engine inoperative landing procedure. *see Para. 6.6*

*Following:*



- *mechanical engine seizure;*
  - *fire;*
  - *major propeller damage*
- engine restart is not recommended.*

**6.4 ENGINE FAILURE DURING CLIMB**

- |  |  |
|--|--|
| 1. Autopilot                                 | <b>OFF</b>   |
| 2. Heading                                   | <i>Keep control using rudder and ailerons</i>              |
| 3. Attitude                                  | <i>Reduce as appropriate to keep airspeed over 62 KIAS</i> |
|  |  |
| 4. Operating engine Throttle Lever           | <i>FULL THROTTLE</i>                                       |
| 5. Operating engine Propeller Lever          | <i>FULL FORWARD</i>  |
| 6. Operative engine Electrical fuel pump     | <i>Check ON</i>  |
| 7. <u>Inoperative engine</u> Propeller Lever | <i>FEATHER</i>   |
| 8. <u>Inoperative engine</u>                 | <i>Confirm and SECURE</i>                                  |

**If engine restart is possible:**

9. Apply INFLIGHT ENGINE RESTART procedure *see Para 6.2*

**If engine restart is unsuccessful or it is not recommended:**

9. **Land as soon as possible**
10. One engine inoperative landing procedure. *see Para. 6.6*

**WARNING**

*Following a mechanical engine seizure, fire or a major propeller damage engine restart is not recommended.*

**WARNING**

*Continuation of flight to a safe landing runway must be planned taking into account maximum operating ceiling in OEI condition. Refer to Section 5 Para 1, "One-engine rate of climb".*

**6.5. ENGINE FAILURE IN FLIGHT**

- |              |  |
|--------------|--|
| 1. Autopilot | <b>OFF</b>   |
| 2. Heading   | <i>Keep control using rudder and ailerons</i>              |
| 3. Attitude  | <i>Adjust as appropriate to keep airspeed over 62 KIAS</i> |

- |  |  |
|--|--|
| 4. Operating engine                      | <i>Monitor engine instruments</i>                      |
| 5. Operative engine Electrical fuel pump | <i>Check ON</i>  |
| 6. Operating engine Fuel Selector        | <i>Check correct feeding<br/>(crossfeed if needed)</i> |

**If engine restart is possible:**

7. Apply INFLIGHT ENGINE RESTART procedure *see Para 6.2*

**If engine restart is unsuccessful or it is not recommended:**

7. **Land as soon as possible**
8. One engine inoperative landing procedure. *see Para. 6.6*



*Following a mechanical engine seizure, fire or a major propeller damage engine restart is not recommended.*



*Continuation of flight to a safe landing runway must be planned taking into account maximum operating ceiling in OEI condition. Refer to Section 5 Para 12 (Rate of climb with One Engine Inoperative).*

**6.6. One engine inoperative landing**



*Thoroughly evaluate feasibility and plan in advance Single Engine Go-Around capabilities and expected climb gradient should a Missed Approach / bailed landing be necessary. Refer to Section 5, Para 13 and 14 (One-engine Rate of Climb at  $V_{YSE}$  and  $V_{XSE}$ )*



*Autopilot must be kept OFF*

- |  |  |
|--|--|
| 1. Seat belts                                | <i>Tightly fastened</i>                          |
| 2. Landing lights                            | <i>As required</i>                               |
| 3. Operating engine Fuel Selector            | <i>Check correct feeding/crossfeed if needed</i> |
| 4. <u>Inoperative engine</u> Propeller Lever | <i>CHECK FEATHERED</i>                           |
| 5. <u>Inoperative engine</u>                 | <i>CHECK SECURED</i>                             |
| 6. Operative engine Electrical fuel pump     | <i>ON</i>  |

**When on final leg:**

- |                      |  |
|----------------------|--|
| 7. Flap              | <i>T/O</i>   |
| 8. Landing gear      | <i>Select DOWN and check three green lights on</i> |
| 9. Approach Airspeed | <i><math>V_{YSE}</math></i>                        |
| 10. Touchdown speed  | <i>70 KIAS</i>                                     |

INTENTIONALLY LEFT BLANK

**7. LANDING GEAR FAILURES**

**7.1. EMERGENCY LANDING GEAR EXTENSION**

**NOTE**

*Landing gear extension failure is identified by means of the green lights not illuminated: relevant gear leg may not be fully extended and/or locked.*


*Light bulb operating status can be verified by pressing the LDG push-to-test button. Additionally, the red light TRANS indicates that one or more legs are moving and the PUMP ON amber light on the annunciator panel indicates the hydraulic gear pump is operating.*

- |    |                                      |                                    |
|----|--------------------------------------|------------------------------------|
| 1. | Airspeed                             | <i>below applicable VLO/VLE</i>    |
| 2. | Landing gear control lever           | <i>DOWN</i>                        |
| 3. | Emergency gear extension access door | <i>REMOVE</i>                      |
| 4. | RH control lever                     | <i>ROTATE 90° counterclockwise</i> |
| 5. | Wait at least 20 seconds             |                                    |

**NOTE**

*Main Landing Gear legs green lights may be turned on, thus indicating effective main gear legs blocked in down position by mere effect of gravity force.*

- |    |                                  |                                     |
|----|----------------------------------|-------------------------------------|
| 6. | LH control lever                 | <i>ROTATE 180° counterclockwise</i> |
| 7. | <b>Land as soon as practical</b> |                                     |

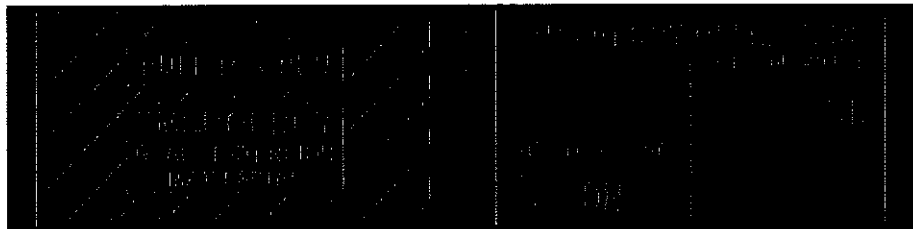

**NOTE**

*The emergency landing gear extension operation takes about 20" sec.*



**7.2. COMPLETE GEAR UP OR NOSE GEAR UP LANDING**



*The following procedure applies if Nose Landing Gear is not extended and locked even after emergency extension procedure.*



*A Nose Landing Gear up leg not down and locked might lead to a hazardous situation, especially on uneven runways.*



*If landing gear position is not known, perform a tower fly-by at safe speed and altitude to have confirmation about its situation.*

*If possible coordinate fire brigade intervention along runway and report number of persons on board and remaining fuel type and quantity.*

**If a complete Landing Gear up or a Nose Landing Gear up position is reported:**

**Preparation**

- |   |                                     |
|---|-------------------------------------|
| 1. Reduce fuel load if time and conditions permit |                                     |
| 2. Crew and passengers safety belts               | <i>Tightly fastened</i>             |
| 3. Landing gear control lever                     | <i>UP</i>                           |
| 4. Green lights and TRANS light                   | <i>CHECK OFF</i>                    |
| 5. Flap setting                                   | <i>plan approach with Flap Land</i> |

**Before ground contact:**

- |                                   |                 |
|-----------------------------------|-----------------|
| 6. LH and RH Fuel Selector        | <i>BOTH OFF</i> |
| 7. LH and RH Electrical fuel pump | <i>BOTH OFF</i> |
| 8. Ignitions                      | <i>ALL OFF</i>  |

**On touch down:**

- |                     |   |
|---------------------|---|
| 9. Landing attitude | <i>slight nose-up and wings levelled,</i> |
| 10. Touchdown speed | <i>as low as 50 KIAS with flap</i>        |
| 11. Aircraft nose   | <i>gently lower as speed bleeds off</i>   |

**After aircraft stops:**

- |                     |                 |
|---------------------|-----------------|
| 12. FIELD LH and RH | <i>BOTH OFF</i> |
| 13. MASTER SWITCH   | <i>OFF</i>      |



*Master switch to OFF impairs radio communication and outside aircraft lighting.*

- |                         |                               |
|-------------------------|-------------------------------|
| 14. Aircraft Evacuation | <i>carry out if necessary</i> |
|-------------------------|-------------------------------|



Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.

### 7.3. PARTIAL MAIN LG EXTENSION



The following procedure applies if one or both Main Landing Gear legs are not completely extended and locked even after emergency extension procedure.



A partial gear landing (RH and/or LH leg not down and locked) might turn into a hazardous situation, especially on uneven runways.

If possible try to obtain a symmetric gear extension (e.g. by trying further landing gear retraction) in order to avoid swerving after touchdown. A gear up landing is generally considered safer.



If landing gear position is not known, perform a tower fly-by at safe speed and altitude to have confirmation about its situation.

If possible coordinate fire brigade intervention along runway and report number of persons on board and remaining fuel type and quantity.

#### Preparation

- |   |                                     |
|---|-------------------------------------|
| 1. Reduce fuel load if time and conditions permit |                                     |
| 2. Crew and passengers safety belts               | <i>Tightly fastened</i>             |
| 3. Landing gear control lever                     | <i>UP</i>                           |
| 4. Green lights and TRANS light                   | <i>CHECK OFF</i>                    |
| 5. Flap setting                                   | <i>plan approach with Flap Land</i> |

#### **If partially extended landing gear is confirmed:**

##### **Before ground contact:**

- |                                   |                 |
|-----------------------------------|-----------------|
| 6. LH and RH Fuel Selector        | <i>BOTH OFF</i> |
| 7. LH and RH Electrical fuel pump | <i>BOTH OFF</i> |
| 8. Ignitions                      | <i>ALL OFF</i>  |

##### **On touch down:**

- |                           |  |
|---------------------------|--|
| 9. Align for approach     | <i>on the runway centreline</i>  |
| 10. Touchdown speed       | <i>as low as 50 KIAS</i>   |
| 11. Touchdown             | <i>on the extended gear only</i>   |
| 12. Heading and direction | <i>maintain applying appropriate aileron and rudder/steering control</i> |
| 13. Retracted leg         | <i>keep off the ground as long as possible</i>                           |

**After aircraft stops:**

- 14. FIELD LH and RH *BOTH OFF*
- 15. MASTER SWITCH *OFF*



*Master switch to OFF impairs radio communication and outside aircraft lighting.*

- 16. Aircraft Evacuation *carry out*



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**7.4. FAILED RETRACTION**

- |    |                            |                                      |
|----|----------------------------|--------------------------------------|
| 1. | Airspeed                   | <i>Keep below applicable VLO/VLE</i> |
| 2. | Landing gear control lever | <i>DOWN</i>                          |



*A Landing Gear lever recycle (further retraction attempt) may result in a final partial Landing Gear Extension, which may then compromise safe landing aircraft capability.*

- |    |                     |              |
|----|---------------------|--------------|
| 3. | Landing Gear lights | <i>Check</i> |
|----|---------------------|--------------|

**If a safe landing configuration is obtained (3 greens)**

- |    |               |  |
|----|---------------|--|
| 4. | Land normally |  |
|----|---------------|--|

**If a safe landing gear configuration is not obtained:**

- |    |                                  |                              |
|----|----------------------------------|------------------------------|
| 4. | Emergency LG extension procedure | <i>Apply (See Para. 7.1)</i> |
| 5. | Land as soon as practical        |                              |

**7.5. UNINTENTIONAL LANDING GEAR EXTENSION**



*An unwanted landing gear extension, with at least one leg moving downward, may be caused by hydraulic fluid loss and it is signaled by*

- significant aerodynamic noise increase;*
- light and counteractable nose down pitch moment;*
- red TRANS light turned on.*

- |    |                            |                                      |
|----|----------------------------|--------------------------------------|
| 1. | Airspeed                   | <i>Keep below applicable VLO/VLE</i> |
| 2. | Landing gear control lever | <i>DOWN</i>                          |
| 3. | Landing Gear lights        | <i>Check</i>                         |

**If a safe landing configuration is obtained (3 greens)**

- |    |               |  |
|----|---------------|--|
| 4. | Land normally |  |
|----|---------------|--|

**If a safe landing gear configuration is not obtained:**

- |    |                                  |                              |
|----|----------------------------------|------------------------------|
| 4. | Emergency LG extension procedure | <i>Apply (See Para. 7.1)</i> |
| 5. | <b>Land as soon as practical</b> |                              |

INTENTIONALLY LEFT BLANK



## **8. SMOKE AND FIRE OCCURRENCE**

### **8.1 ENGINE FIRE ON THE GROUND**

- |                           |                              |
|---------------------------|------------------------------|
| 1. Fuel Selectors         | <b>BOTH OFF</b>              |
| 2. Ignitions              | <b>ALL OFF</b>               |
| 3. Electrical fuel pumps  | <b>BOTH OFF</b>              |
| 4. Cabin heat and defrost | <b>OFF</b>                   |
| 5. MASTER SWITCH          | <b>OFF</b>                   |
| 6. Parking Brake          | <b>ENGAGED</b>               |
| 7. Aircraft Evacuation    | <b>carry out immediately</b> |



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**8.2 ENGINE FIRE DURING TAKEOFF RUN**

**BEFORE ROTATION: ABORT TAKE OFF**

- |                          |                             |
|--------------------------|-----------------------------|
| 1. <b>Throttle Lever</b> | <b>BOTH IDLE</b>            |
| 2. <b>Rudder</b>         | <i>Keep heading control</i> |
| 3. <b>Brakes</b>         | <i>As required</i>          |

**With aircraft under control**

- |                                  |                              |
|----------------------------------|------------------------------|
| 4. <b>Fuel Selector</b>          | <b>BOTH OFF</b>              |
| 5. <b>Ignitions</b>              | <b>ALL OFF</b>               |
| 6. <b>Electrical fuel pump</b>   | <b>BOTH OFF</b>              |
| 7. <b>Cabin heat and defrost</b> | <b>OFF</b>                   |
| 8. <b>MASTER SWITCH</b>          | <b>OFF</b>                   |
| 9. <b>Parking Brake</b>          | <b>ENGAGED</b>               |
| 10. <b>Aircraft Evacuation</b>   | <i>carry out immediately</i> |



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**IF THE DECISION IS TAKEN TO CONTINUE THE TAKEOFF:**

*A take-off abort should always be preferred if a safe stop can be performed on ground.*

*A suggested "GO-NO-GO" criteria is: abort take-off until LG is still down and locked.*

*Once airborne accelerate to Blue Line Speed ( $V_{YSE}$ ) before commanding LG retraction.*

*Take-off planning should take into account that high density altitude and aircraft mass may result in OEI negative climb rate.*

*$V_{YSE}$  with flap up shall be flown in order to achieve best possible rate of climb after landing gear retraction and engine feathering.*



- |   |  |
|---|--|
| 1. <b>Operating engine Throttle Lever</b>             | <b>FULL POWER</b>  |
| 2. <b>Operating engine Propeller Lever</b>            | <b>FULL FORWARD</b>  |
| 3. <b>Heading</b>                                     | <i>Keep control using rudder and ailerons</i>              |
| 4. <b>Attitude</b>                                    | <i>Reduce as appropriate to keep airspeed over 62 KIAS</i> |
| 5. <b><u>Fire affected engine</u> Propeller Lever</b> | <b>FEATHER</b>   |
| 6. <b>Landing gear control lever</b>                  | <b>UP</b>  |
| 7. <b>Airspeed</b>                                    | <i><math>V_{XSE}/V_{YSE}</math> as required</i>            |
| 8. <b>Flaps</b>                                       | <b>0°</b>  |

**At safe altitude**

9. Cabin heat and defrost *BOTH OFF*
10. Fire affected engine Fuel Selector *Confirm and OFF*
11. Fire affected engine Ignitions *Confirm and BOTH OFF*
12. Fire affected engine Electrical fuel pump *Confirm and OFF*
13. Fire affected engine FIELD *OFF*
14. **Land as soon as possible** applying *one engine inoperative landing procedure*.  
See Para. 6.6



**8.3 ENGINE FIRE IN FLIGHT**

- |  |  |
|--|--|
| 1. Cabin heat and defrost  | <b>BOTH OFF</b>  |
| 2. Autopilot   | <b>OFF</b>   |
| 3. <u>Fire affected engine</u> Fuel Selector   | <i>Confirm and OFF</i>                                     |
| 4. <u>Fire affected engine</u> Ignition  | <i>Confirm and BOTH OFF</i>                                |
| 5. <u>Fire affected engine</u> Throttle Lever  | <i>Confirm and FULL FORWARD</i>                            |
| 6. <u>Fire affected engine</u> Propeller Lever   | <i>Confirm and FEATHER</i>                                 |
| 7. <u>Fire affected engine</u> Electrical fuel pump  | <b>OFF</b>   |
| 8. Heading   | <i>Keep control using rudder and ailerons</i>              |
| 9. Attitude  | <i>Adjust as appropriate to keep airspeed over 62 KIAS</i> |
| 10. <u>Fire affected engine</u> Field  | <b>OFF</b>   |
| 11. Cabin ventilation  | <b>OPEN</b>  |
| 12. Land as soon as possible applying one engine inoperative landing procedure.<br>See Para. 6.6 |  |

**8.4 ELECTRICAL SMOKE IN CABIN ON THE GROUND**

- |                           |                              |
|---------------------------|------------------------------|
| 1. MASTER SWITCH          | <b>OFF</b>                   |
| 2. Cabin heat and defrost | <b>OFF</b>                   |
| 3. Throttle Lever         | <b>BOTH IDLE</b>             |
| 4. Ignitions              | <b>ALL OFF</b>               |
| 5. Fuel Selector          | <b>BOTH OFF</b>              |
| 6. Parking Brake          | <b>ENGAGED</b>               |
| 7. Aircraft Evacuation    | <b>carry out immediately</b> |



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**8.5 ELECTRICAL SMOKE IN CABIN DURING FLIGHT**

- |  |             |
|--|-------------|
| 1. Cabin ventilation                       | <i>OPEN</i> |
| 2. Emergency light                         | <i>ON</i>   |
| 3. Standby attitude indicator switch       | <i>ON</i>   |
| 4. Gain VMC conditions as soon as possible |             |

**In case of cockpit fire:**

- |                      |                                  |
|----------------------|----------------------------------|
| 5. Fire extinguisher | <i>use toward base of flames</i> |
|----------------------|----------------------------------|



**CAUTION**

*A tripped circuit breaker should not be reset.*

**If smoke persists, shed electrical supply in order to isolate faulty source by:**

- |                        |                 |
|------------------------|-----------------|
| 6. FIELD LH and RH     | <i>BOTH OFF</i> |
| 7. AVIONICS LH and RH  | <i>BOTH OFF</i> |
| 8. CROSS BUS LH and RH | <i>BOTH OFF</i> |



**CAUTION**

*A fully charged battery can supply electrical power for at least 30 minutes.*

**If faulty source is found:**

9. It may be possible to restore non faulty power sources (one at a time)

**If smoke persists:**

*Before total electrical system shutdown consider gaining VMC condition, at night set personal emergency light on.*

*Only emergency light and emergency ADI will be electrically powered.*

*All radio COM and NAV, Landing Gear lever (normal mode) and indication lights, electrical trims and flaps will be unserviceable.*



**WARNING**

- |                              |            |
|------------------------------|------------|
| 9. MASTER SWITCH             | <i>OFF</i> |
| 10. Land as soon as possible |            |

**When on ground:**

11. Aircraft Evacuation

*carry out as necessary*



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*



## **9. UNINTENTIONAL SPIN RECOVERY**



*Spin behaviour has not been demonstrated since certification process does not required it for this aircraft category.*

*Intentional spin is forbidden.*

*Stall with one engine inoperative is forbidden.*

*Should an unintentional spin occur, the classic recovery manoeuvre is deemed as being the best action to undertake:*

- |                                  |  |
|----------------------------------|--|
| 1. <b>Both engines throttles</b> | <i>idle</i>                                  |
| 2. <b>Flight Controls</b>        | <i>centralize</i>                            |
| 3. <b>Rudder</b>                 | <i>fully against rotation until it stops</i> |

INTENTIONALLY LEFT BLANK

**10. LANDING EMERGENCIES**

**10.1 LANDING WITHOUT ENGINE POWER**

*In case of double engine failure both propellers should be feathered to achieve maximum efficiency. Best glide speed is attained with flap UP and equals  $V_Y$  for current aircraft mass and air density altitude. Refer to Section 5, Para. "Enroute Rate of Climb".*



*Normal landing gear extension requires MASTER switch ON, an efficient battery and takes around 20 seconds.*

*LG selection should be appropriately anticipated when sure on final.*

*Flap can be set to T/O or LAND when landing is assured on final to reduce landing ground roll on short field.*

*Touchdown speed can be as low as 50 kt with flap down.*

1. Airspeed

<b>MTOW 1180kg</b>	<b>MTOW 1230 kg</b>
$V_Y = 83$ KIAS	$V_Y = 84$ KIAS

2. Flaps

UP

3. Emergency landing field

Select



*Emergency landing strip should be chosen considering surface condition, length and obstacles. Wind can be guessed by smoke plumes direction and tree tops or grass bending. Select touchdown direction according to the furrows of a plowed field, not across.*

4. Safety belts

FASTEN and tighten

5. Flaps

Set when landing is assured

6. Landing gear control lever

DOWN when landing is assured



*To reduce landing gear extension time, evaluate use of emergency control system which requires about 20 sec.*

***Before touch down***

- |                         |                 |
|-------------------------|-----------------|
| 7. Fuel Selector        | <i>BOTH OFF</i> |
| 8. Electrical fuel pump | <i>BOTH OFF</i> |
| 9. Ignitions            | <i>ALL OFF</i>  |

**After aircraft stops:**

- |                   |            |
|-------------------|------------|
| 10. MASTER SWITCH | <i>OFF</i> |
|-------------------|------------|

***When stopped***

- |                         |                               |
|-------------------------|-------------------------------|
| 11. Aircraft Evacuation | <i>carry out if necessary</i> |
|-------------------------|-------------------------------|



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**10.2 LANDING WITH NOSE LANDING GEAR TIRE DEFLATED**



*If possible, as a nose landing gear flat tire condition is known, coordinate fire brigade intervention along runway and report number of persons on board and remaining fuel type and quantity.*

**If Nose Landing Gear flat tire is confirmed:**

**Preparation**

- |                                     |  |
|-------------------------------------|--|
| 1. Crew and passengers safety belts | <i>Tightly fastened</i>                  |
| 2. If time permits                  | <i>Burn fuel to lower landing weight</i> |
| 3. Flap setting                     | <i>plan approach with Flap Land</i>      |

**Before ground contact:**

- |                         |                 |
|-------------------------|-----------------|
| 4. Fuel Selector        | <i>BOTH OFF</i> |
| 5. Electrical fuel pump | <i>BOTH OFF</i> |
| 6. Ignitions            | <i>ALL OFF</i>  |

**On touch down:**

- |                     |   |
|---------------------|---|
| 7. Landing attitude | <i>slight nose-up and wings levelled,</i> |
| 8. Touchdown speed  | <i>as low as 50 KIAS with flap</i>        |
| 9. Aircraft nose    | <i>gently lower as speed bleeds off</i>   |

**After aircraft stops:**

- |                     |                 |
|---------------------|-----------------|
| 10. FIELD LH and RH | <i>BOTH OFF</i> |
| 11. MASTER SWITCH   | <i>OFF</i>      |



*Master switch to OFF impairs radio communication and outside aircraft lighting.*

- |                         |                               |
|-------------------------|-------------------------------|
| 12. Aircraft Evacuation | <i>carry out if necessary</i> |
|-------------------------|-------------------------------|



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*



**10.3 LANDING WITH A KNOWN MAIN LANDING GEAR TIRE DEFLATED**



*An asymmetrical landing gear tire condition (RH and/or LH tires deflated) might turn into a hazardous situation, especially on uneven runways.*



*If possible, as a landing gear tires condition is known, coordinate fire brigade intervention along runway and report number of persons on board and remaining fuel type and quantity.*

**If a main Landing Gear flat tire is confirmed:**

**Preparation**

- |                                     |   |
|-------------------------------------|---|
| 1. Crew and passengers safety belts | <i>Tightly fastened</i>   |
| 2. Flap setting                     | <i>plan approach with Flap Land</i>                                   |
| 3. Approach alignment               | <i>Plan to land on the side of the good tire (drag in the middle)</i> |

**Before ground contact:**

- |                                   |                 |
|-----------------------------------|-----------------|
| 4. LH and RH Electrical fuel pump | <i>BOTH OFF</i> |
| 5. LH and RH Fuel Selector        | <i>BOTH OFF</i> |
| 6. Ignitions                      | <i>ALL OFF</i>  |

**On touch down:**

- |                          |  |
|--------------------------|--|
| 7. Touchdown speed       | <i>as low as 50 KIAS</i>   |
| 8. Touchdown             | <i>on the good tire gear only</i>  |
| 9. Heading and direction | <i>maintain applying appropriate aileron and rudder/steering control</i> |
| 10. Flattened tire       | <i>keep off the ground as long as possible</i>                           |

**After aircraft stops (or if runway departure is imminent):**

- |                     |                 |
|---------------------|-----------------|
| 11. FIELD LH and RH | <i>BOTH OFF</i> |
| 12. MASTER SWITCH   | <i>OFF</i>      |



*Master switch to OFF impairs radio communication and outside aircraft lighting.*

- |                         |                               |
|-------------------------|-------------------------------|
| 13. Aircraft Evacuation | <i>carry out if necessary</i> |
|-------------------------|-------------------------------|



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**10.4 LANDING WITHOUT BRAKES**



*If possible, select an airport with suitable runway length. Otherwise, evaluate the possibility to perform a gear up landing (refer to procedure reported on Para. 7.2). In the latter case consider the increasing hazard of an uneven pavement.*

- |                 |               |
|-----------------|---------------|
| 1. Safety belts | <i>FASTEN</i> |
|-----------------|---------------|

**After touch down if runway is deemed insufficient to decelerate:**

- |                          |                 |
|--------------------------|-----------------|
| 2. Fuel Selector         | <i>BOTH OFF</i> |
| 3. Electrical fuel pumps | <i>BOTH OFF</i> |
| 4. Ignitions             | <i>ALL OFF</i>  |
| 5. FIELD LH and RH       | <i>BOTH OFF</i> |
| 6. MASTER SWITCH         | <i>OFF</i>      |



*Master switch to OFF impairs radio communication and outside aircraft lighting.*

**Before end of runway or if runway departure is imminent:**

- |                               |           |
|-------------------------------|-----------|
| 7. Landing gear control lever | <i>UP</i> |
|-------------------------------|-----------|

**After aircraft stops:**

- |                        |                               |
|------------------------|-------------------------------|
| 8. Aircraft Evacuation | <i>carry out if necessary</i> |
|------------------------|-------------------------------|



*Consider use of ditching emergency exit to escape in case pilot or passenger doors are blocked, watch for engine hot parts, fuel, hydraulic fluid or oil spills. Leave aircraft in upwind direction.*

**11. AIRCRAFT EVACUATION**



*Leave the aircraft when engines are fully stopped. Watch for engine hot parts and fuel, hydraulic fluid or oil spills when using fuselage doors. If fuselage doors are unserviceable escape through the ditching emergency exit*

*In case of engine fire escape from opposite or upwind aircraft side.*

**Verify (if not yet performed):**

- |  |                 |
|--|-----------------|
| 1. <b>Fuel Selectors</b>                           | <b>BOTH OFF</b> |
| 2. <b>Ignitions</b>                                | <b>ALL OFF</b>  |
| 3. <b>Electrical fuel pumps</b>                    | <b>BOTH OFF</b> |
| 4. <b>MASTER SWITCH</b>                            | <b>OFF</b>      |
| 5. <b>Parking Brake</b>                            | <b>ENGAGED</b>  |
| 6. <b>Leave the aircraft using emergency exits</b> |                 |

## 12. DITCHING

Contact with water shall happen with aircraft longitudinal axis and direction of motion parallel to the wave at the minimum possible speed. Keep the nose up as long as possible.



Once in the water, the aircraft shall be evacuated through the ditching emergency exit, if available put life vest on and set dinghy out first. Inflate them only outside the aircraft.

If available, try to approach any existing ship in the vicinity in order to be rapidly located and rescued right after ditching.

- |                 |                      |
|-----------------|----------------------|
| 1. Landing gear | UP                   |
| 2. Safety belts | Tighten and fastened |
| 3. Flaps        | FULL                 |

### Before water impact

- |                         |          |
|-------------------------|----------|
| 4. Fuel Selector        | BOTH OFF |
| 5. Electrical fuel pump | BOTH OFF |
| 6. Ignitions            | ALL OFF  |
| 7. MASTER SWITCH        | OFF      |
| 8. FIELD LH and RH      | BOTH OFF |
| 9. Impact speed         | 50 KIAS  |

### Aircraft evacuation

- |                           |                  |
|---------------------------|------------------|
| 10. Emergency exit handle | rotate clockwise |
| 11. Latch door            | push outward     |
| 12. Life vests            | don              |
| 13. Evacuate the aircraft |                  |

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

---

**SECTION 4 – NORMAL PROCEDURES****INDEX**

<b>1. Introduction .....</b>	<b>3</b>
1.1. Normal ops general recommendations .....	3
<b>2. Airspeeds .....</b>	<b>5</b>
2.1. normal operations .....	5
2.2. single engine training .....	5
<b>3. Normal procedures checklist.....</b>	<b>7</b>
3.1. Recommendations for cold weather operations .....	7
3.2. Pre-flight check - Aircraft walk-around .....	9
3.3. Cockpit inspections .....	14
3.4. Engine starting .....	16
3.5. Before taxiing .....	18
3.6. Taxiing .....	18
3.7. Prior to takeoff .....	19
3.8. Line-up .....	20
3.9. Takeoff and climb .....	21
3.10. Cruise .....	22
3.11. Turbulent air operation .....	22
3.12. Descent and approach .....	22
3.13. Before landing .....	22
3.14. Balked landing/missed approach.....	23
3.15. After landing.....	24
3.16. Parking/shut down .....	25
3.17. Postflight checks .....	26
<b>4. Ground towing, parking and mooring .....</b>	<b>27</b>
4.1 Towing.....	27
4.2 Parking .....	27
4.3 Mooring.....	27

INTENTIONALLY LEFT BLANK



## **1. INTRODUCTION**

Section 4 describes checklists and recommended procedures for the conduct of normal operations for *P2006T* aircraft.

### **1.1. NORMAL OPS GENERAL RECOMMENDATIONS**

The following points should be always brought to attention to pilot/instructor/operator when operating a Tecnam aircraft equipped with variable pitch propeller:

#### ***1. Propeller governor ground check.***

As prescribed by the propeller/governor manufacturer, a drop of 400/500 propeller RPM should be produced during this check. Its aim is to confirm the governor efficiency, not its complete feathering function.

Especially during the first cycle of propeller lever pulling, the governor tendency is to respond to the input with consistent delay, causing the pilot to continue moving back the propeller lever until an abrupt RPM change is observed. This causes an excessive drop in propeller speed that may reach up to 800 RPM in some cases and, consequently, a drop of up to 2000 engine shaft RPM. The long term result is a major wear of engine gearbox, bushings and pistons. In some cases, it may also result in detonation.

In order to avoid these long term adverse effects, the governor ground check should be performed by slowly and gently pulling the propeller lever. The purging cycle should be repeated 3 times, making sure that the governor closely and firmly controls the rpm.

The following recommendations have to be followed during the test:


- *propeller speed drops shall be of 400/500 propeller RPM*
- *the cycle shall be repeated 3 times*
- *the pilot shall be ready to push the propeller lever if a drop of >500 RPM is recorded*

#### ***2. Power changes.***

When power setting changes are required in any flight condition, remember the following correct procedure:

- **Power increase = FIRST Prop THEN Map**
- **Power reduction = FIRST Map THEN Prop**

Useful guideline chart that could be used for best propeller/manifold combination is following reported:

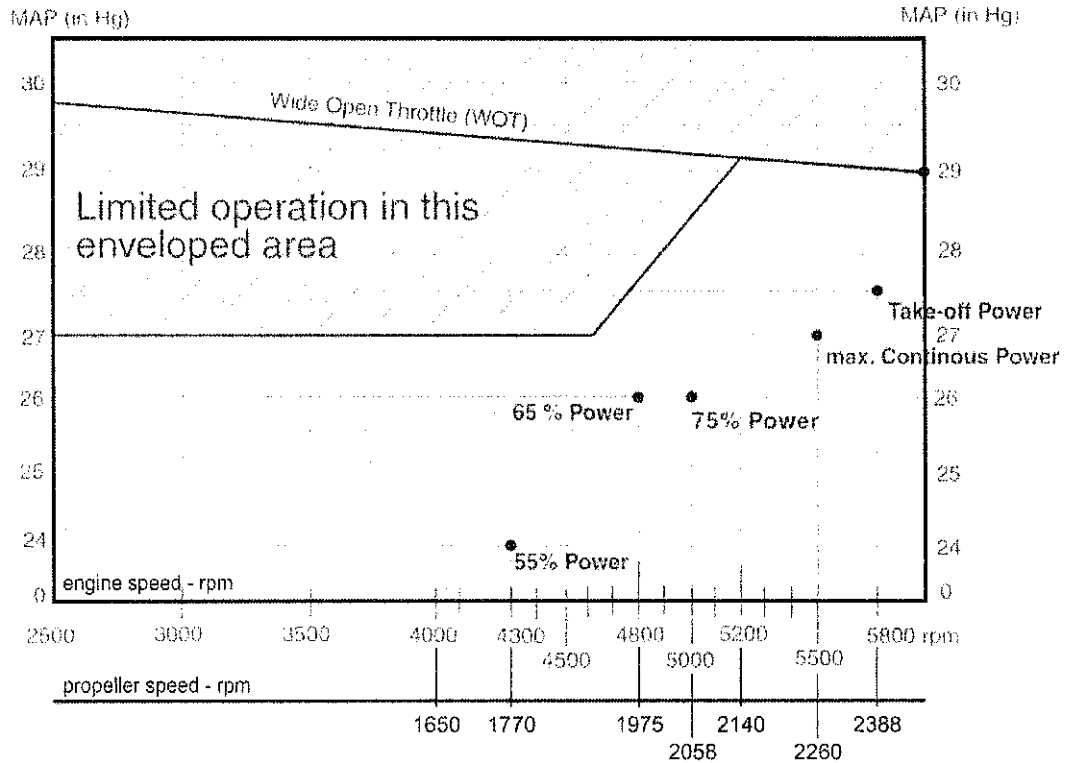

**3. Suitable Fuels.**

Tecnam remember operators to fill the aircraft with approved and suitable fuels. Use of not approved/unknown fuels may cause damages to the engine.

**ONLY USE APPROVED FUELS**

For details refer to Section 2 of this manual (or applicable Supplement) and latest issue of Rotax SI-912-016

## 2. AIRSPEEDS

### 2.1. NORMAL OPERATIONS

The following airspeeds are those which are significant for normal operations, with reference to both MTOW: 1180 kg and 1230 kg (if Supplement A19 - Increased MTOW @1230 KG - is applicable).

	FLAPS	MTOW	
		1180kg	1230 kg
Rotation Speed (in takeoff, $V_R$ )	T/O	64 KIAS	65 KIAS
Best Angle-of-Climb Speed ( $V_X$ )	0°	73 KIAS	72 KIAS
Best Rate-of-Climb speed ( $V_Y$ )	0°	80 KIAS	84 KIAS
Approach speed	T/O	90 KIAS	90 KIAS
Final Approach Speed	FULL	70 KIAS	71 KIAS
Manoeuvring speed ( $V_A$ )	0°	118 KIAS	122 KIAS
Never Exceed Speed ( $V_{NE}$ )	0°	167 KIAS	171 KIAS

### 2.2. SINGLE ENGINE TRAINING

$V_{SSE}$  is a speed selected as training aid for pilots in the handling of multi-engine aircraft. It is the minimum speed for intentionally rendering on engine inoperative in flight. This minimum speed provides the margin the manufacturer recommends for us when intentionally performing engine inoperative manoeuvres during training. The best practice to perform single engine training is to retard one engine to the flight parameters equivalent to a dead engine.

A simulated feather condition is obtained with propeller lever full forward and throttle lever set at 13.5 in Hg MAP at 70-90 KIAS and 2000-4000 ft (density altitude).

Recommended safe simulated OEI speed ( $V_{SSE}$ )	70 KIAS
---	---------

**NOTE**

Keep speed above  $V_{SSE}$  for simulated OEI training operations.

In normal operations, shutting down an engine for training shall not become a habit, in particular for safety reasons and in order to optimise training; engine shutdown to perform OEI shall be executed only when required by regulations (e.g. during flight check, skill tests or demonstration as per 14CFR Part61 or equivalent rule).

The continuous operation of engine securing for training may indeed cause long term damages to the engine itself due to the high load coming from propeller (which is in feathering angle during the engine re-starting).

## Normal procedures checklist

**3.1. RECOMMENDATIONS FOR COLD WEATHER OPERATIONS****Engine cold weather operation**

Refer to Rotax 912 Series Operators Manual, last issue, providing instructions for operating media (lubricant and coolant specifications) to be used in cold weather operation.

**Parking**

When the airplane is parked in cold weather conditions and it is expected to be soaked at temperatures below freezing, some precautions need to be taken.

Clear snow, slush, and ice in the parking area, or at least clear the area around the tires to prevent them from freezing to the ground. Apply plugs on Pitot and static ports.

The exposed airframe parts should be protected, especially the engines, the wheels, the blades and the gears against the snow or ice accumulation. Water and other freezable liquids should be removed from the airplane.

Standing water that could freeze should be removed from critical parts, as flaps and ailerons hinges, trim tabs hinges, drain points, LG doors, cabin doors etc.

With an ambient temperature of below  $-20^{\circ}\text{C}$ , remove battery and store in a warm dry place; additionally in order to prevent a heavy discharge and to increase the battery life time, it is recommended to use an external power source for engine starting at temperatures lower than  $-15^{\circ}\text{C}$ .

When wheel brakes come in contact with ice, slush, or snow with freezing conditions, the brake disk may freeze: park the aircraft with parking brake control knob in OFF position and ensure the aircraft is properly chocked and moored.

In any case, when the probability of ice, snow, or heavy frost is forecast, the use of a hangar is strongly recommended.

An external inspection of the aircraft is performed before each flight, as prescribed on Section 3.1.

For cold weather operations, the crew must focus on the check of following parts of airplane (free of snow/ice/standing water).

- control surfaces
- fuselage
- wings
- vertical and horizontal stabilator
- stall warning switch
- engine inlets
- engines draining points
- propeller blades
- LG doors
- Pitot, and static ports
- fuel tank vents

Tires show low pressure in cold weather: the required adjustments to inflation pressure should be performed on tires cooled to ambient temperature.

If the crew detects ice, anti-icing products are not allowed. To remove ice, tow the aircraft in the hangar and operate with a soft brush or a humid cloth.



*Removal of snow/ice accumulations is necessary prior to take-off because this will seriously affect airplane performance. Aircraft with ice/snow accumulation is not cleared for flight.*

If the aircraft must be operated in cold weather conditions within the range  $-25^{\circ}\text{C}$  to  $-5^{\circ}\text{C}$ , it is suggested to perform following procedure in order to speed up the engine warm-up:

- Tow the airplane in a warm hangar (warmer than  $-5^{\circ}\text{C}$ );
- Let airplane temperature stabilize;
- Check pressure in hydraulic system, recharge if necessary;
- Heat the cabin to a suitable value to avoid windshield frost in flight; an electrical fan heater may be used inside the cabin;
- Tow airplane outside and perform engine starting.

**3.2. PRE-FLIGHT CHECK - AIRCRAFT WALK-AROUND**

To perform the aircraft walk-around, carry out the checklists according to the pattern shown in Figure 4-1.



*If ignition switches are turned ON, a propeller movement can cause the engine starting with consequent hazard for people nearby.*



*Visual inspection is defined as follows: check for defects, cracks, delamination, excessive play, unsafe or improper installation as well as for general condition, presence of foreign objects, slippage markers etc. For control surfaces, visual inspection also involves additional check for freedom of movement. Always check the ground in the area of the aircraft for evidence of fuel, oil or operating fluids leakages.*

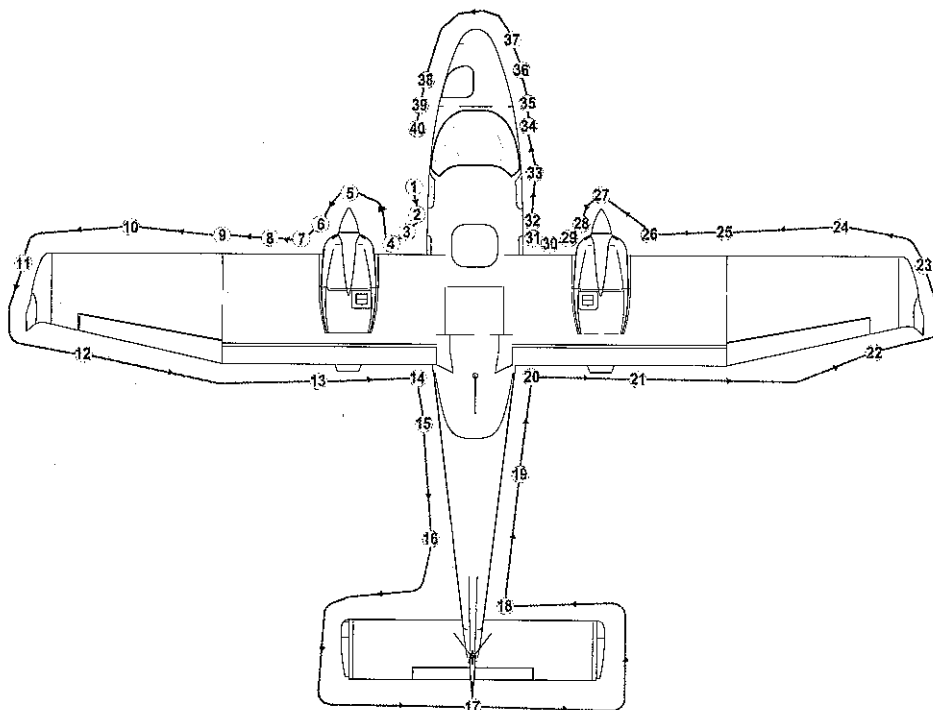


Figure 4.1

- 1 Pilot door and cabin  
*Check door for integrity. Turn ON the Master Switch and check Stall Warning switch for operation and condition; check lighting of Landing/Taxi/Nav/Strobe lights then turn OFF the Master Switch.*
- 2 Left main landing gear  
*Check fuselage skin status, tire status (cuts, bruises, cracks and excessive wear), slip-page markers integrity, gear structure and shock absorber, hoses, gear door attachments and gear micro-switches. There should be no sign of hydraulic fluid leakage.*
- 3 Wheel chock  
*Remove if employed*
- 4 Propeller and spinner  
*The propeller blades and spinner should be free of cracks, nicks, dents and other defects and should rotate freely. Check fixing and lack of play between blades and hub.*
- 5 Left engine nacelle  
*Perform following inspections:*
  - a) *Check the surface conditions.*
  - b) *Nacelle inlets and exhausts openings must be free of obstructions. If inlet and outlet plugs are installed, they should be removed.*
  - c) *Check radiators. There should be no indication of leakage of fluid and they have to be free of obstructions.*
  - d) *Only before the first flight of a day:*
    - (1) *Verify coolant level in the expansion tank, replenish as required up to top (level must be at least 2/3 of the expansion tank).*
    - (2) *Verify coolant level in the overflow bottle through the slot under the nacelle: level must be between min. and max. mark. Replenish if required removing the upper cowling; after that, install upper cowling checking for interferences with radiators.*
    - (3) *Turn the propeller by hand to and fro, feeling the free rotation of 15° or 30° before the crankshaft starts to rotate. If the propeller can be turned*



*between the dogs with practically no friction at all further investigation is necessary. Turn propeller by hand in direction of engine rotation several times and observe engine for odd noises or excessive resistance and normal compression.*

- e) Check oil level and replenish as required. Prior to oil check, switch off both ignitions circuits and turn the propeller by hand in direction of engine rotation several times to pump oil from the engine into the oil tank. This process is finished when air is returning back to the oil tank and can be noticed by a murmur from the open oil tank. Prior to long flights oil should be added so that the oil level reaches the "max" mark.*
- f) Drain off Gascolator for water and sediment (drain until no water comes off). Then make sure drain valve is closed.*
- g) Check drainage hoses clamps*
- h) Verify all parts are fixed or locked.*
- i) Verify all inspection doors are closed.*

- |           |  |   |
|-----------|--|---|
| <b>6</b>  | Air induction system                                       | <i>Check engine air inlet for integrity and correct fixing. The air intake filter must be free of obstructions.</i>   |
| <b>7</b>  | Left fuel tank   | <i>Check that the refuelling port cap is properly secured, then perform the fuel tank sump drainage operating the related valve which, after operation, must be checked closed. Fuel must checked for water and sediment. Verify the tank vent outlet is clear.</i> |
| <b>8</b>  | Landing and taxi lights                                    | <i>Visual inspection</i>  |
| <b>9</b>  | Left wing leading edge                                     | <i>Visual inspection. Check cabin ventilation inlet and carburettor heating inlet for condition and free of obstruction. Check stall strip.</i>   |
| <b>10</b> | Left wing top and bottom panels                            | <i>Visual inspection</i>  |
| <b>11</b> | Left winglet, nav and strobe lights, static discharge wick | <i>Check for integrity and fixing</i>   |
| <b>12</b> | Left aileron and balance mass                              | <i>Visual inspection, remove tie-down devices and control locks if employed.</i>  |

**Section 4 – Normal procedures**

*4<sup>th</sup> Edition, Rev. 4*

**AIRSPEEDS**

- |           |   |   |
|-----------|---|---|
| <b>13</b> | Left Flap and hinges  | <i>Visual inspection</i>  |
| <b>14</b> | Left static port  | <i>Remove protective cap – Visual inspection</i>  |
| <b>15</b> | Antennas  | <i>Check for integrity</i>  |
| <b>16</b> | Gear pump, external power and battery compartment                   | <i>Check emergency landing gear extension system pressure (low pressure limit: 20 bar), external power and battery compartments closure.</i>                  |
| <b>17</b> | Horizontal and vertical empennage and tabs. Static discharge wicks. | <i>Check the actuating mechanism of control surfaces and the connection with related tabs. Check wicks for integrity. Remove tie-down device if employed.</i> |
| <b>18</b> | Stabilator leading edge   | <i>Check for integrity</i>  |
| <b>19</b> | Fuselage top and bottom skin  | <i>Visual inspection</i>  |
| <b>20</b> | Right static port   | <i>Remove protective cap – Visual inspection</i>  |
| <b>21</b> | Right Flap and hinges   | <i>Visual inspection</i>  |
| <b>22</b> | Right aileron and balance weight                                    | <i>Visual inspection, remove tie-down devices and control locks if employed.</i>  |
| <b>23</b> | Right winglet, nav and strobe lights, static discharge wick         | <i>Check for integrity and fixing and lighting</i>  |
| <b>24</b> | Right wing top and bottom panels                                    | <i>Visual inspection</i>  |
| <b>25</b> | Right wing leading edge   | <i>Visual inspection. Check cabin ventilation inlet and carburettor heating inlet for condition and free of obstruction. Check stall strip.</i>               |

- |    |                           |  |
|----|---------------------------|--|
| 26 | Right fuel tank           | <i>Check that the refuelling port cap is properly secured, then perform the fuel tank sump drainage operating the related valve which, after operation, must be checked closed. Fuel must be checked for water and sediment. Verify the tank vent outlet is clear.</i> |
| 27 | Propeller and spinner:    | <i>The propeller blades and spinner should be free of cracks, nicks, dents and other defects and should rotate freely. Check fixing and lack of play between blades and hub.</i>   |
| 28 | Right engine nacelle      | <i>Apply check procedure reported in the walk-around station 5 and 6</i>   |
| 29 | Passenger door and cabin  | <i>Check door for integrity. Check safety belts for integrity and baggage for correct positioning and fastening. Check ditching emergency exit safety lock. Check passengers ventilation ports for proper setting.</i>   |
| 30 | Right main landing gear   | <i>Apply check procedure reported in the walk-around Station 2</i>   |
| 31 | Wheel chock               | <i>Remove if employed</i>  |
| 32 | Bottom fuselage antennas  | <i>Check for integrity</i>   |
| 33 | Right cabin ram-air inlet | <i>Visual inspection</i>   |
| 34 | Right Pitot tube          | <i>Remove protective cap and check for any obstruction</i>   |
| 35 | Nose landing gear         | <i>Check tire status (cuts, bruises, cracks and excessive wear), slippage markers integrity, gear structure and retraction mechanism, shock absorber and gear doors attachments. There should be no sign of hydraulic fluid leakage.</i>                               |
| 36 | Radome                    | <i>Check for integrity</i>   |
| 37 | Radome access door        | <i>Visual inspection</i>   |
| 38 | Left Pitot tube           | <i>Remove protective cap and check for any obstruction</i>   |
| 39 | Left cabin ram-air inlet  | <i>Visual inspection</i>   |

**NOTE**

*Avoid blowing inside Pitot-tube and inside airspeed indicator system's static ports as this may damage instruments.*

**3.3. COCKPIT INSPECTIONS**


*Instruct passengers on how to use safety belts and normal / emergency exits. Passenger embarkation should be done, avoiding contact with hot / oily parts such as engine exhaust pipes, drainage tubes and wheel brakes, or sharp wing control surfaces edges.*

*Do not smoke on board*

<b>1</b>	Parking Brake	<i>CHECK ENGAGED</i>
<b>2</b>	AFM	<i>CHECK on board</i>
<b>3</b>	Weight and balance	<i>CHECK if within the limits</i>
<b>4</b>	Flight controls	<i>Remove seat belt used as lock</i>
<b>5</b>	Seat	<i>Adjust as required</i>
<b>6</b>	Seat belt	<i>Fastened</i>
<b>7</b>	Passenger briefing	<i>Completed</i>
<b>8</b>	Doors	<i>CLOSED AND LOCKED</i>
<b>9</b>	Landing gear control knob	<i>CHECK DOWN</i>
<b>10</b>	Breakers	<i>All IN</i>
<b>11</b>	MASTER SWITCH	<i>ON</i>
<b>12</b>	Fuel quantity	<i>CHECK</i>
<b>13</b>	RH fuel selector	<i>RIGHT</i>
<b>14</b>	LH fuel selector	<i>LEFT</i>
<b>15</b>	RH Electrical Fuel Pump	<i>ON, check fuel pressure gauge correct operation and advisory light turned ON.</i>
<b>16</b>	RH Electrical Fuel pump	<i>OFF, check pressure decreased at zero</i>
<b>17</b>	LH Electrical Fuel Pump	<i>ON, check fuel pressure gauge correct operation and advisory light turned ON.</i>
<b>18</b>	LH Electrical Fuel pump	<i>OFF, check pressure decreased at zero</i>
<b>19</b>	Annunciator panel	<i>TEST</i>
<b>20</b>	Landing gear lights	<i>TEST</i>
<b>21</b>	ELT	<i>CHECK set to ARM</i>
<b>22</b>	Fire detector	<i>TEST</i>
<b>23</b>	Electrical pitch trim selector (if installed)	<i>TEST</i>
<b>24</b>	Engine levers friction	<i>Adjust if required</i>
<b>25</b>	Flight controls	<i>CHECK free</i>
<b>26</b>	Alternate static port	<i>CHECK closed</i>
<b>27</b>	Cabin heat	<i>CLOSED</i>
<b>28</b>	Flaps	<i>Operate control to FULL position. Verify extension. Retract flaps.</i>
<b>29</b>	Pitch trim control	<i>Set to neutral position.</i>
<b>30</b>	Rudder trim control	<i>Set to neutral position.</i>
<b>31</b>	Eng.Starting Battery Voltmeter (optional)	<i>Check 12 to 14 Volt</i>

INTENTIONALLY LEFT BLANK

**3.4. ENGINE STARTING**

**CAUTION**

*Avionics switches must be set OFF during engine starting to prevent avion-ic equipment damage.*

- |   |                 |                         |
|---|-----------------|-------------------------|
| 1 | Start clearance | <i>Obtain if needed</i> |
| 2 | CHRONOMETER     | <i>START</i>            |

**Right engine starting**

- |   |                    |                       |
|---|--------------------|-----------------------|
| 1 | RH Throttle lever  | <i>IDLE</i>           |
| 2 | RH Carburetor heat | <i>OFF</i>            |
| 3 | RH Propeller Lever | <i>FULL FORWARD</i>   |
| 4 | RH Choke           | <i>ON if required</i> |


**Cold engine**

*Throttles idle (fully closed), chokes fully opened.*

*Soon after starting, advance the throttle to let the propeller reach 800 RPM and slowly close the choke. Keep engine at 900 RPM for warm up period.*

**Hot engine**

*Park the aircraft with the nose pointing into wind in order to aid cooling. Keep chokes closed and slowly open the throttles one inch while cranking.*

**Flooded Engine after engine start failure**

*Keep chokes closed, open throttle fully and start the engine, then quickly re-duce throttles to idle.*

- |   |                          |  |
|---|--------------------------|--|
| 5 | RH Electrical Fuel pump  | <i>ON, check advisory light ON and posi-tive fuel press build up</i> |
| 6 | STROBES                  | <i>ON</i>  |
| 7 | RH engine propeller zone | <i>CHECK free</i>  |
| 8 | RH ignitions switches    | <i>BOTH ON</i>   |


**WARNING**

*Ensure that the area around engine propeller disc is clear from people and obstacles. Call out for propeller free.*

- |    |                       |   |
|----|-----------------------|---|
| 9  | RH start pushbutton   | <i>PUSH</i>   |
| 10 | RH engine oil gauge   | <i>CHECK if increasing within 10 sec. (max 7 bar in cold operation)</i> |
| 11 | RH Throttle lever     | <i>Advance to reach 1200 RPM</i>  |
| 12 | RH Choke              | <i>OFF</i>  |
| 13 | RH Field              | <i>ON</i>   |
| 14 | RH Avionics           | <i>ON</i>   |
| 15 | RH Crossbus           | <i>ON</i>   |
| 16 | RH Ammeter            | <i>CHECK Amps positive</i>  |
| 17 | RH Voltmeter          | <i>CHECK 12 to 14 Volt</i>  |
| 18 | RH Electric fuel pump | <i>OFF</i>  |

**Left engine starting**

- |   |                          |   |
|---|--------------------------|---|
| 1 | LH Throttle lever        | <i>IDLE</i>   |
| 2 | LH Carburetor heat       | <i>OFF</i>  |
| 3 | LH Propeller Lever       | <i>FULL FORWARD</i>   |
| 4 | LH Choke                 | <i>ON if required</i>   |
| 5 | LH Electrical Fuel pump  | <i>ON, check advisory light ON and positive fuel press build up</i> |
| 6 | LH engine propeller zone | <i>CHECK free</i>   |
| 7 | LH ignitions switches    | <i>BOTH ON</i>  |



*Ensure that the area around engine propeller disc is clear from people and obstacles. Call out for propeller free.*

- |    |                       |  |
|----|-----------------------|--|
| 8  | LH start pushbutton   | <i>PUSH</i>  |
| 9  | LH engine oil gauge   | <i>CHECK increasing within 10 sec. (max 7 bar in cold operation)</i> |
| 10 | LH Throttle lever     | <i>Advance to reach 1200 RPM</i>                                     |
| 11 | LH Choke              | <i>OFF</i>   |
| 12 | LH Field              | <i>ON</i>  |
| 13 | LH Avionics           | <i>ON</i>  |
| 14 | LH Crossbus           | <i>ON</i>  |
| 15 | LH Ammeter            | <i>CHECK Amps positive</i>   |
| 16 | LH Voltmeter          | <i>CHECK 12 to 14 Volt</i>   |
| 17 | LH Electric fuel pump | <i>OFF</i>   |

**3.5. BEFORE TAXIING**

- |   |  |                        |
|---|--|------------------------|
| 1 | Let the engines warm up to a minimum oil temperature of 50°C at 1200 RPM |                        |
| 2 | Nav and taxi lights  | <i>ON</i>              |
| 3 | Audio panel  | <i>ON</i>              |
| 4 | COM  | <i>ON</i>              |
| 5 | NAV  | <i>ON</i>              |
| 6 | Transponder  | <i>Standby</i>         |
| 7 | Passengers and crews seat belts  | <i>Fastened</i>        |
| 8 | Passengers and crews headphones  | <i>Set as required</i> |

**3.6. TAXIING**



*Ensure that the main and passengers' doors warning lights are turned off.*

- |   |                         |  |
|---|-------------------------|--|
| 1 | LH/RH Fuel Selector     | <i>As required</i>                                       |
| 2 | LH and RH fuel pressure | <i>Monitor</i>   |
| 3 | Parking Brake           | <i>RELEASE</i>   |
| 4 | Flight instruments      | <i>CHECK</i>   |
| 5 | Engine instruments      | <i>CHECK</i>   |
| 6 | Altimeter               | <i>SET both and crosscheck<br/>max difference 150 ft</i> |
| 7 | Brakes                  | <i>TEST</i>  |



**3.7. PRIOR TO TAKEOFF**

- |    |   |  |
|----|---|--|
| 1  | Parking Brake   | <i>ENGAGED</i>   |
| 2  | RH Fuel Selector  | <i>RIGHT</i>   |
| 3  | LH Fuel Selector  | <i>LEFT</i>  |
| 4  | LH and RH fuel pressure   | <i>CHECK</i>   |
| 5  | LH and RH Engine parameters checks:                                   |  |
|    | • Oil temperature:  | 90° - 110°C<br><i>(or 50 - 130 °C, if MOD2006/002 is applied)</i>  |
|    | • CHT / CT:   | 50° - 135°C / 50 - 120°C   |
|    | • Oil pressure:   | 2-5 bar (above 1400 RPM): 0.8 bar (below 1400 RPM)   |
|    | • Fuel pressure:  | 2.2 – 5.8 psi (0.15 - 0.40 bar)<br>*2.2 – 7.26 psi (0.15 – 0.50 bar)   |
|    | <i>*applicable for fuel pump part no.893110, 893114 and no.893115</i> |  |
| 6  | LH and RH Generator lights  | <i>CHECK BOTH OFF</i>  |
| 7  | LH and RH Propeller Lever   | <i>FULL FORWARD</i>  |
| 8  | LH and RH Throttle Lever  | <i>1650 RPM</i>  |
| 9  | RH Ignitions switches   | <i>Set L / R / BOTH (RPM drop with single ignition circuit selected must not exceed 130 prop's RPM; maximum RPM difference by use of either LH or RH circuits cannot exceed 50 RPM)</i>  |
| 10 | RH Propeller Lever  | <i>GOVERNOR CHECK</i><br><i>a) Reduce prop speed to 1200 RPM;</i><br><i>b) move propeller lever back to full forward position;</i><br><i>c) repeat a) and b) 3 times;</i><br><i>d) verify that the governor closely and firmly controls the RPM;</i><br><i>e) verify that 1650 prop RPM are restored with prop lever in full forward position.</i> |



*Do not cause the propeller speed drop below 1150 RPM in any case.*

- |    |                       |  |
|----|-----------------------|--|
| 11 | RH Carburettor heat   | <i>ON, verify propeller RPM decreasing about 100 RPM</i> |
| 12 | RH Carburettor heat   | <i>OFF</i>   |
| 13 | RH engine instruments | <i>CHECK parameters within green arcs</i>                |

- |    |                       |   |
|----|-----------------------|---|
| 14 | LH Ignitions switches | <i>Set L / R / BOTH (RPM drop with single ignition circuit selected must not exceed 130 prop's RPM; maximum RPM difference by use of either circuits LEFT or RIGHT cannot overcome 50 RPM)</i>  |
| 15 | RH Propeller Lever    | <p><b>GOVERNOR CHECK</b></p> <p><i>f) Reduce prop speed to 1200 RPM;</i></p> <p><i>g) move propeller lever back to full forward position;</i></p> <p><i>h) repeat a) and b) 3 times;</i></p> <p><i>i) verify that the governor closely and firmly controls the RPM;</i></p> <p><i>j) verify that 1650 prop RPM are restored with prop lever in full forward position.</i></p> |

**NOTE**

*Do not cause the propeller speed drop below 1150 RPM in any case.*

- |    |   |  |
|----|---|--|
| 16 | LH Carburettor heat                             | <i>ON, verify propeller RPM decreasing about 100 RPM</i>         |
| 17 | LH Carburettor heat                             | <i>OFF</i>   |
| 18 | LH engine instruments                           | <i>CHECK parameters within green arcs</i>                        |
| 19 | LH and RH Fuel quantity indicator               | <i>CHECK consistent with fuel plan</i>                           |
| 20 | Flaps   | <i>T/O or as required (see Section 5, Take OFF performances)</i> |
| 21 | Pitch trim and rudder trim                      | <i>SET neutral position</i>                                      |
| 22 | Flight controls                                 | <i>Check free</i>  |
| 23 | Seat belts fastened and doors closed and locked | <i>CHECK</i>   |

**3.8. LINE-UP**

- |   |                   |  |
|---|-------------------|--|
| 1 | Parking Brake     | <i>RELEASE, check full in</i>          |
| 2 | Annunciator panel | <i>CHECK cautions and warnings OFF</i> |
| 3 | RH Fuel Selector  | <i>RIGHT</i>                           |
| 4 | LH Fuel Selector  | <i>LEFT</i>                            |
| 5 | Pitot heat        | <i>as required</i>                     |
| 6 | Transponder       | <i>SET ALT</i>                         |
| 7 | Magnetic compass  | <i>CHECK</i>                           |
| 8 | Heading indicator | <i>CROSS CHECK</i>                     |

**3.9. TAKEOFF AND CLIMB**

- |                     |                                     |  |                    |                     |                     |                     |
|---------------------|-------------------------------------|--|--------------------|---------------------|---------------------|---------------------|
| 1                   | Landing light                       | <i>ON</i>  |                    |                     |                     |                     |
| 2                   | LH and RH Electrical Fuel pump      | <i>BOTH ON</i>   |                    |                     |                     |                     |
| 3                   | Carburettors heat                   | <i>CHECK OFF</i>   |                    |                     |                     |                     |
| 4                   | LH and RH Propeller Lever           | <i>FULL FORWARD</i>  |                    |                     |                     |                     |
| 5                   | LH and RH Throttle Lever            | <i>FULL POWER</i>  |                    |                     |                     |                     |
| 6                   | Engines instruments                 | <i>Parameters within green arcs</i>  |                    |                     |                     |                     |
| 7                   | Rotation speed                      | <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;"><b>MTOW 1180kg</b></td> <td style="text-align: center;"><b>MTOW 1230 kg</b></td> </tr> <tr> <td style="text-align: center;"><i>Vr = 64 KIAS</i></td> <td style="text-align: center;"><i>Vr = 65 KIAS</i></td> </tr> </table> | <b>MTOW 1180kg</b> | <b>MTOW 1230 kg</b> | <i>Vr = 64 KIAS</i> | <i>Vr = 65 KIAS</i> |
| <b>MTOW 1180kg</b>  | <b>MTOW 1230 kg</b>                 |  |                    |                     |                     |                     |
| <i>Vr = 64 KIAS</i> | <i>Vr = 65 KIAS</i>                 |  |                    |                     |                     |                     |
| 8                   | Apply brakes to stop wheel spinning |  |                    |                     |                     |                     |
| 9                   | Landing gear control knob           | <i>UP: check green lights and TRANS light turned OFF within about 20"</i>  |                    |                     |                     |                     |
| 10                  | Landing and taxi light              | <i>OFF when required</i>   |                    |                     |                     |                     |
| 11                  | LH and RH Propeller Lever           | <i>Set max cont power at safe altitude</i>   |                    |                     |                     |                     |



*Max take off power must be limited to 5 minutes. Reduce Throttles MAP power before retracting Propeller to 2200 RPM or below.*

- |    |                                |                 |
|----|--------------------------------|-----------------|
| 12 | LH and RH Electrical Fuel pump | <i>BOTH OFF</i> |
|----|--------------------------------|-----------------|



*It is recommended to retract landing gear when a positive climb rate is ensured at the applicable best speed ( $V_Y$  or  $V_X$  as necessary). It has been demonstrated that best climb rate is always obtained with flaps in UP position: refer to Section 5, "Take off rate of climb" and "Enroute rate of climb" tables.*

*Noteworthy best climb gradient speed ( $V_X$ ) flaps UP is lower than best climb speed ( $V_X$ ) flaps T/O up to 6000 ft (density altitude). Refer to Section 5, "Best climb gradient speed" table.*

### 3.10. CRUISE

- 1 LH and RH Propeller Lever *SET to 1900-2250 RPM*



**CAUTION**

*Throttles MAP decrease should be made before propeller speed reduction below 2200 RPM, as, contrariwise, Propeller Lever increase RPM should be set before engine Throttle Levers are advanced.*

- 2 Engine parameters check (LH and RH)

- Oil temperature: *90° - 110 °C*  
*(or 50° - 130° C, if MOD2006/002 is applied)*
- CHT / CT: *50° - 135° / 50° - 120 °C*
- Oil pressure: *2 - 5 bar.*
- Fuel pressure: *2.2 - 5.8 psi \*2.2 - 7.26 psi (0.15 - 0.50 bar)*  
*\*applicable for fuel pump part no.893110, 893114 and no.893115*

- 3 Carburettor heat as needed *(see also instructions addressed on Section 3*



**WARNING**

*Deselect and do not use Auto Pilot if possible icing condition area is inadvertently entered.*

- 4 Fuel balance and crossfeed *check as necessary*



**NOTE**

*To evaporate possibly accumulated condensation water, once per flight day (for approximately 5 minutes) 100° C (212° F) oil temperature must be reached.*

### 3.11. TURBULENT AIR OPERATION

In keeping with good operating practice used in all aircraft, it is recommended that when turbulent air is encountered or expected, the airspeed be reduced to maneuvering speed to reduce the structural loads caused by gusts and to allow for inadvertent speed build-ups, which may occur as a result of the turbulence or of distractions caused by the conditions.

### 3.12. DESCENT AND APPROACH

- 1 Propellers *As required*



**NOTE**

*In order to control engine cooling and life, it is preferable to descend with power above idle and RPM lower than full continuous.*

- 2 Carburettors heat *As required*  
 3 Altimeter setting *QNH set and crosscheck*  
 4 Rear passengers seats *Set at full aft position*

**3.13. BEFORE LANDING**

- |                                |  |  |                     |                                |                                |                               |
|--------------------------------|--|--|---------------------|--------------------------------|--------------------------------|-------------------------------|
| 1                              | LH and RH Electrical Fuel pump   | <i>BOTH ON</i>   |                     |                                |                                |                               |
| 2                              | On downwind leg:   |  |                     |                                |                                |                               |
| 3                              | <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td><b>MTOW 1180kg</b></td> <td><b>MTOW 1230 kg</b></td> </tr> <tr> <td><i>V<sub>FE</sub>= 119KIAS</i></td> <td><i>V<sub>FE</sub>=122KIAS</i></td> </tr> </table> | <b>MTOW 1180kg</b>   | <b>MTOW 1230 kg</b> | <i>V<sub>FE</sub>= 119KIAS</i> | <i>V<sub>FE</sub>=122KIAS</i>  | <i>Flaps T/O</i>              |
|                                | <b>MTOW 1180kg</b>   | <b>MTOW 1230 kg</b>  |                     |                                |                                |                               |
| <i>V<sub>FE</sub>= 119KIAS</i> | <i>V<sub>FE</sub>=122KIAS</i>  |  |                     |                                |                                |                               |
|                                | <i>Speed below applicable VLO/VLE</i>  |  |                     |                                |                                |                               |
|                                |  | <i>Landing gear control knob - DOWN -<br/>Check green lights ON</i>  |                     |                                |                                |                               |
| 4                              | Carburettors heat  | <i>CHECK OFF</i>   |                     |                                |                                |                               |
| 5                              | LH and RH Propeller Lever  | <i>FULL FORWARD</i>  |                     |                                |                                |                               |
| 6                              | On final leg: speed below 93 KIAS  | <i>Flaps FULL</i>  |                     |                                |                                |                               |
| 7                              | Final Approach Speed   |  |                     |                                |                                |                               |
| 8                              |  | <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td><b>MTOW 1180kg</b></td> <td><b>MTOW 1230 kg</b></td> </tr> <tr> <td><i>V<sub>APP</sub>= 70KIAS</i></td> <td><i>V<sub>APP</sub>=71KIAS</i></td> </tr> </table> | <b>MTOW 1180kg</b>  | <b>MTOW 1230 kg</b>            | <i>V<sub>APP</sub>= 70KIAS</i> | <i>V<sub>APP</sub>=71KIAS</i> |
|                                | <b>MTOW 1180kg</b>   | <b>MTOW 1230 kg</b>  |                     |                                |                                |                               |
| <i>V<sub>APP</sub>= 70KIAS</i> | <i>V<sub>APP</sub>=71KIAS</i>  |  |                     |                                |                                |                               |
|                                |  |  |                     |                                |                                |                               |
|                                | Landing and taxi light   | <i>ON</i>  |                     |                                |                                |                               |
| 9                              | Touchdown speed  | <i>65 KIAS</i>   |                     |                                |                                |                               |

**3.14. BALKED LANDING/MISSED APPROACH**

- |   |                           |                     |
|---|---------------------------|---------------------|
| 1 | LH and RH Propeller Lever | <i>FULL FORWARD</i> |
| 2 | LH and RH Throttle Lever  | <i>FULL POWER</i>   |



*Propeller Lever increase to max RPM should be attained before engine Throttle Levers are advanced to max take off power. Max take off power must be limited to 5 minutes.*

- |   |              |   |
|---|--------------|---|
| 3 | Flaps        | <i>T/O</i>                              |
| 4 | Speed        | <i>AS REQUIRED (see Note)</i>           |
| 5 | Landing gear | <i>UP as positive climb is achieved</i> |
| 6 | Flaps        | <i>UP</i>                               |



*It is recommended to retract landing gear when a positive climb rate is ensured at the applicable best speed (V<sub>Y</sub> or V<sub>X</sub> as necessary). It has been demonstrated that best climb rate is always obtained with flaps in UP position: refer to Section 5, "Take off rate of climb" and "Enroute rate of climb" tables. Noteworthily best climb gradient speed (V<sub>X</sub>) flaps UP is lower than best climb speed (V<sub>X</sub>) flaps T/O up to 6000 ft (density altitude). Refer to Section 5, "Best climb gradient speed" table.*

**3.15. AFTER LANDING**

- |   |                                |                          |
|---|--------------------------------|--------------------------|
| 1 | LH and RH Electrical Fuel pump | <i>BOTH OFF</i>          |
| 2 | Flaps                          | <i>0°</i>                |
| 3 | Pitot Heat                     | <i>OFF</i>               |
| 4 | Landing light                  | <i>OFF when required</i> |

**3.16. PARKING/SHUT DOWN**



*It is always suggested to park the aircraft with the nose pointing into wind to improve cooling after shut down.*

- |   |               |  |
|---|---------------|--|
| 1 | Parking brake | <i>Engage</i>  |
| 2 | Taxi light    | <i>OFF</i>   |
| 3 | Engines       | <i>Allow for cooling down 1 minute at idle power</i> |
| 4 | Flaps         | <i>Check UP</i>                                      |
| 5 | Trims         | <i>Check neutral</i>                                 |



*Ensure the engine is at its lowest possible idle speed before selecting ignitions off.*

- |    |  |                               |
|----|--|-------------------------------|
| 6  | Ignition switches                                  | <i>Turn OFF one at a time</i> |
| 7  | LH and RH AVIONIC BUS                              | <i>OFF</i>                    |
| 8  | LH and RH CROSS BUS                                | <i>OFF</i>                    |
| 9  | LH/RH Field  | <i>OFF</i>                    |
| 10 | All external lights switches                       | <i>OFF</i>                    |
| 11 | Master Switch                                      | <i>OFF</i>                    |
| 12 | Emg Batt / Emg cockpit light /<br>Emg ADI switches | <i>Check OFF</i>              |



*Before disembarkation verify propellers are fully stopped.*



*Instruct passengers to fully open pax door (against nacelle stop) and depart alongside aircraft fuselage, avoiding contact with hot / oily parts such as engine exhaust pipes, drainage tubes and wheel brakes, or sharp wing control surfaces edges.*



*Crew should avoid propeller disc area crossing while proceeding alongside a fully opened pilot's door (up to 110°).*

**3.17. POSTFLIGHT CHECKS**

- |   |  |                          |
|---|--|--------------------------|
| 1 | Protective cover for Pitot tubes, stall warning and static port plugs. | <i>Install</i>           |
| 2 | Lock one control wheel with safety belt.                               |                          |
| 3 | Wheel chocks   | <i>Place under MLG</i>   |
| 4 | Aileron lock   | <i>Place and tighten</i> |
| 5 | Pilot and passengers doors.  | <i>Close and latch</i>   |



### 3. GROUND TOWING, PARKING AND MOORING

#### 4.1 TOWING



**CAUTION**

*Before to move the a/c on the ground, the Master Switch must be turned ON for at least 5 seconds.*

To tow the aircraft it is necessary to use a metal stiff bar connected to the nose gear.



**WARNING**

*Do not turn nose wheel above 20° either side of center: greater steering angles can damage the wheel stop. The tow bar must be removed before engines starting.*

#### 4.2 PARKING

##### General

Under normal weather conditions, the airplane may be parked and headed in a direction that will facilitate servicing without regard to prevailing winds. Ensure that it is sufficiently protected against adverse weather conditions and present no danger to other aircraft.

##### Procedure

1. Position airplane on levelled surface, headed into the prevailing wind, if practical.
2. Engage parking brake and install control locks
3. Secure pilot control wheel by wrapping the seat belt around it.

**NOTE:**

*Do not engage the parking brakes at low ambient temperature; accumulation of moisture may cause the brakes to freeze. In this case use wheel chocks.*

In case of long time parking or overnight parking, it is recommended to moor the a/c as shown on Para. 4.3.



**CAUTION**

*Mooring is strongly recommended when the wind is more than 15 knots and the a/c is completely refuelled.*

#### 4.3 MOORING

The aircraft is moored to insure its immovability, protection, and security under various weather conditions.



**CAUTION**

*Mooring is strongly recommended when the wind is more than 15 knots and the a/c is completely refuelled.*

**Procedure**

1. Position airplane on levelled surface and headed into the prevailing wind.
2. Center nose wheel, engage parking brake and/or use the wheel chocks.


**NOTE:**

*Do not engage the parking brakes at low ambient temperature; accumulation of moisture may cause the brakes to freeze. In this case use wheel chocks.*


3. Secure pilot control wheel by wrapping the seat belt around it
4. Assure flaps are retracted
5. Electrically ground airplane, by connecting ground cable to the engine muffle
6. Install control locks and protective plugs.
7. Close and lock cabin doors.
8. Secure tie-down cables to the nose gear leg (in correspondence of the wheel fork) and to the wings and tail cone tie-down rings at approximately 45 degree with respect to the ground. (Refer to following figures)

**NOTE:**

*Additional preparation for high winds includes tie-down ropes from the main landing gear forks employment.*

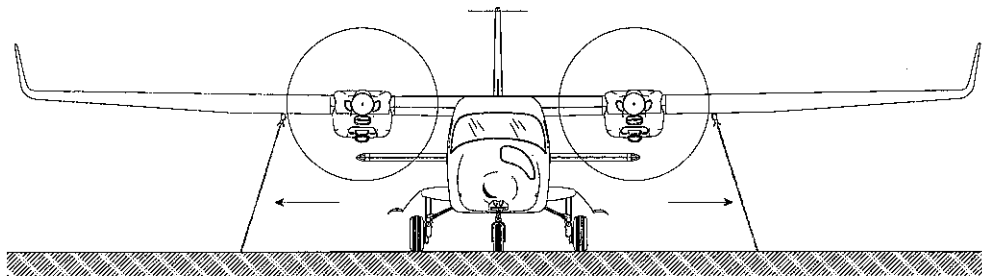

**Mooring – front view**

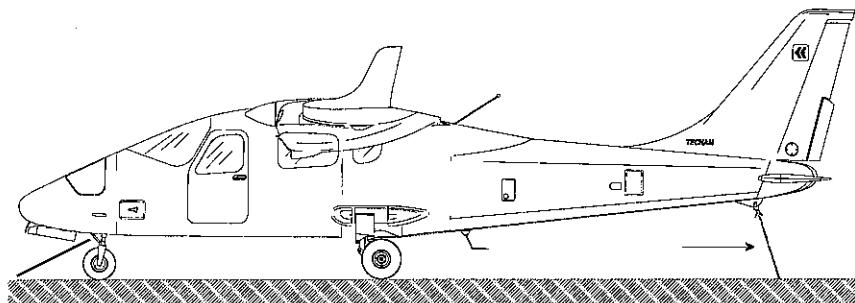

**Mooring – side view**

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

## SECTION 5 - PERFORMANCES

### INDEX

1. Introduction .....	2
2. Use of performances charts .....	2
3. Airspeed indicator system calibration .....	3
4. ICAO Standard Atmosphere.....	4
5. <i>Examples:</i> .....	4
6. Stall speed .....	5
7. Crosswind .....	6
8. Takeoff performances .....	7
9. Take-off Rate of Climb at $V_y$ .....	10
10. Take-off Rate of Climb at $V_x$ .....	11
11. Enroute Rate of Climb at $V_y$ .....	12
12. Enroute Rate of Climb at $V_x$ .....	13
13. One-Engine Rate of Climb at $V_{ySE}$ .....	14
14. One-Engine Rate of Climb at $V_{xSE}$ .....	15
15. Cruise performances .....	16
16. Landing performances .....	19
17. Balked landing climb gradient.....	22
18. Noise data.....	22

## **1. INTRODUCTION**

This section provides all necessary data for an accurate and comprehensive planning of flight activity from takeoff to landing.

Data reported in graphs and/or in tables were determined using:

- “Flight Test Data” under conditions prescribed by EASA CS-23 regulation
- aircraft and engine in good condition
- average piloting techniques

Each graph or table was determined according to ICAO Standard Atmosphere (ISA - s.l.); evaluations of the impact on performances were carried out by theoretical means for:

- \* airspeed
- \* external temperature
- \* altitude
- \* weight
- \* runway type and condition

## **2. USE OF PERFORMANCES CHARTS**

Performances data are presented in tabular or graphical form to illustrate the effect of different variables such as altitude, temperature and weight. Given information is sufficient to plan the mission with required precision and safety.

Additional information is provided for each table or graph.

### 3. AIRSPEED INDICATOR SYSTEM CALIBRATION

Graph shows calibrated airspeed  $V_{CAS}$  as a function of indicated airspeed  $V_{IAS}$ .

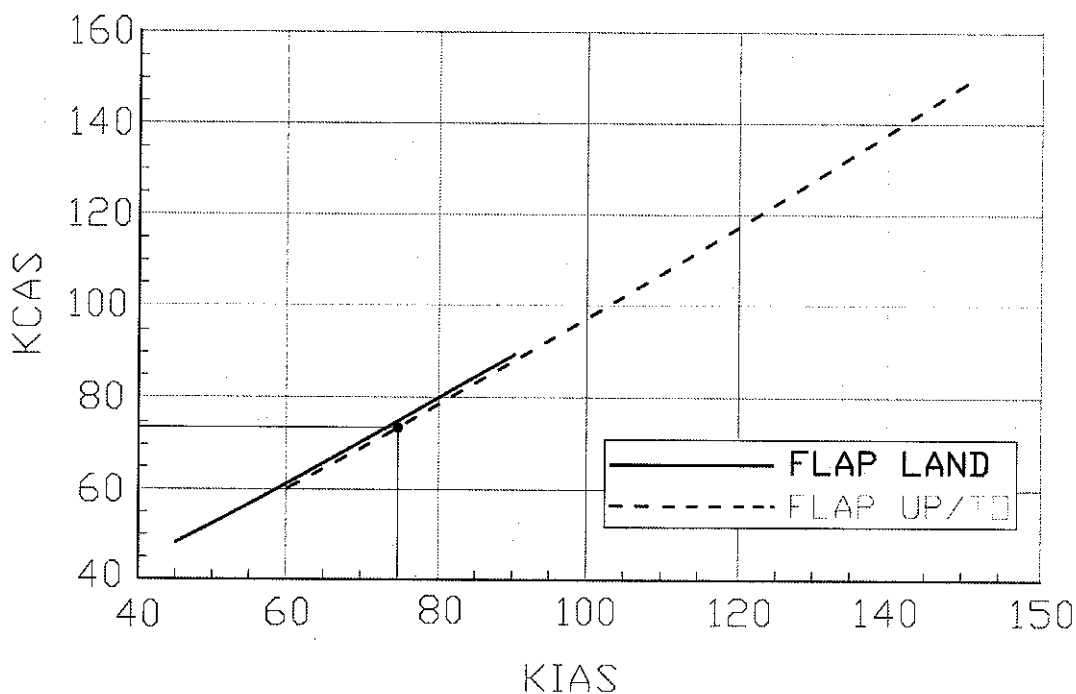


Figure 1 - IAS/CAS chart

Example:

**Given**

KIAS 75

**Find**

KCAS 74

**4. ICAO STANDARD ATMOSPHERE**

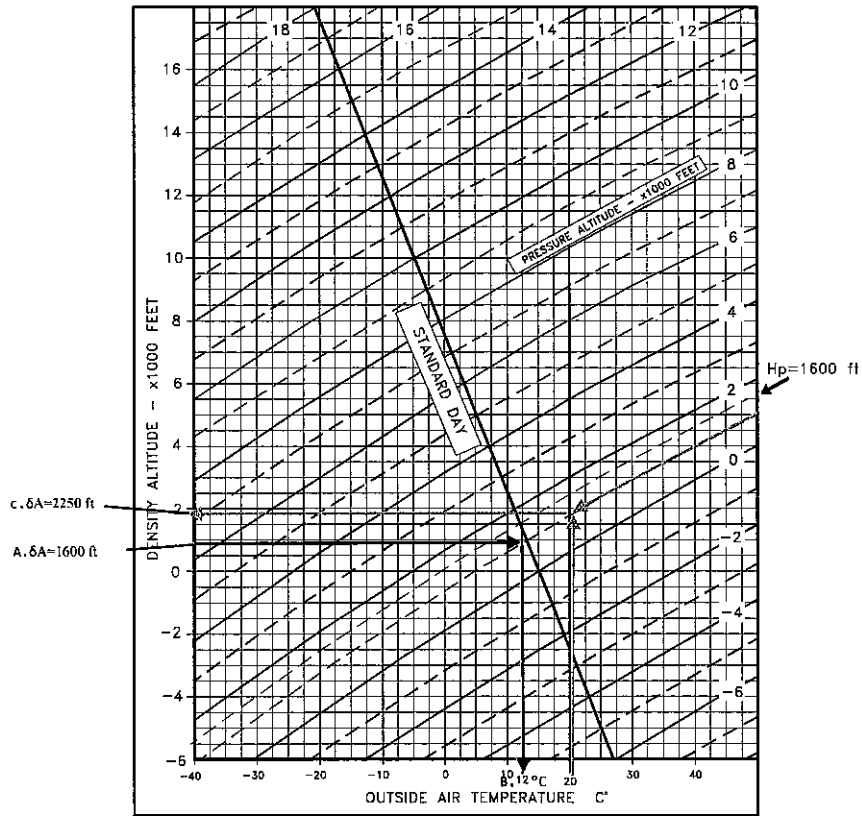


Figure 2 – ICAO chart

**5. EXAMPLES:**

<p><u>Given</u></p> <p>a. Temperature = 20°C</p> <p>b. Pressure altitude = 1600'</p>	}	→	<p><u>Find</u></p> <p>c. Corresponding Density Altitude = 2250'</p>
--	---	---	---

<p><u>Given</u></p> <p>A. Pressure altitude = 1600'</p> <p>ISA condition</p>	}	→	<p><u>Find</u></p> <p>B. ISA Air Temperature = 12°C</p>
--	---	---	---



## 6. STALL SPEED

<b>Weight: 1230 kg (2712 lb)</b> <b>Throttle Levers: IDLE</b> <b>Landing Gear: Down</b> <b>CG: Most Forward (16.5%)</b> <b>No ground effect</b>							
WEIGHT [kg]	BANK ANGLE [deg]	STALL SPEED					
		FLAPS 0°		FLAPS T/O		FLAPS FULL	
		KIAS	KCAS	KIAS	KCAS	KIAS	KCAS
1230 (FWD C.G.)	0	66	65	59	57	54	55
	15	67	66	58	58	55	56
	30	71	70	61	61	59	59
	45	79	78	68	68	65	65
	60	95	93	83	81	79	78

**NOTE**

*Altitude loss during conventional stall recovery, as demonstrated during flight tests is approximately 250 ft with banking below 30°.*

**7. CROSSWIND**

Maximum demonstrated crosswind is 17 Kts

⇒ Example:

**Given**

Wind direction (with respect to aircraft longitudinal axis) = 30°

Wind speed = 20 Kts

**Find**

Headwind = 17.5 Kts

Crosswind = 10 Kts

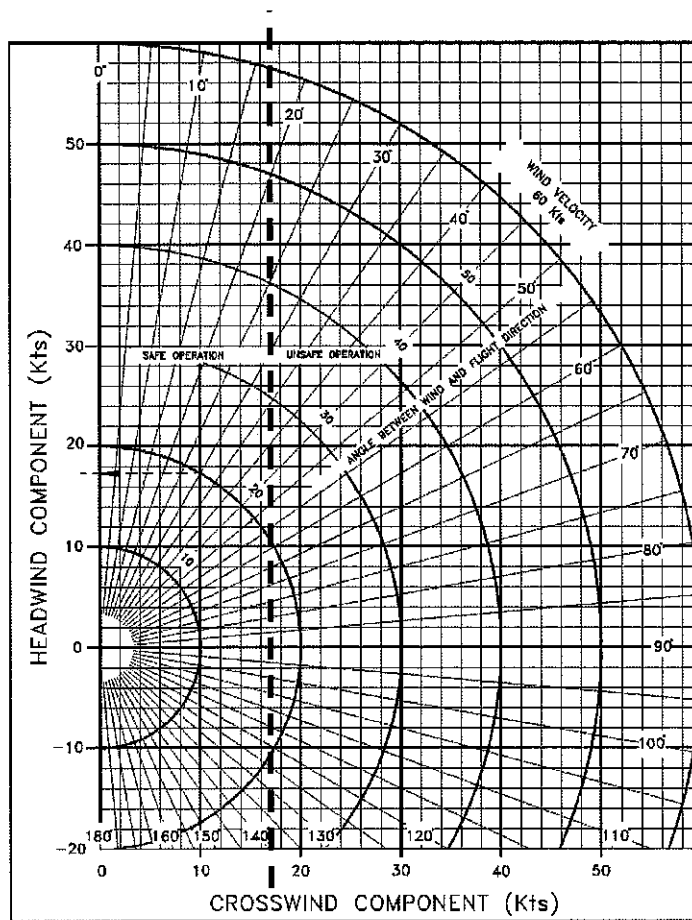


Figure 3 – Crosswind diagram

## 8. TAKEOFF PERFORMANCES

Pressure Altitude [ft]		Distance [m]				
		Temperature [°C]				ISA
		-25	0	25	50	
S.L.	Ground Roll	207	263	328	401	301
	At 50 ft AGL	271	345	429	525	394
1000	Ground Roll	231	294	366	447	330
	At 50 ft AGL	303	385	479	586	432
2000	Ground Roll	258	328	409	500	362
	At 50 ft AGL	338	430	535	654	474
3000	Ground Roll	289	367	457	559	398
	At 50 ft AGL	378	480	598	731	521
4000	Ground Roll	323	411	511	625	438
	At 50 ft AGL	423	537	669	818	573
5000	Ground Roll	362	460	572	700	481
	At 50 ft AGL	473	602	749	916	630
6000	Ground Roll	405	515	642	785	530
	At 50 ft AGL	531	675	840	1027	694
7000	Ground Roll	455	578	720	880	584
	At 50 ft AGL	595	757	942	1152	765
8000	Ground Roll	511	650	809	989	645
	At 50 ft AGL	669	850	1059	1295	844
9000	Ground Roll	575	730	909	1112	712
	At 50 ft AGL	752	956	1190	1456	932
10000	Ground Roll	647	822	1023	1252	786
	At 50 ft AGL	847	1076	1340	1638	1029

**Weight = 1230 kg (2712 lb)**

Flaps: T/O

Speed at Lift-Off = 65 KIAS

Speed Over 50ft Obstacle = 70 KIAS

Throttle Levers: Full Forward

Runway: Grass

**Corrections**

Headwind: - 2.5m for each kt (8 ft/kt)

Tailwind: + 10m for each kt (33ft/kt)

Paved Runway: - 6% to Ground Roll

Runway slope: + 5% to Ground Roll for each +1%

Pressure Altitude [ft]		Distance [m]					ISA
		Temperature [°C]					
		-25	0	25	50		
S.L.	Ground Roll	148	188	234	286	215	
	At 50 ft AGL	193	246	306	374	281	
1000	Ground Roll	165	210	261	319	235	
	At 50 ft AGL	216	274	341	418	308	
2000	Ground Roll	184	234	291	356	258	
	At 50 ft AGL	241	306	381	466	338	
3000	Ground Roll	206	262	326	398	284	
	At 50 ft AGL	269	342	426	521	372	
4000	Ground Roll	230	293	364	446	312	
	At 50 ft AGL	301	383	477	583	409	
5000	Ground Roll	258	328	408	499	343	
	At 50 ft AGL	338	429	534	653	449	
6000	Ground Roll	289	368	457	559	378	
	At 50 ft AGL	378	481	599	732	495	
7000	Ground Roll	324	412	513	628	417	
	At 50 ft AGL	425	540	672	822	545	
8000	Ground Roll	364	463	577	705	460	
	At 50 ft AGL	477	606	755	923	602	
9000	Ground Roll	410	521	648	793	508	
	At 50 ft AGL	536	682	849	1038	664	
10000	Ground Roll	461	586	730	893	561	
	At 50 ft AGL	604	767	955	1168	734	

**Weight = 1080 kg (2381 lb)**

Flaps: T/O  
 Speed at Lift-Off = 65 KIAS  
 Speed Over 50ft Obstacle = 70 KIAS  
 Throttle Levers: Full Forward  
 Runway: Grass

**Corrections**  
 Headwind: - 2.5m for each kt (8 ft/kt)  
 Tailwind: + 10m for each kt (33ft/kt)  
 Paved Runway: - 6% to Ground Roll  
 Runway slope: + 5% to Ground Roll for each +1%

**Section 5 - Performances**

**TAKEOFF PERFORMANCES**

Pressure Altitude [ft]		Distance [m]				
		Temperature [°C]				ISA
		-25	0	25	50	
S.L.	Ground Roll	100	127	158	194	146
	At 50 ft AGL	131	167	207	254	190
1000	Ground Roll	112	142	177	216	160
	At 50 ft AGL	146	186	231	283	209
2000	Ground Roll	125	159	197	242	175
	At 50 ft AGL	163	208	258	316	229
3000	Ground Roll	140	177	221	270	192
	At 50 ft AGL	183	232	289	353	252
4000	Ground Roll	156	198	247	302	212
	At 50 ft AGL	204	260	323	395	277
5000	Ground Roll	175	222	277	338	233
	At 50 ft AGL	229	291	362	443	305
6000	Ground Roll	196	249	310	379	256
	At 50 ft AGL	257	326	406	496	335
7000	Ground Roll	220	280	348	426	282
	At 50 ft AGL	288	366	455	557	370
8000	Ground Roll	247	314	391	478	312
	At 50 ft AGL	323	411	512	626	408
9000	Ground Roll	278	353	440	538	344
	At 50 ft AGL	364	462	575	704	450
10000	Ground Roll	313	397	495	605	380
	At 50 ft AGL	409	520	648	792	498

**Weight = 930 kg (2051 lb)**

Flaps: T/O

Speed at Lift-Off = 65 KIAS

Speed Over 50ft Obstacle = 70 KIAS

Throttle Levers: Full Forward

Runway: Grass

**Corrections**

Headwind: - 2.5m for each kt (8 ft/kt)

Tailwind: + 10m for each kt (33ft/kt)

Paved Runway: - 6% to Ground Roll

Runway slope: + 5% to Ground Roll for each +1%

**Section 5 - Performances**

**TAKEOFF PERFORMANCES**

### 9. TAKE-OFF RATE OF CLIMB AT $V_y$

Power Setting: Maximum Continuous Power Flaps: Take-Off Landing Gear: Up							
Weight	Pressure Altitude	Climb Speed $V_y$	Rate of Climb [ft/min]				ISA
			Temperature [°C]				
[kg]	[ft]	[KIAS]	-25	0	25	50	
1230	S.L.	86	1276	1088	920	768	985
	2000	83	1133	948	783	634	873
	4000	79	990	809	646	500	761
	6000	76	848	670	510	366	649
	8000	73	707	531	374	233	537
	10000	70	565	393	239	100	425
	12000	67	425	256	104	-32	313
	14000	64	285	118	-30	-164	201
1080	S.L.	85	1507	1302	1119	954	1190
	2000	82	1351	1150	970	808	1068
	4000	79	1196	998	822	662	946
	6000	76	1041	847	674	517	825
	8000	73	887	696	526	372	703
	10000	69	734	546	379	228	581
	12000	66	581	397	232	84	459
	14000	63	428	248	86	-59	338
930	S.L.	85	1803	1575	1372	1189	1451
	2000	82	1630	1406	1206	1026	1315
	4000	79	1457	1238	1041	864	1180
	6000	75	1286	1070	877	703	1045
	8000	72	1114	902	713	542	909
	10000	69	944	735	549	382	774
	12000	65	774	569	387	222	639
	14000	62	604	404	224	63	503

**10. TAKE-OFF RATE OF CLIMB AT  $V_x$** 

Power Setting: Maximum Continuous Power Flaps: Take-Off Landing Gear: Up							
Weight	Pressure Altitude	Climb Speed $V_x$	Rate of Climb at $V_x$ [ft/min]				
			Temperature [°C]				ISA
[kg]	[ft]	[KIAS]	-25	0	25	50	
1230	S.L.	78	1214	1037	880	738	941
	1000	76	1147	972	816	675	888
	2000	75	1080	906	751	612	836
	3000	74	1013	841	687	549	783
	4000	73	946	776	623	486	731
	5000	72	879	710	560	424	678
	6000	71	813	645	496	361	626
	7000	70	746	580	432	299	574
1080	S.L.	78	1283	1102	940	794	1002
	1000	76	1214	1034	874	729	949
	2000	75	1145	967	808	664	895
	3000	74	1076	900	742	600	841
	4000	73	1008	833	676	535	787
	5000	72	939	766	611	471	733
	6000	71	871	699	545	407	679
	7000	70	803	632	480	342	625
930	S.L.	78	1435	1243	1072	918	1138
	1000	76	1362	1172	1002	849	1081
	2000	75	1289	1101	932	780	1024
	3000	74	1216	1030	863	712	967
	4000	73	1144	958	793	644	910
	5000	72	1071	888	724	576	853
	6000	71	999	817	654	508	796
	7000	69	927	746	585	440	739

**11. ENROUTE RATE OF CLIMB AT  $V_Y$** 

Power Setting: Maximum Continuous Power Flaps: Up Landing Gear: Up							
Weight	Pressure Altitude	Climb Speed $V_Y$	Rate of Climb [ft/min]				
			Temperature [°C]				ISA
[kg]	[ft]	[KIAS]	-25	0	25	50	
1230	S.L.	84	1317	1135	973	827	1036
	2000	83	1179	1000	841	697	928
	4000	81	1041	865	709	568	819
	6000	80	904	731	577	439	711
	8000	78	767	598	446	310	603
	10000	77	631	464	316	182	495
	12000	75	495	332	186	54	387
	14000	73	360	199	56	-73	279
1080	S.L.	83	1560	1360	1182	1022	1251
	2000	82	1408	1212	1037	879	1132
	4000	80	1257	1064	892	737	1014
	6000	78	1106	917	748	595	895
	8000	76	956	770	604	454	776
	10000	74	807	624	461	314	658
	12000	72	657	478	318	173	539
	14000	70	509	333	175	34	420
930	S.L.	82	1873	1649	1449	1269	1527
	2000	81	1703	1483	1286	1109	1393
	4000	79	1533	1317	1124	950	1260
	6000	77	1364	1151	962	791	1127
	8000	75	1196	987	800	632	994
	10000	73	1028	823	639	474	861
	12000	71	860	659	479	317	727
	14000	69	693	496	319	160	594



## 12. ENROUTE RATE OF CLIMB AT $V_x$

Power Setting: Maximum Continuous Power Flaps: Up Landing Gear: Up							
Weight [kg]	Pressure Altitude [ft]	Climb Speed $V_x$ [KIAS]	Rate of Climb at $V_x$ [ft/min]				ISA
			Temperature [°C]				
			-25	0	25	50	
1230	S.L.	72	1241	1073	924	789	982
	1000	72	1177	1011	863	729	932
	2000	72	1114	949	802	669	882
	3000	72	1050	887	741	609	832
	4000	72	986	825	680	550	782
	5000	72	923	763	619	490	732
	6000	71	860	701	559	431	682
	7000	71	797	639	498	371	632
1080	S.L.	72	1480	1295	1130	981	1194
	1000	72	1410	1226	1062	915	1139
	2000	72	1340	1158	995	848	1084
	3000	72	1269	1089	928	782	1029
	4000	71	1199	1020	861	717	973
	5000	71	1129	952	794	651	918
	6000	71	1059	884	727	585	863
	7000	71	990	815	660	520	808
930	S.L.	72	1787	1578	1391	1223	1463
	1000	72	1707	1500	1315	1148	1401
	2000	71	1628	1422	1239	1074	1339
	3000	71	1549	1345	1163	999	1277
	4000	71	1470	1268	1087	925	1215
	5000	71	1391	1190	1012	851	1153
	6000	71	1312	1113	936	777	1090
	7000	70	1233	1036	861	703	1028

### 13. ONE-ENGINE RATE OF CLIMB AT $V_{YSE}$

Power Setting: Maximum Continuous Power (operative engine) propeller feathered (inoperative engine)							
Flaps: Up							
Landing Gear: Up							
Weight [kg]	Pressure Altitude [ft]	Climb Speed $V_{YSE}$ [KIAS]	Rate of Climb [ft/min]				ISA
			Temperature [°C]				
			-25	0	25	50	
1230	S.L.	84	330	230	142	62	176
	1000	83	292	193	106	26	147
	2000	82	254	157	69	-9	117
	3000	81	216	120	33	-44	87
	4000	80	179	83	-3	-80	58
	5000	79	141	46	-38	-115	28
	6000	79	104	10	-74	-150	-1
	7000	78	67	-27	-110	-185	-31
1080	S.L.	80	436	330	235	149	271
	1000	80	396	290	196	111	240
	2000	79	355	251	157	73	208
	3000	79	315	211	118	35	176
	4000	79	275	172	80	-3	145
	5000	79	234	132	41	-41	113
	6000	78	194	93	3	-78	81
	7000	78	154	54	-35	-116	50
930	S.L.	79	574	455	349	253	390
	1000	79	529	411	305	211	355
	2000	79	483	367	262	168	319
	3000	78	438	322	219	126	284
	4000	78	393	278	176	83	248
	5000	78	348	235	133	41	213
	6000	78	304	191	90	-1	178
	7000	77	259	147	47	-43	142

**14. ONE-ENGINE RATE OF CLIMB AT  $V_{XSE}$**

Power Setting: Maximum Continuous Power (operative engine) propeller feathered (inoperative engine)								
Flaps: Up								
Landing Gear: Up								
Weight [kg]	Pressure Altitude [ft]	Climb Speed $V_{XSE}$ [KIAS]	Rate of Climb at $V_{XSE}$ [ft/min]					ISA
			Temperature [°C]				ISA	
			-25	0	25	50		
1230	S.L.	83	325	227	140	61	174	
	1000	82	288	191	104	26	145	
	2000	81	251	155	69	-9	116	
	3000	81	214	118	33	-44	86	
	4000	80	177	82	-2	-78	57	
	5000	79	140	46	-38	-113	28	
	6000	78	103	10	-73	-148	-1	
	7000	77	66	-26	-108	-183	-30	
1080	S.L.	79	424	321	229	147	265	
	1000	79	385	283	192	110	234	
	2000	79	346	245	155	73	204	
	3000	79	307	207	117	37	173	
	4000	79	268	169	80	0	143	
	5000	78	229	131	43	-36	112	
	6000	78	190	93	6	-73	81	
	7000	78	152	55	-31	-109	51	
930	S.L.	78	556	442	341	249	380	
	1000	78	513	400	299	209	346	
	2000	78	469	358	258	168	312	
	3000	78	426	316	217	128	279	
	4000	78	383	274	176	87	245	
	5000	78	340	232	134	47	211	
	6000	77	298	190	93	7	177	
	7000	77	255	148	52	-34	143	

## 15. CRUISE PERFORMANCES

Weight: 1150 kg (2535 lb)										
Pressure Altitude: 0 ft										
RPM*	MAP [inHg]	ISA - 30°C (-15°C)			ISA (15°C)			ISA + 30°C (45°C)		
		PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]
2250	29.5	103%	143	28.6	97%	145	27.1	92%	146	25.8
2250	28	88%	134	24.5	83%	136	23.2	79%	138	22
2250	26	69%	122	19.2	65%	124	18.2	62%	125	17.3
2250	24	59%	115	16.6	56%	116	15.7	53%	117	14.9
2250	22	46%	103	12.8	43%	103	12.1	41%	103	11.5
2250	20	39%	96	11	37%	95	10.4	35%	94	9.9
2100	28	84%	132	23.5	80%	134	22.2	76%	135	21.1
2100	26	66%	121	18.5	63%	122	17.5	60%	123	16.7
2100	24	57%	114	16	54%	114	15.1	52%	115	14.4
2100	22	43%	100	12.1	41%	100	11.5	39%	100	10.9
2100	20	37%	92	10.2	35%	91	9.7	33%	89	9.2
1900	26	61%	117	17.1	58%	118	16.2	55%	119	15.4
1900	24	53%	110	14.9	50%	111	14.1	48%	111	13.4
1900	22	41%	97	11.4	39%	97	10.8	37%	96	10.2
1900	20	35%	89	9.6	33%	88	9.1	31%	85	8.7

\* Propeller RPM  
\*\* Fuel Consumption for each Engine

**Weight: 1150 kg (2535 lb)**  
**Pressure Altitude: 3000 ft**

RPM*	MAP [inHg]	ISA - 30°C (-21°C)			ISA (9°C)			ISA + 30°C (39°C)		
		PWR	KTAS	F.C.** [lt/hr]	PWR	TCAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]
2388	26.4	92%	141	25.7	87%	143	24.3	83%	144	23.1
2250	26.4	89%	139	25	85%	141	23.6	80%	143	22.4
2250	26	85%	137	23.9	81%	138	22.6	77%	140	21.5
2250	24	72%	128	20	68%	129	18.9	64%	130	18
2250	22	57%	116	16	54%	117	15.1	51%	118	14.3
2250	20	48%	108	13.4	45%	108	12.7	43%	108	12.1
2100	26.4	85%	137	23.9	81%	138	22.6	77%	140	21.4
2100	26	82%	134	22.8	77%	136	21.6	73%	137	20.5
2100	24	69%	125	19.2	65%	127	18.1	62%	128	17.2
2100	22	54%	114	15.2	51%	114	14.3	49%	115	13.6
2100	20	45%	104	12.6	43%	104	11.9	41%	104	11.3
1900	26.4	78%	132	21.9	74%	134	20.7	70%	135	19.6
1900	26	75%	130	20.9	71%	131	19.8	67%	132	18.8
1900	24	63%	121	17.7	60%	122	16.7	57%	123	15.9
1900	22	50%	110	14.1	48%	110	13.3	45%	110	12.6
1900	20	42%	101	11.7	40%	101	11.1	38%	100	10.6

\* Propeller RPM  
\*\* Fuel Consumption for each Engine

**Weight: 1150 kg (2535 lb)**  
**Pressure Altitude: 6000 ft**

RPM*	MAP [inHg]	ISA - 30°C (-27°C)			ISA (3°C)			ISA + 30°C (33°C)		
		PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]
2388	23.6	83%	139	23.3	79%	141	22	75%	142	20.9
2250	23.6	81%	138	22.6	76%	139	21.4	73%	141	20.3
2250	22	68%	129	19.1	65%	130	18.1	61%	131	17.2
2250	20	57%	119	15.8	54%	120	14.9	51%	120	14.2
2250	18	46%	108	12.9	44%	108	12.2	41%	107	11.6
2100	23.6	77%	135	21.6	73%	137	20.4	69%	138	19.4
2100	22	65%	126	18.2	62%	127	17.2	59%	128	16.4
2100	20	54%	116	15	51%	116	14.1	48%	117	13.4
2100	18	44%	106	12.4	42%	106	11.7	40%	105	11.1
1900	23.6	71%	130	19.8	67%	132	18.7	64%	133	17.8
1900	22	60%	122	16.8	57%	123	15.8	54%	123	15
1900	20	50%	112	13.9	47%	112	13.1	44%	112	12.4
1900	18	41%	102	11.6	39%	102	10.9	37%	100	10.4

\* Propeller RPM  
\*\* Fuel Consumption for each Engine

## Section 5 - Performances

### CRUISE PERFORMANCES

**Weight: 1150 kg (2535 lb)**  
**Pressure Altitude: 9000 ft**

RPM*	MAP [inHg]	ISA - 30°C (-33°C)			ISA (-3°C)			ISA + 30°C (27°C)		
		PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]
2388	21.1	75%	137	20.9	71%	139	19.7	67%	140	18.7
2250	21.1	73%	136	20.3	69%	137	19.2	65%	138	18.2
2250	20	65%	130	18.3	62%	131	17.2	58%	131	16.3
2250	18	53%	118	14.9	50%	119	14	48%	118	13.3
2100	21.1	69%	133	19.4	65%	134	18.3	62%	135	17.4
2100	20	62%	127	17.4	59%	128	16.4	56%	128	15.6
2100	18	51%	116	14.2	48%	116	13.4	46%	116	12.7
1900	21.1	64%	128	17.8	60%	129	16.8	57%	130	15.9
1900	20	57%	122	16	54%	123	15.1	51%	123	14.3
1900	18	47%	112	13.2	44%	112	12.4	42%	111	11.8

\* Propeller RPM  
 \*\* Fuel Consumption for each Engine

**Weight: 1150 kg (2535 lb)**  
**Pressure Altitude: 12000 ft**

RPM*	MAP [inHg]	ISA - 30°C (-39°C)			ISA (-9°C)			ISA + 30°C (21°C)		
		PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]	PWR	KTAS	F.C.** [lt/hr]
2388	18.8	67%	135	18.8	63%	136	17.7	60%	136	16.7
2250	18.8	65%	133	18.2	61%	134	17.2	58%	134	16.3
2250	18	60%	129	16.8	57%	129	15.9	54%	129	15
2100	18.8	62%	130	17.4	59%	131	16.4	56%	132	15.5
2100	18	58%	126	16.1	54%	126	15.2	51%	126	14.4
1900	18.8	57%	125	15.9	54%	126	15	51%	126	14.2
1900	18	53%	121	14.8	50%	121	13.9	47%	121	13.2

\* Propeller RPM  
 \*\* Fuel Consumption for each Engine

## Section 5 - Performances

### CRUISE PERFORMANCES

## 16. LANDING PERFORMANCES

Pressure Altitude [ft]		Distance [m]				
		Temperature [°C]				ISA
		-25	0	25	50	
S.L.	Ground Roll	199	219	239	259	231
	At 50 ft AGL	308	334	359	384	349
1000	Ground Roll	206	227	248	269	238
	At 50 ft AGL	318	344	370	396	358
2000	Ground Roll	214	236	257	279	245
	At 50 ft AGL	328	355	382	408	367
3000	Ground Roll	222	244	267	289	252
	At 50 ft AGL	348	377	406	434	385
4000	Ground Roll	230	254	277	300	260
	At 50 ft AGL	348	377	406	434	385
5000	Ground Roll	239	263	287	311	268
	At 50 ft AGL	359	389	419	448	395
6000	Ground Roll	248	273	298	323	276
	At 50 ft AGL	371	402	432	463	405
7000	Ground Roll	258	284	310	336	285
	At 50 ft AGL	382	415	446	478	416
8000	Ground Roll	268	295	322	349	294
	At 50 ft AGL	395	428	461	494	427
9000	Ground Roll	278	306	334	362	303
	At 50 ft AGL	408	442	476	510	438
10000	Ground Roll	289	318	348	377	313
	At 50 ft AGL	421	457	492	527	450

**Weight = 1230 kg (2712 lb)**

Flaps: *LAND*

Short Final Approach Speed = 70 KIAS

Throttle Levers: *Idle*

Runway: *Grass*

**Corrections**

Headwind: - 5m for each kt (16 ft/kt)

Tailwind: + 11m for each kt (36ft/kt)

Paved Runway: - 2% to Ground Roll

Runway slope: - 2.5% to Ground Roll for each +1%

Pressure Altitude [ft]		Distance [m]					ISA
		Temperature [°C]					
		-25	0	25	50		
S.L.	Ground Roll	175	192	210	227	203	
	At 50 ft AGL	271	293	315	337	306	
1000	Ground Roll	181	199	218	236	209	
	At 50 ft AGL	279	302	325	348	314	
2000	Ground Roll	188	207	226	245	215	
	At 50 ft AGL	288	311	335	358	322	
3000	Ground Roll	195	215	234	254	222	
	At 50 ft AGL	306	331	356	381	338	
4000	Ground Roll	202	223	243	263	228	
	At 50 ft AGL	306	331	356	381	338	
5000	Ground Roll	210	231	252	273	235	
	At 50 ft AGL	315	342	368	394	347	
6000	Ground Roll	218	240	262	284	243	
	At 50 ft AGL	325	353	380	406	356	
7000	Ground Roll	226	249	272	295	250	
	At 50 ft AGL	336	364	392	420	365	
8000	Ground Roll	235	259	283	306	258	
	At 50 ft AGL	347	376	405	434	375	
9000	Ground Roll	244	269	294	318	266	
	At 50 ft AGL	358	388	418	448	385	
10000	Ground Roll	254	280	305	331	275	
	At 50 ft AGL	370	401	432	463	395	

**Weight = 1080 kg (2381lb)**

**Flaps: LAND**  
**Short Final Approach Speed = 70 KIAS**  
**Throttle Levers: Idle**  
**Runway: Grass**

**Corrections**

**Headwind: - 5m for each kt (16 ft/kt)**  
**Tailwind: + 11m for each kt (36ft/kt)**  
**Paved Runway: - 2% to Ground Roll**  
**Runway slope: - 2.5% to Ground Roll for each +1%**

**Section 5 - Performances**

**LANDING PERFORMANCES**



Pressure Altitude [ft]		Distance [m]				
		Temperature [°C]				ISA
		-25	0	25	50	
S.L.	Ground Roll	150	166	181	196	175
	At 50 ft AGL	233	252	271	290	264
1000	Ground Roll	156	172	187	203	180
	At 50 ft AGL	240	260	280	299	270
2000	Ground Roll	162	178	194	211	185
	At 50 ft AGL	248	268	288	309	277
3000	Ground Roll	168	185	202	219	191
	At 50 ft AGL	263	285	307	328	291
4000	Ground Roll	174	192	209	227	197
	At 50 ft AGL	263	285	307	328	291
5000	Ground Roll	181	199	217	235	203
	At 50 ft AGL	272	294	317	339	299
6000	Ground Roll	188	207	226	244	209
	At 50 ft AGL	280	304	327	350	307
7000	Ground Roll	195	215	234	254	215
	At 50 ft AGL	289	313	338	361	315
8000	Ground Roll	203	223	243	264	222
	At 50 ft AGL	299	324	349	373	323
9000	Ground Roll	210	232	253	274	229
	At 50 ft AGL	308	334	360	386	331
10000	Ground Roll	219	241	263	285	237
	At 50 ft AGL	319	346	372	399	340

**Weight = 930 kg (2051lb)**

Flaps: *LAND*  
 Short Final Approach Speed = 70 KIAS  
 Throttle Levers: *Idle*  
 Runway: *Grass*

**Corrections**

Headwind: - 5m for each kt (16 ft/kt)  
 Tailwind: + 11m for each kt (36ft/kt)  
 Paved Runway: - 2% to Ground Roll  
 Runway slope: - 2.5% to Ground Roll for each +1%

**Section 5 - Performances**

**LANDING PERFORMANCES**

## **17. BALKED LANDING CLIMB GRADIENT**

Flight conditions (ISA and SL):

<b>Weight:</b>	<i>1230 kg (2712 lb)</i>
<b>Throttle levers</b>	<i>Both FULL FORWARD</i>
<b>Flaps</b>	<i>T/O</i>
<b>Landing gear</b>	<i>DOWN</i>
<b>Weight</b>	<i>MTOW 1230kg (2712 lb)</i>
<b>Speed</b>	<i>72 KIAS</i>
<b>Climb gradient</b>	<i>9.4% (5.4°)</i>

## **18. NOISE DATA**

Noise level, determined in accordance with ICAO/Annex 16 4th Ed., July 2005, Vol. I°, Chapter 10, is **72.82** dB(A).



**SECTION 6 – WEIGHT and BALANCE**

**INDEX**

<b>1. INTRODUCTION .....</b>	<b>3</b>
<b>2. WEIGHING PROCEDURES.....</b>	<b>4</b>
<b>2.1. Preparation .....</b>	<b>4</b>
<b>2.2. Levelling .....</b>	<b>4</b>
<b>2.3. Weighing .....</b>	<b>4</b>
<b>2.4. Determination of C.G. location .....</b>	<b>4</b>
<b>2.5. Weighing record.....</b>	<b>5</b>
<b>2.6. Weighing record (II).....</b>	<b>5</b>
<b>3. WEIGHTS AND C.G.....</b>	<b>7</b>
<b>4. BAGGAGE LOADING .....</b>	<b>8</b>
<b>5. EQUIPMENT LIST.....</b>	<b>10</b>

INTENTIONALLY LEFT BLANK

## 1. INTRODUCTION

This section describes the procedure for establishing the basic empty weight and the moment of the aircraft. Loading procedure information is also provided.

**NOTE**

*Aircraft must be operated in accordance with the limits concerning the maximum takeoff weight and CG excursion as reported in Flight Manual Section 2.*

Pilot is responsible for checking the weight and CG excursion are compliant with the related limits. CG excursion and weight limits are reported in Section 2 – Limitations.



## **2. WEIGHING PROCEDURES**

### **2.1. PREPARATION**

- Carry out weighing procedure inside closed hangar
- Remove from cabin any object unintentionally left
- Make sure Flight Manual and mandatory documents are on board
- Align nose wheel
- Drain fuel via the specific drain valve
- Oil, hydraulic fluid and coolant liquid at the operating levels
- Move sliding seats to most forward position
- Raise flaps to fully retracted position
- Place control surfaces in neutral position
- Place scales (min. capacity 300 kg) under each wheel

### **2.2. LEVELLING**

- Level the aircraft (the reference for longitudinal levelling is made putting a spirit-level on the cabin floor as shown in the Aircraft Maintenance Manual).
- Adjust longitudinal attitude deflating nose tire

### **2.3. WEIGHING**


- Record weight shown on each scale
- Repeat weighing procedure three times
- Calculate empty weight

### **2.4. DETERMINATION OF C.G. LOCATION**

- Drop a plumb bob tangent to the wing leading edge and trace a reference mark on the floor (see Figure on Para. 2.5 or 2.6)
- Repeat the operation for other wing
- Stretch a taught line between the two marks
- Measure the distance between the reference line and both main and nose wheel axis (A and B distances respectively)
- Using recorded data it is possible to determine the aircraft C.G. location and the aircraft moment (see following table)

Model **P2006T** S/N: 296/US Weighing no. 2  
Date: 6/20/23

Datum: leading edge vertical

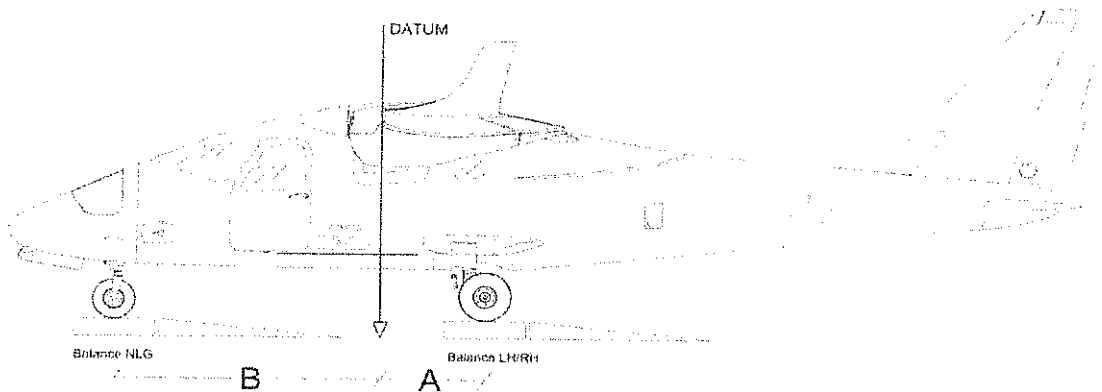

	Kg or (Lbs)		Meters or (feet)
Nose wheel weight	$W_1 = 275$	Plumb bob distance LH wheel	$A_L = 2.65$
LH wheel weight	$W_L = 795$	Plumb bob distance RH wheel	$A_R = 2.64$
RH wheel weight	$W_R = 845$	Average distance $(A_L + A_R)/2$	$A = 2.65$
$W_2 = W_L + W_R =$	$1.640$	Plumb bob distance from nose wheel	$B = 7.02$

Empty weight  $W_e = W_1 + W_2 = 1,915$  [kg] or [lbs]

$D = \frac{W_2 \cdot A - W_1 \cdot B}{W_e} = 1.26$  [m] or [ft]       $D\% = \frac{D}{1.339} \cdot 100 = 28.68\%$

Empty weight moment:  $M = (D \cdot W_e) = 2412.9$  [Kg · m] or [ft · Lbs]

Maximum takeoff weight	$W_T = 2712$	[kg] or [lbs]	Signature <i>[Signature]</i> AP3340044
Empty weight	$W_e = 1915$	[kg] or [lbs]	
Max. useful load $W_T - W_e$	$W_u = 797$	[kg] or [lbs]	


Figure 3. CG and moment computation chart

\* Aircraft weighed zero fuel with only 1 rear seat installed pilot side \*

**2.6. WEIGHING RECORD (II)**

Model **P2006T** S/N: \_\_\_\_\_ Weighing no. \_\_\_\_\_ Date: \_\_\_\_\_

Datum: leading edge vertical

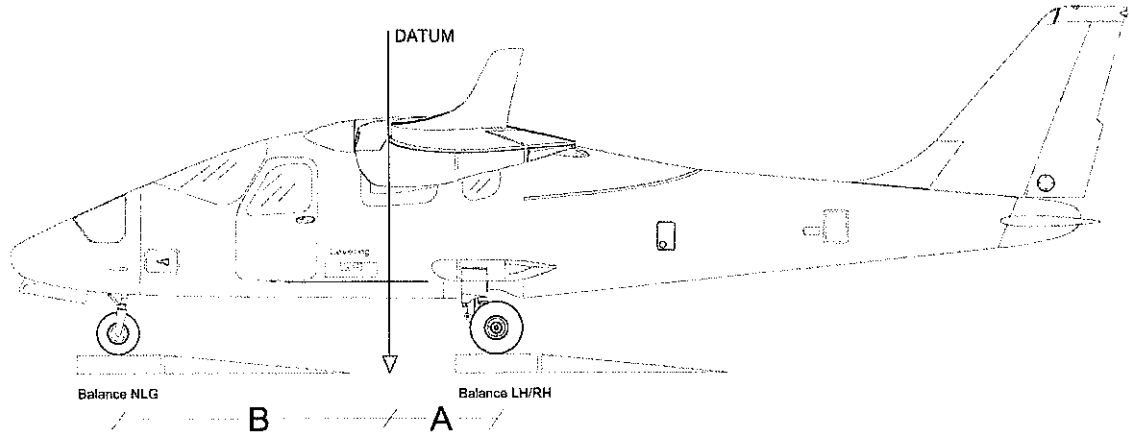

	[kg] or [lbs]		[m] or [ft]
Nose wheel weight	$W_1 =$	Plumb bob distance LH wheel	$A_L =$
LH wheel weight	$W_L =$	Plumb bob distance RH wheel	$A_R =$
RH wheel weight	$W_R =$	Average distance $(A_L + A_R)/2$	$A =$
$W_2 = W_L + W_R =$		Plumb bob distance from nose wheel	$B =$

Empty weight  $W_e = W_1 + W_2 =$  [kg] or [lbs]

$D = \frac{W_2 \cdot A - W_1 \cdot B}{W_e} =$  [m] or [ft]  
 $D\% = (D / 1.339 \text{ m}) \times 100 =$  or  $D\% = (D / 4.39 \text{ ft}) \times 100 =$

Empty weight moment:  $M = (D \cdot W_e) =$  [m · Kg] or [Ft · Lbs]


Maximum takeoff weight	$W_T =$	[kg] or [lbs]	Signature _____
Empty weight	$W_e =$	[kg] or [lbs]	
Max. useful load $W_T - W_e$	$W_u =$	[kg] or [lbs]	



**WEIGHTS AND C.G.**

C.G. position can be defined by means of the chart below.

The pilot is responsible for ensuring the correct useful load loading.

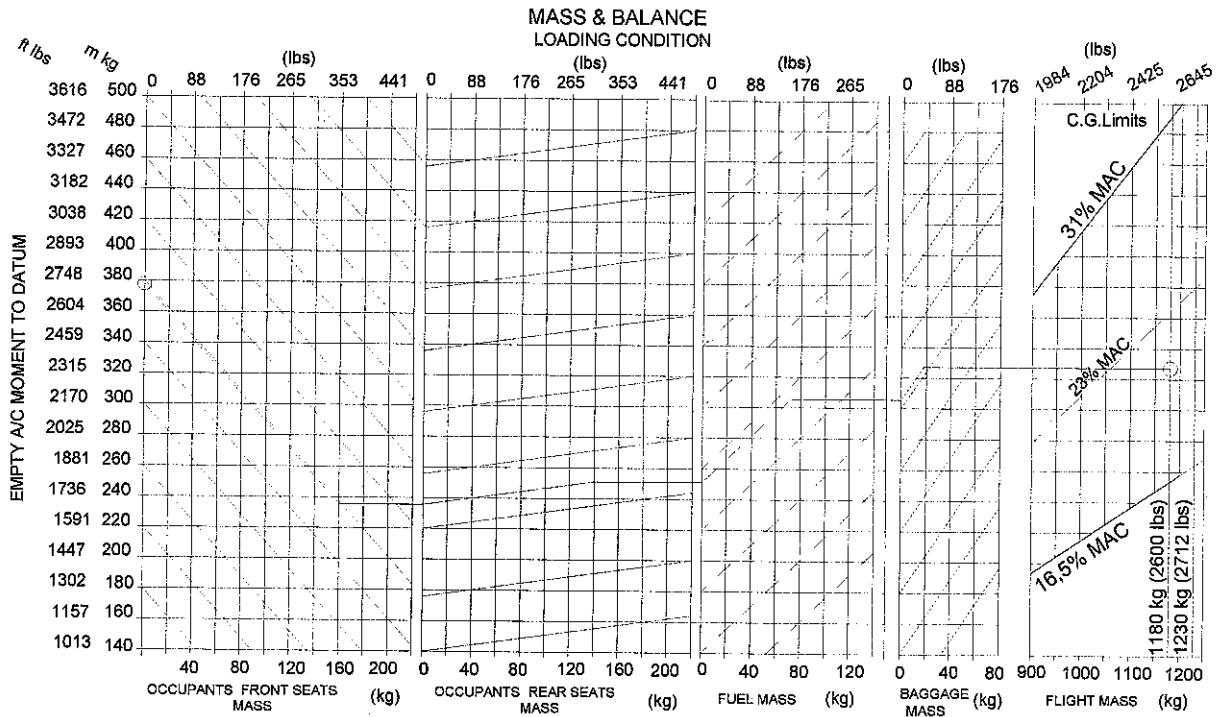

**Figure 1**

**Example**

A/C empty mass moment	378 kgm
A/C empty mass	790 kg
Occ. front seats	160 kg
Occ. rear seats	140 kg
Fuel	72kg
Baggage	18 kg
A/C T.O. weight	1180kg



### **3. BAGGAGE LOADING**


The baggage loading in the dedicated compartment must be carried out in accordance with diagram addressed on PAR. 03 and with C.G. excursion and weight limitations reported in Section 2.

Pilot is provided with a red tie-down net and snap fasteners allowing for securing the loads on the compartment floor.




**CAUTION**

*Loading the baggage, make sure that you correctly stretched the net which must be secured to the four vertices of the floor.*

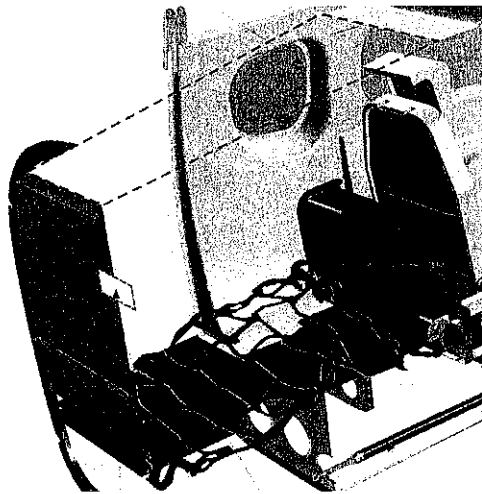

Model **P2006T** S/N: 296/US Weighing no. 2  
Date: 6/20/23

Datum: leading edge vertical

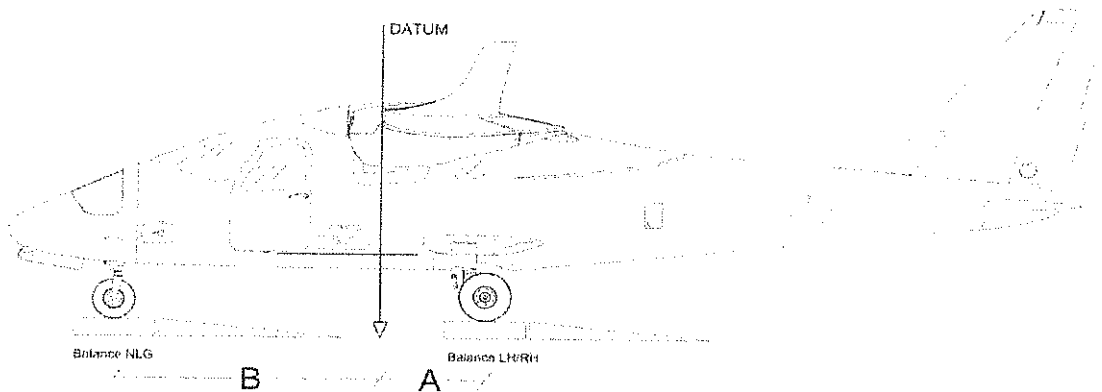

	Kg or (Lbs)		Meters or (feet)
Nose wheel weight	$W_1 = 275$	Plumb bob distance LH wheel	$A_L = 2.65$
LH wheel weight	$W_L = 795$	Plumb bob distance RH wheel	$A_R = 2.64$
RH wheel weight	$W_R = 845$	Average distance $(A_L + A_R)/2$	$A = 2.65$
$W_2 = W_L + W_R =$	$1.640$	Plumb bob distance from nose wheel	$B = 7.02$

Empty weight  $W_e = W_1 + W_2 = 1,915$  [kg] or [lbs]

$D = \frac{W_2 \cdot A - W_1 \cdot B}{W_e} = 1.26$  [m] or [ft]       $D\% = \frac{D}{1.339} \cdot 100 = 28.68\%$

Empty weight moment:  $M = (D \cdot W_e) = 2412.9$  [Kg · m] or [ft · Lbs]

Maximum takeoff weight	$W_T = 2712$	[kg] or [lbs]	Signature <i>[Signature]</i> AP3340044
Empty weight	$W_e = 1915$	[kg] or [lbs]	
Max. useful load $W_T - W_e$	$W_u = 797$	[kg] or [lbs]	


Figure 3. CG and moment computation chart

\* Aircraft weighed zero fuel with only 1 rear seat installed pilot side \*

**WEIGHTS AND C.G.**

C.G. position can be defined by means of the chart below.

The pilot is responsible for ensuring the correct useful load loading.

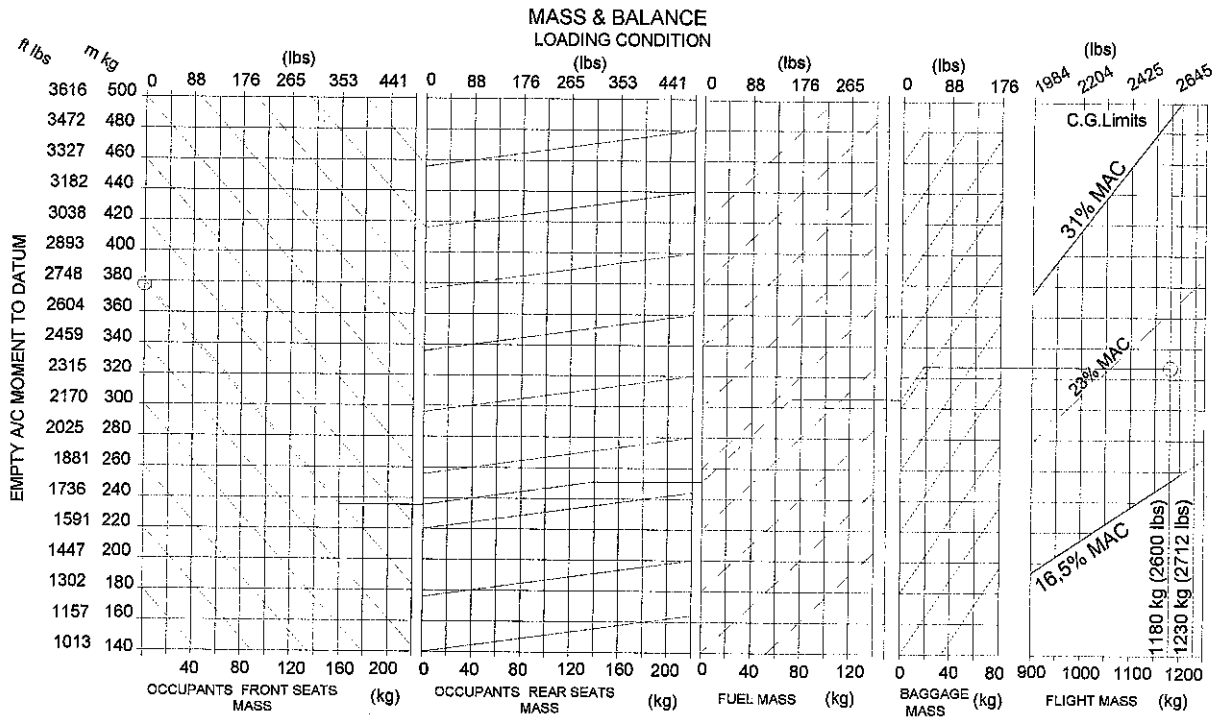

**Figure 1**

**Example**

A/C empty mass moment	378 kgm
A/C empty mass	790 kg
Occ. front seats	160 kg
Occ. rear seats	140 kg
Fuel	72kg
Baggage	18 kg
A/C T.O. weight	1180kg

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

#### **4. EQUIPMENT LIST**

The following is a list of equipment which may be installed in the *P2006T*.  
The items marked with an "X" were installed on the airplane described at the beginning of the list and they are included in the Basic Empty Weight.

It is the owner's responsibility to retain this equipment list and amend it to reflect changes in equipment installed in this airplane.







EQUIPMENT LIST		AIRCRAFT S/N:	DATE:		
REF.	DESCRIPTION		INST	WEIGHT [kg]	ARM [m]
<b>HONEYWELL Bendix/King KCS 55A Compass System</b>					
H-1	KI 525A Pictorial Navigation Indicator			1.53	-1.4
H-2	KG 102A Directional Gyro			1.95	1
H-3	KA 51B Slaving Control and Compensator Unit			0.1	-1.4
H-4	KMT 112 Magnetic Slaving Transmitter			0.15	2.2
<b>HONEYWELL Bendix/King KR87 ADF System</b>					
H-5	ADF KR87 receiver			1.5	1
H-6	Indicator KI 227			0.3	-1.4
H-7	Indicator KI 229			1.3	-1.4
H-8	Static inverter Marathon PC-50			2	1
<b>HONEYWELL Bendix/King KN 63 DME System</b>					
H-9	Indicator DME KDI 572			0.4	-1.4
H-10	Transceiver DME KN 63			1.3	1
<b>S-TEC Fifty Five X Autopilot System</b>					
S-1	Turn coordinator S-TEC 6405-14L (Mid Continent 1394T100-14RB)			0.81	-1.5
S-2	PRGMR/CMPTR 01192-0-2TF			1.36	-1.4
S-3	Roll servo 0105-5-R9			1.31	-0.71
S-4	Pitch servo 0107-11-P4			1.31	3.55
S-5	Altitude Transducer 0111			0.2	-1.9
S-6	Pitch Trim servo S-TEC 0105-T11			1.3	2.8
<b>Becker 3500 ADF System</b>					
B-1	ADF Becker 3500 Receiver (RA3502)			1.0	0.92
B-2	RMI Converter (AC 3504-01)			0.75	0.92
B-3	ADF Antenna (AN 3500)			1.7	-0.25
B-4	AK-550-6 DC/DC converter			1	-0.85
<b>WX500 Stormscope</b>					
SS-1	Processor (including mounting tray) (805-11500-001)			1.10	2.51
SS-2	Antenna NY163 (805-10930-001)			0.38	3.60
<b>Garmin GTS 800 TAS</b>					
T-1	Garmin GTS 800 TAS (011-01356-00)			4.75	1.30
T-2	GA 58 Directional Antennas (010-00720-00)			0.78	-0.30



INTENTIONALLY LEFT BLANK

---

**SEZIONE 7 - AIRFRAME and SYSTEMS DESCRIPTION**

**INDEX**

<b>1. INTRODUCTION .....</b>	<b>3</b>
<b>2. AIRFRAME.....</b>	<b>3</b>
<b>3. POWERPLANT .....</b>	<b>9</b>
<b>4. PEDESTAL CONTROLS .....</b>	<b>12</b>
<b>5. CABIN OVER-HEAD PANEL CONTROLS .....</b>	<b>15</b>
<b>6. INTERNAL LIGHTS.....</b>	<b>16</b>
<b>7. EXTERNAL LIGHTS.....</b>	<b>17</b>
<b>8. FUEL SYSTEM.....</b>	<b>19</b>
<b>9. LANDING GEAR SYSTEM.....</b>	<b>21</b>
<b>10. BRAKES.....</b>	<b>25</b>
<b>11. VENTILATION .....</b>	<b>26</b>
<b>12. CABIN HEAT.....</b>	<b>26</b>
<b>13. SEATS AND SAFETY BELTS .....</b>	<b>26</b>
<b>14. DOORS.....</b>	<b>27</b>
<b>15. BAGGAGE COMPARTMENT .....</b>	<b>28</b>
<b>16. PLACARDS .....</b>	<b>31</b>
<b>17. INSTRUMENTS PANEL .....</b>	<b>37</b>
<b>18. ELECTRICAL SYSTEM .....</b>	<b>40</b>

INTENTIONALLY LEFT BLANK

## 1. INTRODUCTION

This section provides aircraft and systems description and operation.

## 2. AIRFRAME

### 2.1. WING

Each wing consists of a central light alloy torque box which carries all the wing bending, shear and torque loads; an aluminium leading edge is attached to the front spar while flap and aileron are hinged to the rear spar.

The torque box houses an integrated fuel tank and supports the engine mount.

Flap and aileron, respectively located inboard and outboard of wing and made up of light alloy, are constructed with a central spar to which front and rear ribs are jointed. Wrapped-around aluminium stressed skin panels cover all the structures. Steel alloy attachments connect left and right wing to each other.

Following figure shows the left wing fitted with the engine nacelle, fuel tank and composite winglet. Steel alloy attachments link left and right wing to each other.

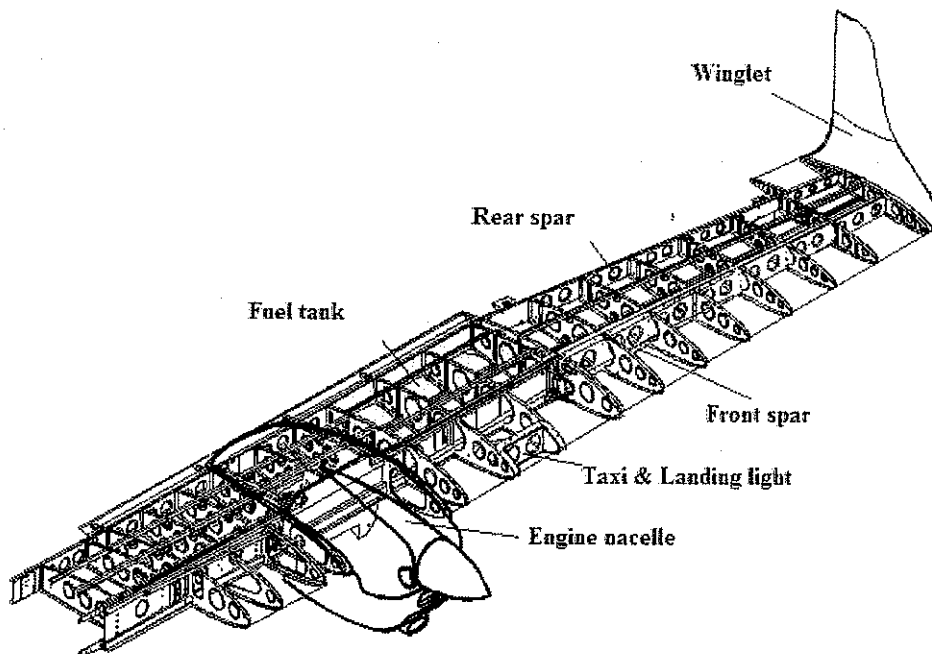


Figure 1. – Left wing structure

**2.2. FUSELAGE**

The fuselage is constituted by a light-alloy semi-monocoque structure wrapped-around by stressed skin panels. Radome and stern fairing are of composite material. Cabin and baggage compartment floor is a warping of beams and keelsons supporting the seats guides and other components.

Two spar frames support on the top the wings attachments and on the bottom the *sponson* beams sustaining the main landing gear. The forward frame, to which radome is connected, supports a steel trestle to which the nose landing gear is connected.

The front and rear seats access occur by means of two doors located in the opposite sides of the fuselage; a ditching emergency exit is available on the top of the cabin. In tail cone, two spar frames support the horizontal and vertical empennages attachments.

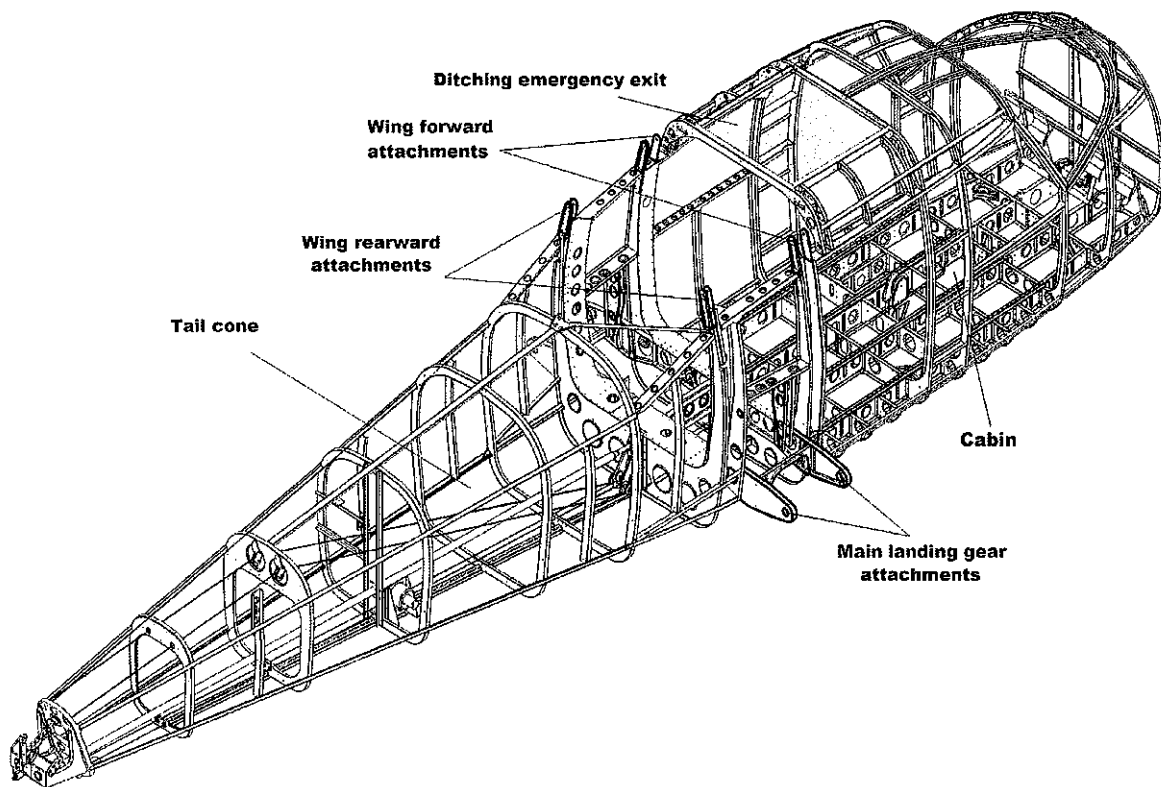


Figure 2. – Fuselage structure

**2.3. EMPENNAGES**

The vertical tail is entirely metallic: vertical fin is made up of a twin spar with aluminium alloy stressed skin. Rudder, providing directional control of the airplane, is made up of aluminium alloy.

The rudder is connected to the vertical tail at two hinge points. A trim tab system increases directional stability of the airplane.

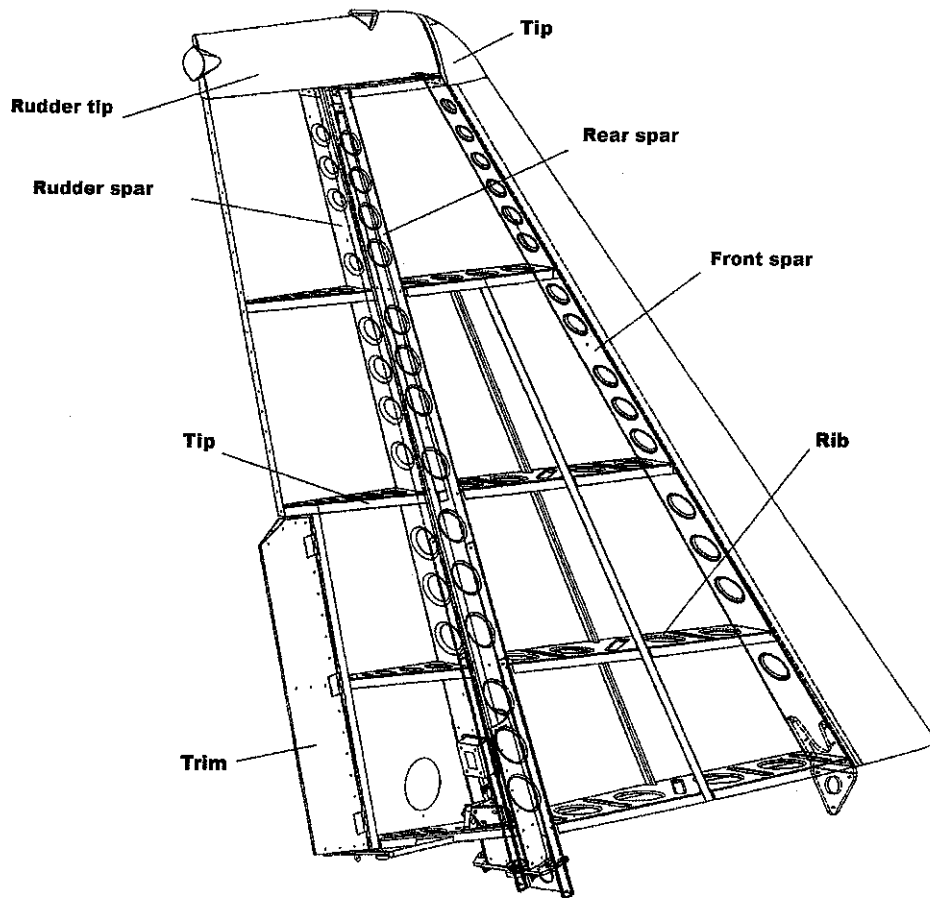


Figure 3. – Vertical empennage structure



The horizontal empennage is an all-moving type (stabilator); its structure consists of a twin spar to which front and rear ribs are jointed and it is covered by stressed aluminium alloy skin. The trim tab completes the assy.

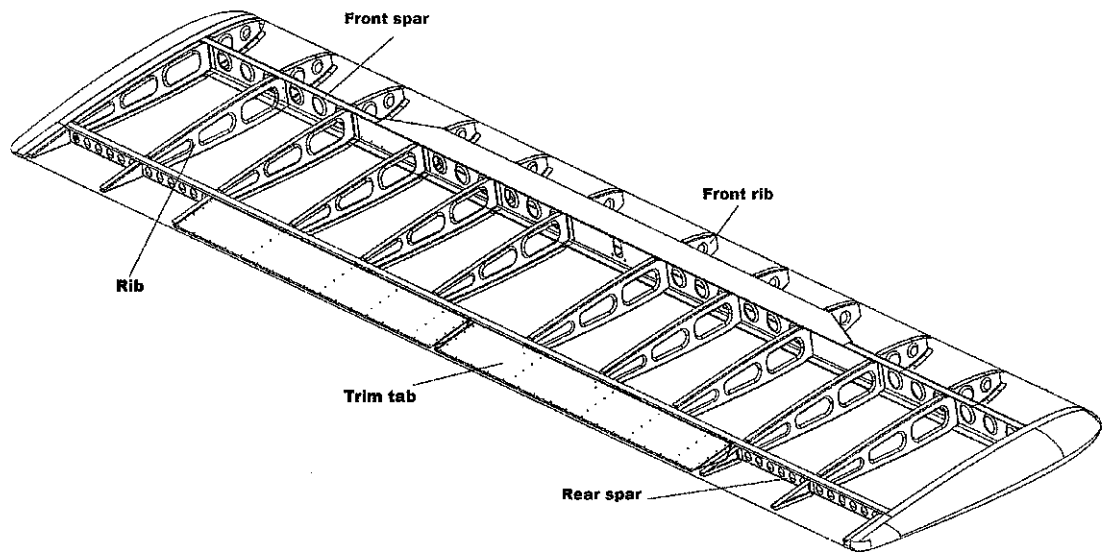


Figure 4. – Stabilator structure

## **2.4. FLIGHT CONTROLS**

The main flight control system controls the airplane in three axes. All primary controls (ailerons, rudder and stabilator) are manually operated by a conventional control column and rudder pedals, pulleys, cables, bellcranks and rods.

The secondary flight controls consist of a two-axis trim system and a flaps system.

Complete dual controls are provided for pilot and co-pilot.

Longitudinal control acts through a system of push-pull rods connected to the control column and moving the stabilator whose anti-tab winglet works also as trim tab. Autopilot pitch servo (if installed) is connected to the push-pull rods system through driving cables.

Longitudinal trim is performed by a small tab positioned on the stabilator and manually operated via a control wheel positioned between the two crew seats. As optional, it is available an electrically operated longitudinal trim which it is also controlled by the autopilot system, when installed.

Trim position is monitored by an indicator on the instrument panel. A trim disconnect toggle switch is provided.

Ailerons control is of mixed type with push-rods and cables; a cable control circuit is confined within the cabin and it is connected to a pair of push-pull rod systems positioned in each main wing which control ailerons differentially.

The U-shaped control wheels, hinged on the top of the control column, control the ailerons. Control wheel motion is transferred to the ailerons through a cable loop, up to the interconnecting rod linking the two push-pull rod systems which finally transmit the motion to the ailerons.

When either aileron control wheel is rotated, the crossover cable rotates the other control wheel.

The left aileron has a trim tab adjustable on ground: its deflection allows for lateral trimming of the airplane.

Both flaps are extended via a single electric actuator controlled by a switch on the instrument panel. Flaps act in continuous mode; the analogue indicator displays three markings related to 0°, takeoff (T/O) and landing (FULL) positions.

An aural warning is generated whenever the flaps are lowered to the FULL position and the landing gear is not down-locked.

Rudder is operated through a cable system. A rudder trim tab allows aircraft directional trimming, especially in case of OEI operation: it is electrically operated via a switch located on the central console placed between crew seats.

Its position is monitored by an indicator on the instrument panel. A trim disconnect toggle switch is provided.

INTENTIONALLY LEFT BLANK

### 3. POWERPLANT

P2006T is equipped with two four-cylinder four-stroke Rotax 912S engines of 98hp (73kW) each, both rotating clockwise. These are partially liquid cooled and they feature an integrated reduction gear driving constant speed propellers with pitch feathering devices.

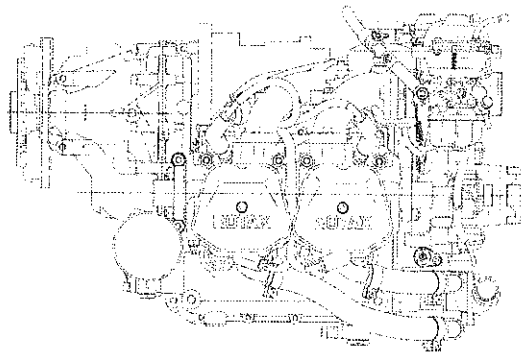


Figure 5. – Rotax 912S

Cooling system is designed for liquid cooling of the cylinders heads and ram-air cooling of the cylinders. The liquid system is a closed circuit with an overflow bottle and an expansion tank.

The coolant flow is forced by a water pump, driven from the camshaft, from the radiator to the cylinder heads. From the top of the cylinder heads the coolant passes on to the expansion tank (item 1, Figure below). Since the standard location of the radiator (2) is below engine level, the expansion tank, located on top of the engine, allows for coolant expansion.

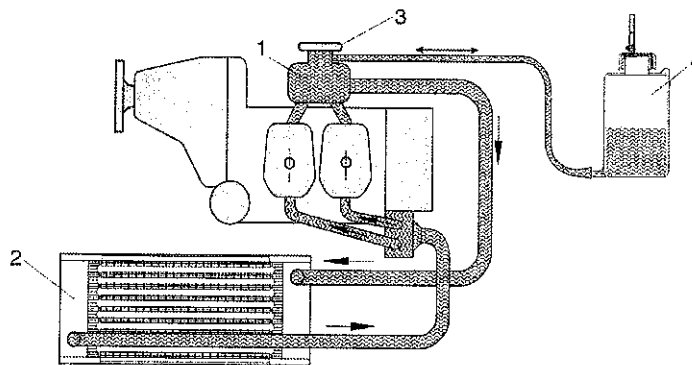


Figure 6. – Liquid cooling system schematic

The expansion tank is closed by a pressure cap (3) fitted with pressure relief valve and return valve. At temperature rise and expansion of the coolant, the pressure relief valve opens and the coolant will flow via a hose at atmospheric pressure to the transparent overflow bottle (4). Once cooled down, the coolant will be sucked back into the cooling circuit.

The engine is provided with a dry sump forced lubrication system with an oil pump with integrated pressure regulator. A thermostatic valve regulates the oil flow to the heat exchanger (oil radiator) on the basis of oil temperature: this allows the engine starting in cold conditions.

The oil tank is installed behind the firewall protected from heat sources. Some holes on the bracket structure allow for air ventilation

The reservoir is fitted with a dipstick; a hose, immediately located beneath the filler cap, allows for oil relief discharged in a safe zone in the cowling, far from exhausts and other heat sources.

Following powerplant instruments are provided:

- LH and RH RPM Indicator
- LH and RH Manifold Pressure Indicator
- LH and RH Oil Pressure Indicator
- LH and RH Oil Temperature Indicator
- LH and RH Cylinder Head Temperature Indicator

**3.1. ENGINE FEATURES**

Manufacturer	Bombardier-Rotax GmbH
Model	912 S3
Certification basis	FAR 33, Amendment 15
Type Certificate	EASA TCDS no. E.121 dated 1st April 2008
Engine type	4 cylinders horizontally opposed with 1352 c.c. of overall displacement, liquid cooled cylinder heads, ram-air cooled cylinders, two carburetors, integrated reduction gear box with shock absorber.
Maximum power (at declared rpm)	73.5 kW (98.6hp) @ 5800 rpm -5 min. maximum 69.0 kW (92.5hp) @ 5500 rpm (continuous)

**3.2. PROPELLER FEATURES**

Manufacturer	MT Propeller
Type certificate	LBA 32.130/086 (MTV-21 series)
Model	MTV-21-A-C-F/CF178-05
Blades/hub	2 wood/composite blades, aluminium hub
Diameter	1780 mm (no reduction allowed)
Type	Variable pitch hydraulically controlled

**3.3. PROPELLER GOVERNOR FEATURES**

Manufacturer	MT Propeller
Model	P-875-12
Type	Hydraulic

#### 4. PEDESTAL CONTROLS

Following picture shows the controls installed on the central pedestal.

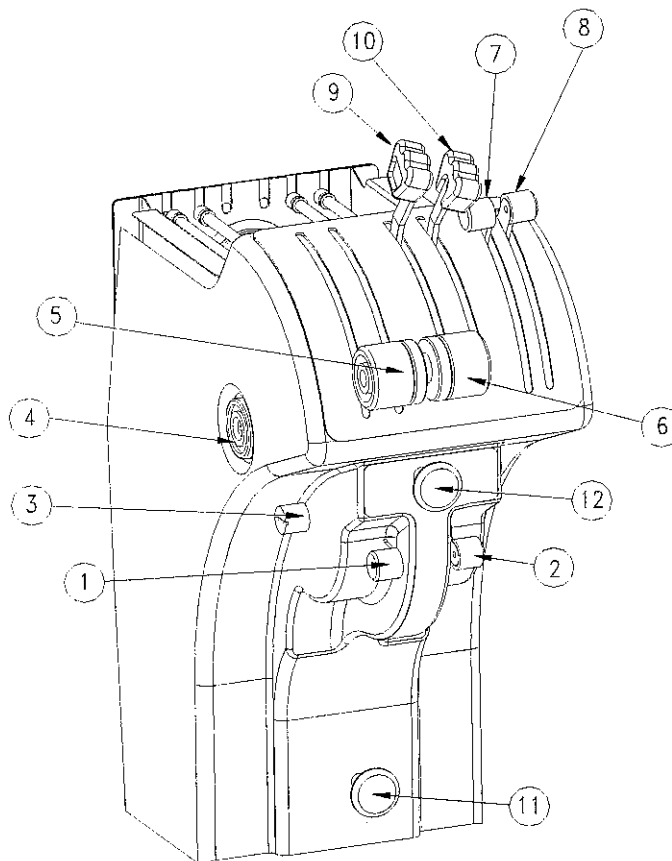


Figure 7. – Pedestal controls

No	Description
1 and 2	Choke control
3	Choke friction knob
4	Upper levers friction knob
5-6	LH and RH Throttle lever
7-8	LH and RH Carburetor Heating lever
9-10	LH and RH Propeller Pitch Control lever
11	Parking brake
12	Windshield defrost control knob

**NOTE**

*Aircraft not embodying the Design Change 2006/66 "New Powerplant control setting layout" or the SB 039-CS "P2006T New powerplant controls layout" feature a different pedestal levers layout: propeller and carb. heat levers position are inverted.*

It is possible to adjust the throttle, propeller and carburettor heat levers friction by appropriately tightening the friction knob located on the central console.

A similar device is provided for engine choke controls.

Carburettor heat control knobs are located between throttle and propellers levers; when the knobs are fully pulled backwards, carburettors receive maximum hot air.

During normal operations, the knobs are fully forward set (carburettors heating set to OFF).

The console houses also the parking brake and windshield defrost control knobs.



INTENTIONALLY LEFT BLANK

## 5. CABIN OVER-HEAD PANEL CONTROLS

Following picture shows the controls installed on the cabin over-head panel.

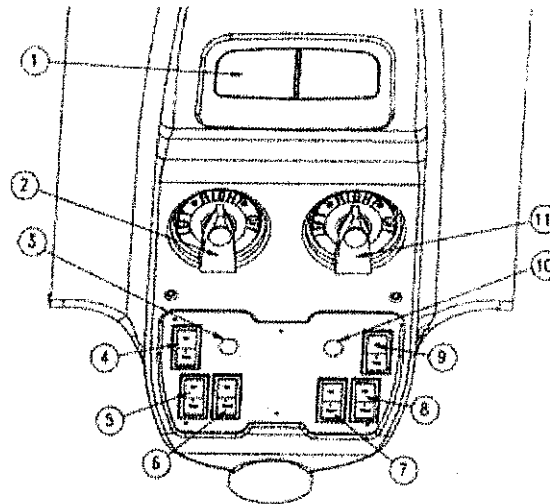


Figure 8. - Cabin head panel controls

No	Description
1	Cabin Light
2	LH Fuel selector valve
3	LH Electric Starter
4	LH electric fuel pump
5	LH Engine ignition 1
6	LH Engine ignition 2
7	RH Engine ignition 1
8	RH Engine ignition 2
9	RH electric fuel pump
10	RH Electric Starter
11	RH Fuel selector valve

## 6. INTERNAL LIGHTS

Internal lights system is composed by following equipment:

- **Cabin light**, providing lighting for crew and passengers compartment;
- **Instruments lights**, which in turn are composed by three sub-systems each one fitted with dimming device:
  - Switches built-in lights
  - Avionics lights
  - Cockpit lights
- **Emergency light**

The **cabin light** is a ceiling light, fitted with control switches, located on the over-head panel in correspondence of the crew seats.

About the **instrument lights** (controlled by a switch on the RH instrument panel), the switches built-in lights concern the instrument panels switches lighting, the avionics lights concern the avionic equipment lighting and the cockpit lights concern two lights located on the over-head panel illuminating LH and RH instrument panels (see Figure below).

All above mentioned lights are supplied by the battery bus apart from the **Emergency light** which is directly connected to the battery. It is a five-leds light located in the over-head panel (see Figure below) controlled by a switch installed on the LH breakers rack.

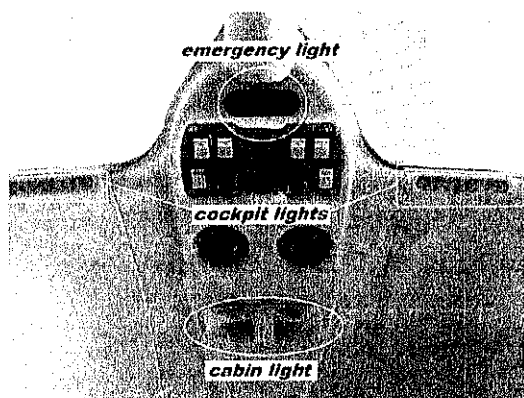


Figure 9. – Over-head panel lights arrangement

## 7. EXTERNAL LIGHTS

External lights system consists of the following equipment (see Figure below):

- **NAV Lights:** they provide, by means of three position lights, the aircraft flight direction identification.
- **Strobe Lights:** they provide aircraft identification to prevent collision. They are located, like the above mentioned NAV lights, on the winglets and on the top of the vertical fin.
- **Taxi Light:** supports taxi maneuvering on the ground at night. It is installed on the left wing leading edge.
- **Landing Light:** provides ground reference information during final approach, touchdown, ground roll and take off and illuminates any major obstructions in the airplane approach glide path or on runway at night. It is installed on the left wing leading edge.


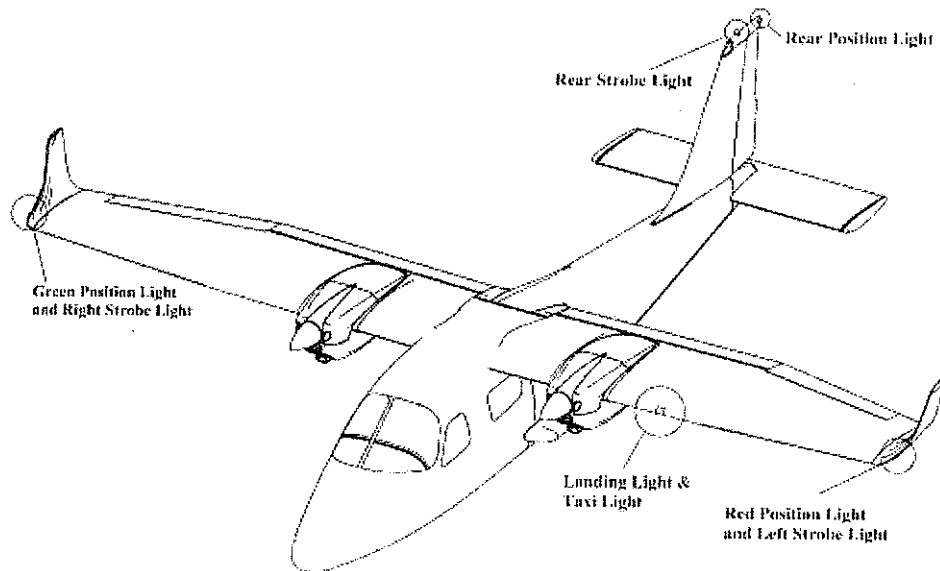


Figure 10. – External lights arrangement

All mentioned lights, whose circuits are protected by dedicated breakers, are activated by the related switches on the right instrument panel: see below.

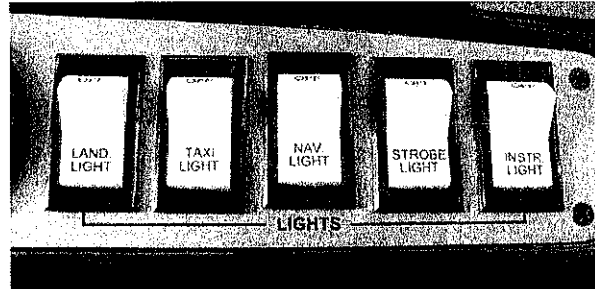

**Figure 11. - Lights switches panel**

## 8. FUEL SYSTEM

Fuel system consists of two integrated tanks inside the wing torque boxes and fitted with inspection doors.

Each fuel tank has a capacity of 100 litres and is equipped with a vent valve (its outlet is located on the lower wing skin) and a sump fitted with a drain valve for water/moisture drainage purposes.

An electric fuel pump feeds the pertinent engine in case of engine-driven pump failure. The fuel Gascolator (a sediment-filter bowl) is located beneath the engine nacelle, between the fuel tank and the electrical pump, in correspondence of the fuel system lowest point. It is fitted with a drain valve which allows for the overall fuel line drainage.

Fuel quantity indicators and fuel pressure indicators for each engine are located on the RH instrument panel.

In normal conditions, to supply fuel to engines, each engine pump sucks fuel from the related tank; crossfeed is allowed by fuel valves located on the front spar and controlled by Bowden cables from the fuel selectors located on the cabin overhead panel.

Left fuel selector manages the left engine feeding, allowing fuel supply from the left fuel tank or from the right one (crossfeed).

Right fuel selector manages the right engine feeding, allowing fuel supply from the right fuel tank or from the left one (crossfeed).

Each selector can be set in OFF position only pulling and simultaneously rotating the lever: this avoids an unintentional operation.



*Use of Aviation Fuel Avgas 100LL results in greater wear of valve seats and greater combustion deposits inside cylinders due to higher lead content. Make reference to Rotax Maintenance Manual who provides dedicated checks due to the prolonged use of Avgas.*

System schematic is shown on the following Figure.

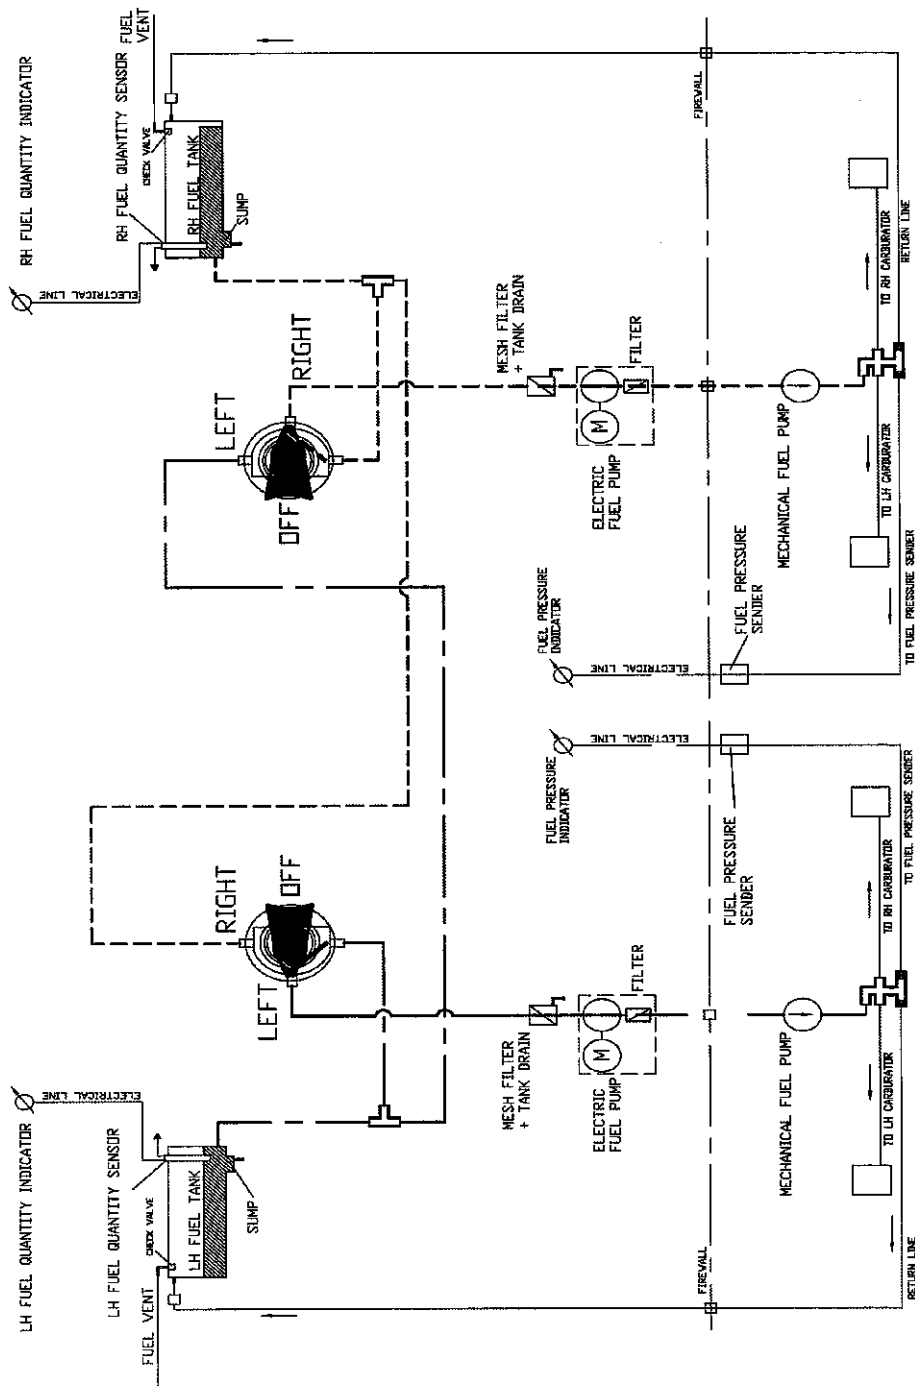


Figure 12. - Fuel system schematic

## 9. LANDING GEAR SYSTEM

The landing gear retraction system is of electro-hydraulic type, powered by a reversible pump which is electrically controlled by the LG control knob located on the LH instrument panel and by the legs position micro switches: these ones allow for detecting landing gear “down-locked” and “up” positions and for alerting the pilot by aural means should the approach and landing configuration be incorrect, in terms of flaps/throttle levers/landing gear position, in order to avoid an unintentional gear-up landing.

The system operates in two modes: normal and emergency.

Normal operation provides gear extension and retraction by means of hydraulic jacks. Gears extension is helped by gravity also.

Emergency operation only provides landing gear extension by means of a hydraulic accumulator which discharges pressurized oil in the above mentioned jacks.

### HYDRAULIC SCHEMATIC DIAGRAM

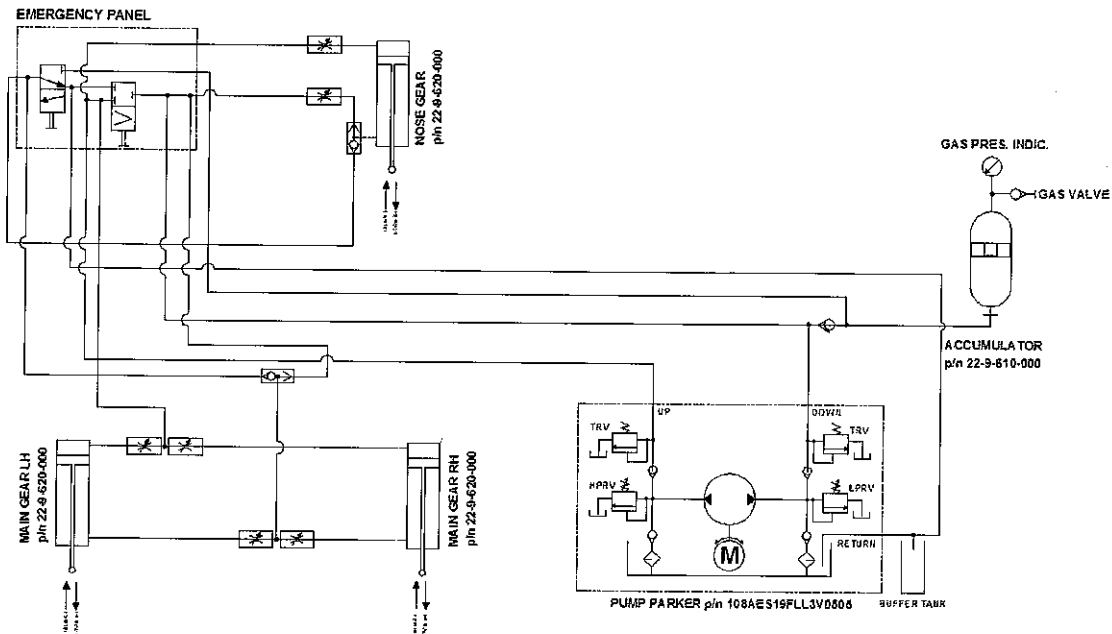


Figure 13. LG hydraulic system schematic



Hydraulic oil, contained in an integrated reservoir located inside the Hydraulic Power Pack, is pressurized by a reversible electric pump: as the LG control knob is placed in either the UP or DOWN position, the pump directs the fluid through the related pressure line toward each hydraulic jack.

In order to prevent an inadvertent LG retraction, the control knob must be pulled before being pushed upward for UP command.

The emergency hydraulic accumulator is used for the landing gear extension: normal extension line and emergency extension line converge in correspondence of the shuttle valves (two valves: the first one for NLG and the second one for MLG emergency operation).

The emergency accumulator nitrogen pressure indicator is located on the tail cone, left side; on ground, a red push-button located beneath the pressure indicator allows the electrical pump for charging the accumulator should the nitrogen pressure be below the lower limit indicated on the placard.

Emergency extension is controlled by two distributors located on the cabin floor, under a removable cover in correspondence of the pilot seat.

The LG indication system is electrical and it is composed by the following main components:

- |                                |  |
|--------------------------------|--|
| ➤ UP/DN limit micro-switches   | (6 couples, 2 for each leg)  |
| ➤ leg position lights, 3 green | (turned ON when the pertinent leg is extended and locked and located on the LH instrument panel) |
| ➤ transition light, 1 red      | (turned ON during transition phases)   |
| ➤ pump light, 1 amber          | (GEAR PUMP ON caution amber light turned ON when the pump is electrically supplied)              |
| ➤ push to test (if installed)  | (for landing gear red and green lights operational check)  |

The three green lights illuminate only when the respective gear is “down-locked”; the red light indicates the gear is in transit “up” or “down” and the amber caution light GEAR PUMP ON indicates that the pump is electrically supplied.

The red transition light extinguishes only when all the three gear legs are “down-locked” or they are “up” while the amber caution light extinguishes only when the electrical pump is “off”.

The Up/Down limit switches control the LG lights lighting and pump operation on the basis of LG configuration set by the pilot through the LG control knob.

A “push to test” button is used to check that the landing gear position lights are operating.

A warning horn alerts the pilot when the LG control knob is in UP position and at least one of the two throttle levers and/or flaps are respectively set to idle and to LAND position.

During emergency extension, LG position lights work as per normal extension mode: for this reason the LG control knob must be set on DOWN position before starting the emergency procedure.

**IMPORTANT**

After each emergency landing gear extension, apply the restoration procedure described in the AMM.

INTENTIONALLY LEFT BLANK

## 10. BRAKES

The A/C is provided with an independent hydraulically actuated brake system for each main wheel. A master cylinder is attached to each pilot/co-pilot's rudder pedal: see schematic below.

Hydraulic pressure, applied via the master cylinders, enters the brake via lines connected to an inlet fitting on the wheel brake caliper.

A parking brake valve, mounted in correspondence of the cabin floor and operated by a knob on the cockpit central pedestal, intercepts the hydraulic lines, once the system is pressurized, to hold the brake assemblies linings tightened round the main wheels brake discs.

Brakes can be operated from both pilot's and co-pilot's pedals: a single vented oil reservoir feeds the pilot side master cylinders which are connected, via hoses, with the co-pilot's side ones.

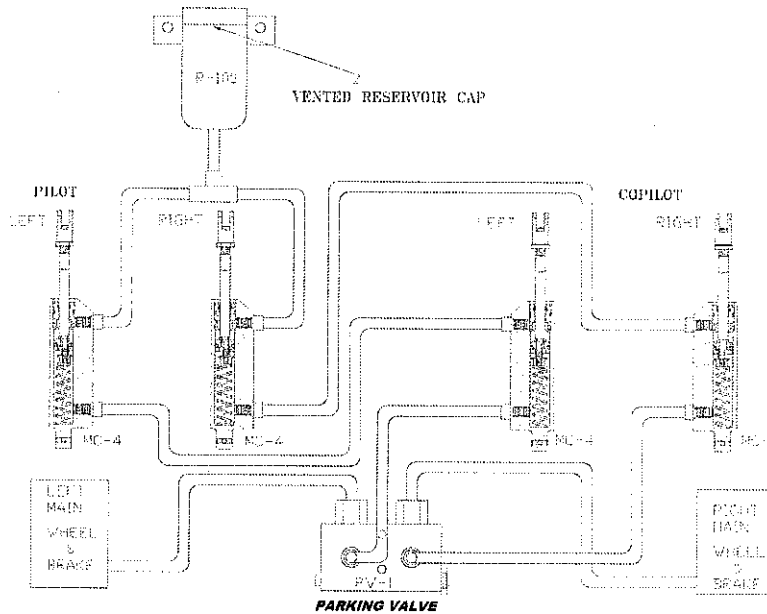


Figure 14. Brake system schematic

**NOTE**

*On the ground, when a pedal is pushed to steer the airplane, do not operate the opposite toe brake until the pedals are back aligned again. This prevents pedals mechanism from being damaged.*

## **11. VENTILATION**

If required, pilot allows for ram-air entering the cabin via the two outlet ports respectively located on the left and right side of the instruments panel. Other two ram-air ventilation outlets are located on the cabin head, in the passengers' zone.

For aircraft embodying MOD2006/208 a fan is installed in order to convoy air into the cabin during on ground operations at low speeds, namely, when air inlets are ineffective. By means of a lever switch is possible to turn ON the Cabin Fan. The Fan is connected to the RH Alternator Bus by means of a circuit breaker labelled as "Cabin Fan".

During flight operations, air comes from outside of the aircraft through air inlets and in this case the valve installed inside the hoses prevents air from fan from entering inside the cabin.

## **12. CABIN HEAT**

The cabin heating system utilizes hot air coming from engines heat exchangers: here cold ram-air is warmed by engine exhaust gases and then it is routed to the heating system hoses.

The cabin heat control knobs are positioned on the lower side of the LH instrument panel; when knobs are fully pulled, cabin receives maximum hot air.

Left knob controls the warm air from LH engine heat exchanger, right knob controls the warm air from RH engine heat exchanger.

Crew heating system outlet ports are located on the cabin floor, near the pedestal; for passengers zone it is provided an outlet port on the cabin head.

Windshield defrost is operated via a knob positioned on the pedestal: when knob is pulled the hot air flow for crew heating is deviated to the windshield.

## **13. SEATS AND SAFETY BELTS**

In correspondence of the seats, three fitting points safety belts are provided; belt adjustment is via the sliding buckle located on the belt metal hook.

Seats are built with light alloy tube structure and synthetic material cushioning. It is possible to perform following seat adjustments:

*Horizontal* – pulling the lower front lever and sliding the seat

*Vertical* – operating the lever located on the outward seat side


*Seat back inclination* – unlocking it via the lateral knob

These adjustments ensure the crew and passengers comfort.

## 14. DOORS

The cabin main door is located forward, on the left side of the fuselage while the emergency exit (passenger door) is located aft, on the right side of the fuselage.

On the top of the cabin it is located the ditching emergency exit: see figure below.

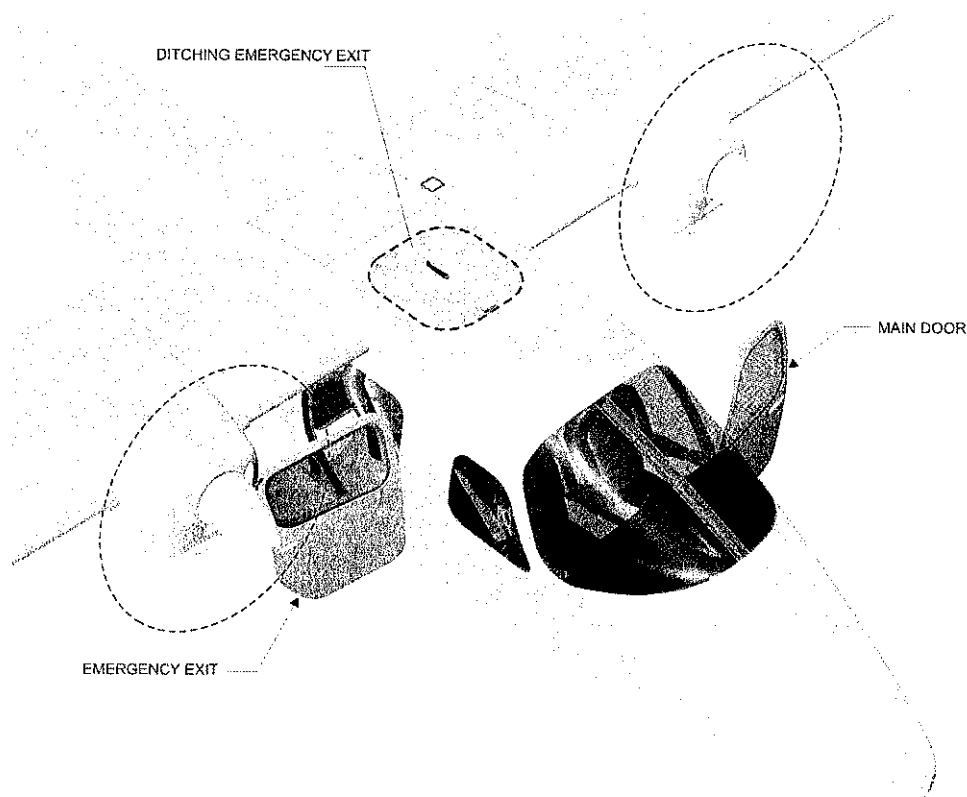

**Figure 15. Doors location**

Being the main door located in correspondence of the propeller disc, its operation is limited to the engine shut-down condition.

In fact, in order to prevent crew injuries, an electro-mechanical device locks the door latch when left engine runs. A pressure switch senses engine oil pressure and allows for electrical supply to a solenoid which engages the door lock mechanism.

This prevents the latch opening when left engine runs but, if needed, the device can be also manually by-passed operating either from the door inside panel or

from outside. Instructions are reported on the placards near the by-pass lever, located in correspondence of the latch: to unlock it is necessary to push and hold the red tab down, after that the door can be opened operating the handle.

After engine shut-down, the pressure drop can have a certain delay, preventing the door from being opened by normal means: do not force the handle but operate the override system above mentioned.

In any case, the electric lock becomes disengaged after a complete loss of the electric power.

Two switches engage respectively when the door and the latch are closed. Should one or both switches be released, the MAIN DOOR OPEN warning light is turned ON.

The emergency exit is fitted with the same safety device: in this case the pressure switch allowing for solenoid operation is activated from right engine oil pressure line; should be the door "open" or "closed and unlocked", the REAR DOOR OPEN warning light is turned ON.

Any voluntary operation of the manual by-pass solenoid lock causes related door warning light is turned on.

The ditching emergency exit is manually operated turning the handle and pushing outward the door.

The yellow fluorescent painted handle, which can be operated also from outside, is fitted with a safety wire assuring removal effortlessness. When the door is open, it stays connected to the fuselage by means of two cables which allow for door opening forward.

## **15. BAGGAGE COMPARTMENT**

The baggage compartment is located behind the passengers' seats. The baggage must be uniformly distributed on the floor and the weight cannot overcome 80kg. Make sure that the baggage is secured before the flight.

INTENTIONALLY LEFT BLANK






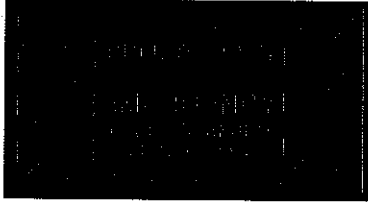
INTENTIONALLY LEFT BLANK





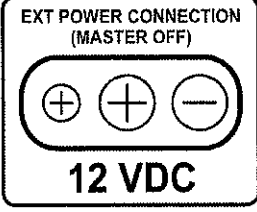
**16. PLACARDS**




In addition to the limitation placards reported on Section 2, following placards are installed on the aircraft.



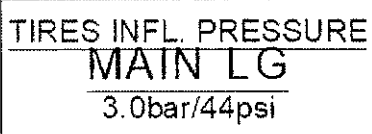
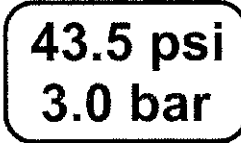
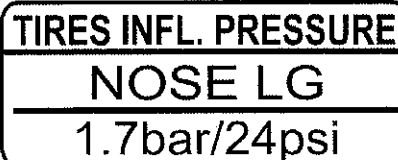
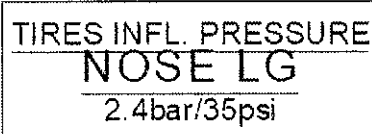
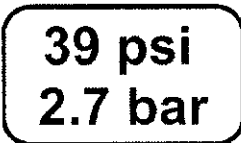
**NOTE**

*Additionally, nearby the placards listed below (English language), directly-translated placards in the language of the country in which the airplane is registered can be installed, when required by the specific NAA.*

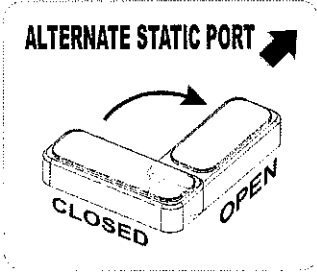Description	Placard	Place
ELT equipment location		Baggage compartment, right side
First Aid Kit location		Baggage compartment, aft cover panel
Fire extinguisher location		Cockpit floor, pilot side or between pilot and co-pilot seats
Emergency gear extension compartment location		Removable cap

Description	Placard	Place
Emergency gear extension instructions		Emergency distributors compartment
Alternate static port location		Central pedestal, left side
Alternate static port operating instructions		Central pedestal, right side
Static ports location	<p><b>STATIC PORT</b> <b>KEEP CLEAN</b></p>	Static ports: fuselage - both sides
Battery compartment location		Fuselage tail, left side
EXT power connection: socket schematic and instructions		Fuselage tail, left side
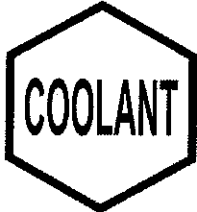
<p>Landing gear hydraulic accumulator: low pressure limit</p>		<p>LG hydraulic compartment cap (fuselage tail, left side)</p>
<p>LG hydraulic compartment location</p>	<p><b>LANDING GEAR HYDRAULIC COMPARTMENT</b></p>	<p>Fuselage tail, left side, in correspondence of LG hydraulic compartment cap</p>
<p>Towing limitations</p>	<p><b>CAUTION</b> <b>TOWING MAXIMUM TURNING ANGLE:</b> <b>20° EITHER SIDE OF CENTER</b></p>	<p>Nose LG forward door</p>
<p>Stabilator excursion range</p>		<p>Fuselage tail, left side, in correspondence of the stabilator leading edge</p>
<p>Aircraft grounding</p>	<p><b>! CONNECT THE AIRCRAFT TO ELECTRICAL GROUND !</b> <b>BEFORE REFUELING</b></p>	<p>Close to the fuel filler cap</p>
<p>Engine coolant expansion tank location</p>		<p>Engine nacelle top side</p>

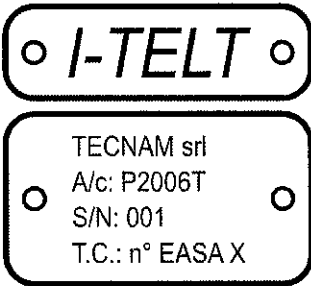Steel boards: a/c identifica- tion marks	 <p>(Sample)</p>	Fuselage tail, left side
Main LG tires inflation pres- sure values		MLG leg, LH and RH
		<i>Applicable for aircraft embodying MOD2006/266</i>
		<i>Applicable for aircraft embodying MOD2006/317</i>
Nose LG tire inflation pres- sure values		Nose LG fork
		<i>Applicable for aircraft embodying MOD2006/266</i>
		<i>Applicable for aircraft embodying MOD2006/317</i>

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

**17. INSTRUMENTS PANEL**


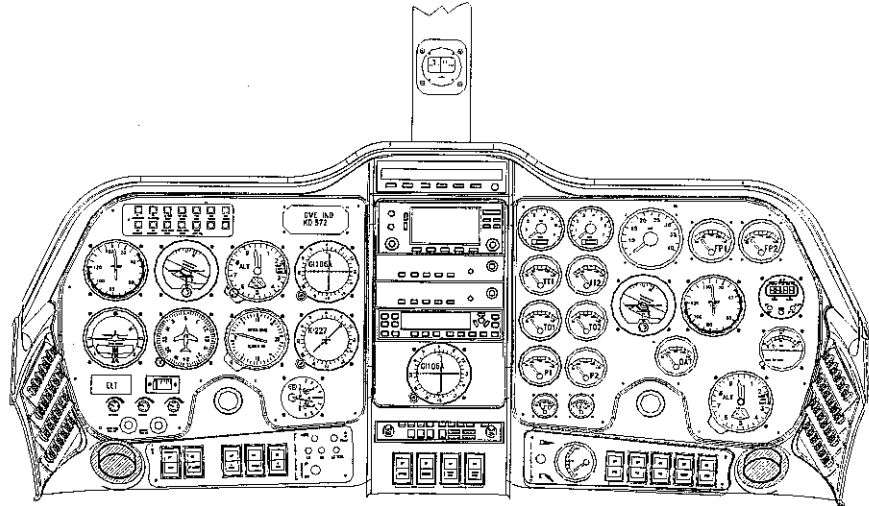


Figure 16. – Instruments panel (typical layout)


Tab 1

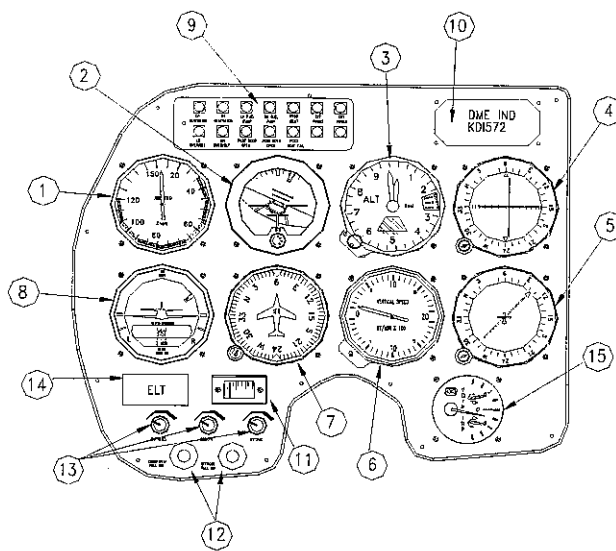

nr	DESCRIPTION
1	Airspeed indicator
2	Attitude Indicator
3	Altimeter
4	VOR/ILS Indicator
5	ADF Indicator (Kit B)
6	Vertical Speed Indicator
7	Directional Gyro Indicator
8	Turn Coordinator
9	Annunciator Panel
10	DME Indicator (Kit B)
11	Directional Trim Indicator
12	Cabin Heat / Defrost
13	Dimmers
14	ELT Control Panel
15	Longitudinal Trim Indicator

Figure 17. – LH Instruments panel (typical layout)




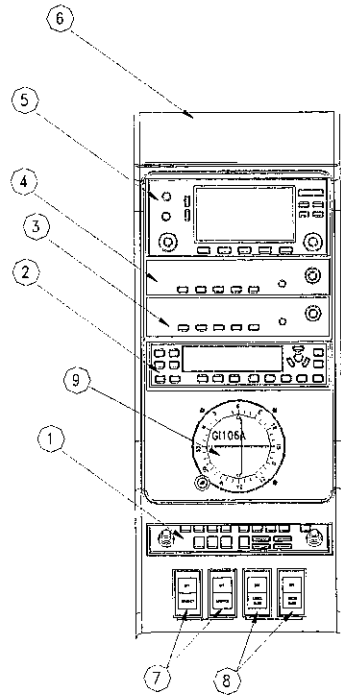

Tab 2

nr	DESCRIPTION
1	Audio Panel
2	Transponder
3	ADF (Kit B)
4	COMM/NAV SL30 (Kit A)
5	GPS/NAV/COMM GNS 430
6	Available
7	Avionic Switches
8	Cross Bus Switches
9	VOR/ILS Indicator


Figure 18. – Central instruments panel (typical layout)

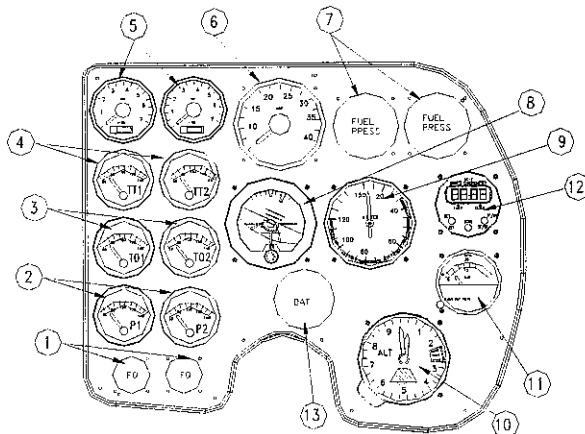

Tab 3

nr	DESCRIPTION
1	Fuel Quantity Indicators
2	Oil Pressure Indicators
3	Oil Temperatures Indicators
4	CHT Indicators
5	RPM Indicators
6	MAP Indicator (DUAL)
7	Fuel Pressure Indicators
8	2nd Attitude Indicator (Kit C)
9	2nd Airspeed Indicator (Kit C)
10	2nd Altimeter (Kit C)
11	Vol/Amper meter
12	Chronometer
13	OAT Indicator

Figure 19. – RH Instruments panel (typical layout)

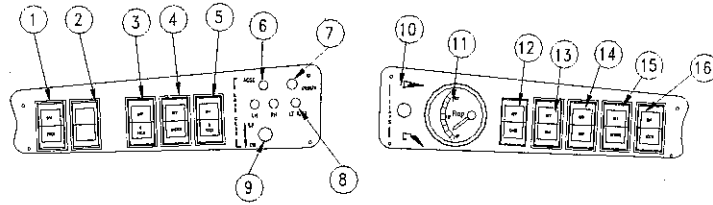

Tab 4

nr	DESCRIPTION
1	Pitot Heating Switch
2	Available
3	LH Field
4	Battery Master Switch
5	RH Field
6	Landing Gear lights
7	Unsafe Light
8	Light Test
9	Landing Gear lever

nr	DESCRIPTION
10	Flap Control
11	Flap Indicator
12	Landing Light Switch
13	Taxi Lights Switch
14	Position Lights Switch
15	Strobe Lights Switch
16	Instrument Lights Switch

Figure 20. – Switches panels

## **18. ELECTRICAL SYSTEM**

Primary DC power is provided by two engine-driven generators which, during normal operations, operate in parallel.

Each generator is rated at 14,2-14,8 Vdc, 40 Amp, and it is fitted with an integrated regulator, which acts to maintain a constant output voltage, and with an automatic overvoltage device protecting the circuits and the electric components from an excessive voltage caused by generator failures.

The power rating of the each generator is such that if one generator fails the other one can still supply the airplane equipment to maintain flight safety.

Secondary DC power is provided by a battery (lead type - Gill Teledyne G35, 12 V, 38-Ah in 20h run time) and an external DC power source can be connected to the aircraft DC distribution system.

On the instruments panel, right side, it is installed a voltmeter/ammeter. The ammeter section can indicate the current supplied by either left or right generator switching a dedicated selector.

There are five different busses (make reference to Figure 11):

- Battery bus
- LH Generator bus
- RH Generator bus
- LH Avionic bus
- RH Avionic bus

The distribution system operates as a single bus with power being supplied by the battery and both generators but it is possible to separate the left busses from the right busses when required by means of the Cross Bus switches.

All electrical loads are divided among the five busses on the basis of their importance and required power: equipment with duplicate functions are connected to separate busses.

The Battery bus, which supplies the most important loads, is energized from three sources: the battery and both generators. This allows the bus for remaining active also in case of two independent faults in the supply paths.

The following loads are connected to the battery bus:

<b>Battery Bus</b>
Audio Panel
VHF COMM 1
NAV 1
GPS
LH and RH Fuel electrical pump
LH and RH Fuel pressure
LH and RH Fuel quantity
LH and RH oil pressure
LH and RH oil temperature
LH and RH CHT
LH and RH RPM indicator
LH Attitude indicator
Cabin lights
Cockpit lights
Switches built-in lights
Avionics lights
Annunciator Panel
Strobe lights
Flaps
Doors pressure switches
Engine hour meter (2 units)
OAT
Turn coordinator
LG hydraulic pump
LG indicating & control system
LH and RH Fire detector
12V cabin electrical power sockets (2 units)

In addition, directly on the battery, the following devices are connected:

- Emergency back-up attitude indicator (RH attitude indicator – usually supplied from RH generator bus), when installed;
- Emergency Light
- Chronometer

The first two devices are controlled by the pertinent switches located on the LH breakers rack.

The other loads are so divided among following busses:

LH GEN Bus	LH Avionic Bus	RH GEN Bus	RH Avionic Bus
Pitot heat	DME	NAV lights	ADF
Landing light	Transponder	Rudder trim	COM 2
Taxi light	Encoder altimeter	Stall warning	NAV 2
		RH attitude indicator	A/P (*)
			A/P Pitch Trim (*)

(\*) if installed

On the central pedestal (see Figure below) there are seven switches disposed on two rows: on the first row there is the MASTER SWITCH which allows for connecting, through the battery relay, the battery to the battery bus.

LH and RH FIELD switches control the pertinent generator: setting the switch to OFF puts the pertinent generator off-line.

In correspondence of the second row there are 4 switches LH/RH AVIONIC and LH/ RH CROSS BUS.

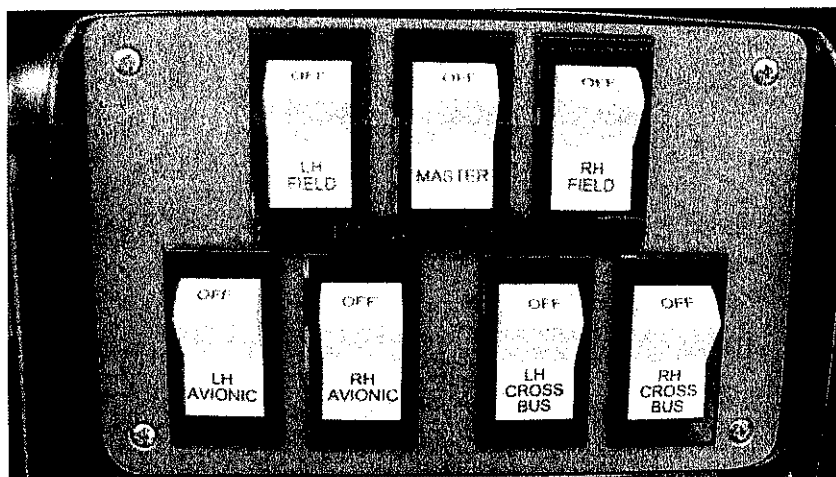


Figure 21. Central pedestal switches console

The first two allow, through a relay, for cutting off the power supply to the pertinent avionic bus.

The second ones allow, through a relay, for realizing the parallel connection between the pertinent generator bus and the battery bus. Setting these ones to OFF,

the pertinent generator bus (and related avionic bus supplied) is separated from the battery bus and from opposite generator bus.

When both generators are correctly operating and all above mentioned switches are in ON position, all the busses are connected to the generators.

The ignition switches, two for each engine and grouped on the over head panel, are instead independent from the airplane electrical system (generation and distribution); they only control and open the engine electrical circuit



*If ignition switches are turned ON, a propeller movement can cause the engine starting with consequent hazard for people nearby.*

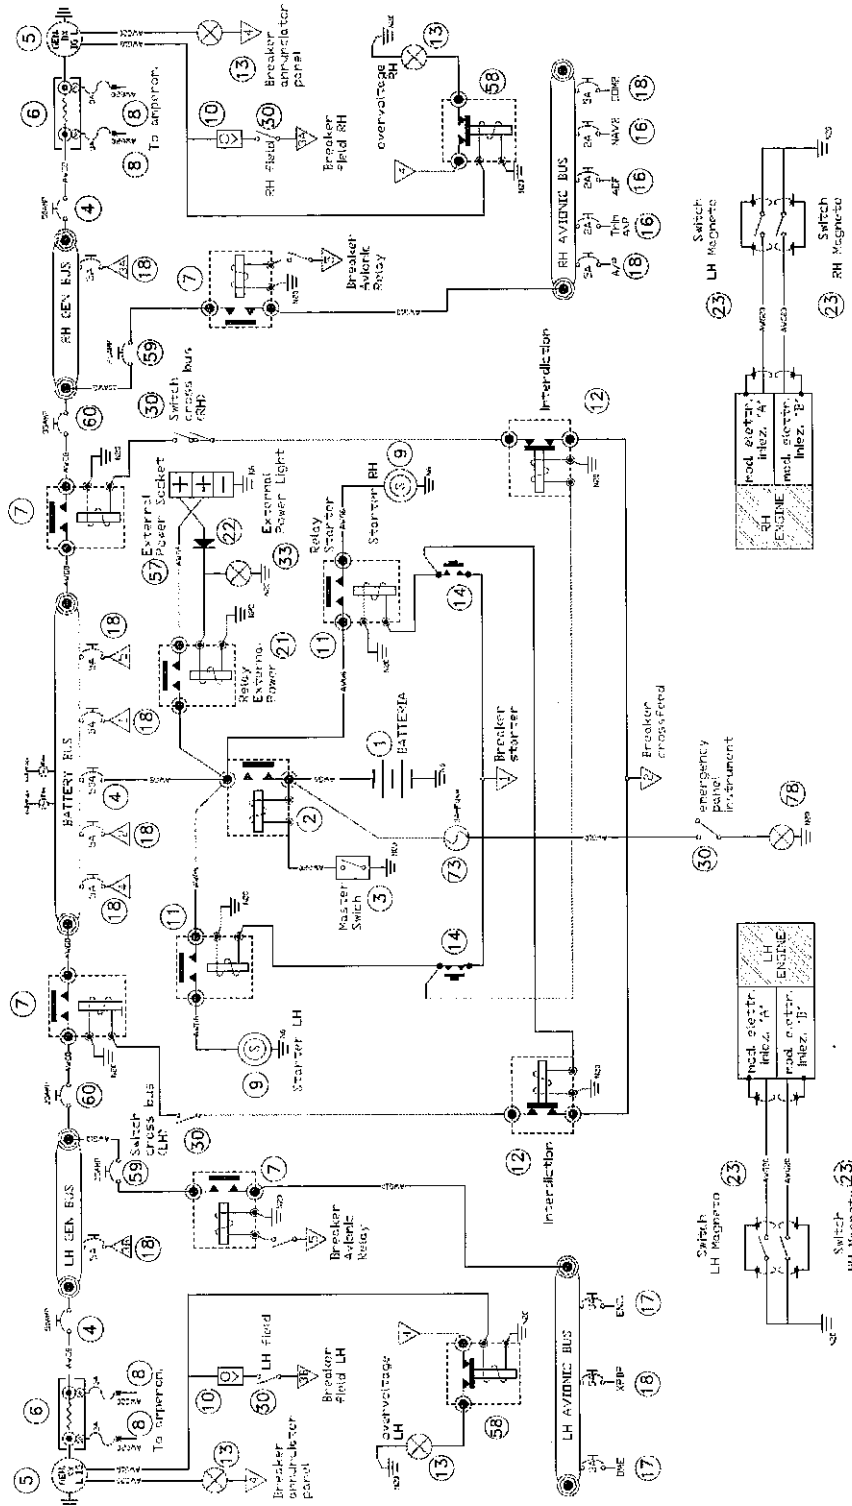


Figure 22. – Electrical system schematic

---

**SECTION 8 – AIRCRAFT CARE and MAINTENANCE****INDEX**

<b>1. Introduction .....</b>	<b>3</b>
<b>2. Inspection intervals.....</b>	<b>3</b>
<b>3. Aircraft changes or repairs .....</b>	<b>3</b>
<b>4. Maintenance .....</b>	<b>4</b>
<b>4.1. Refuelling.....</b>	<b>4</b>
<b>4.2. Oil level control .....</b>	<b>4</b>
<b>4.3. Landing gear tires pressure control .....</b>	<b>5</b>
<b>5. Ground towing, parking and mooring .....</b>	<b>6</b>
<b>5.1. Towing .....</b>	<b>6</b>
<b>5.2. Parking.....</b>	<b>6</b>
<b>5.3. Mooring .....</b>	<b>7</b>
<b>6. Cleaning .....</b>	<b>8</b>
<b>6.1. Windows.....</b>	<b>8</b>
<b>6.2. External surfaces .....</b>	<b>8</b>
<b>6.1 Propeller.....</b>	<b>8</b>
<b>6.2 Engine .....</b>	<b>8</b>
<b>6.3 Internal surfaces .....</b>	<b>9</b>
<b>7. Ice removal .....</b>	<b>9</b>



INTENTIONALLY LEFT BLANK

**SUPPLEMENT NO. A12 – S-TEC FIFTY FIVE X AUTOPILOT**

**Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	Editorial Change	A. Sabino	C. Caruso	M. Oliva	Approved under DOA No. EASA.21J.335 privileges

**List of Effective Pages**

Page	Revision	Page	Revision
A12-1	Rev 0	A12-6	Rev 0
A12-2	Rev 0	A12-7	Rev 0
A12-3	Rev 0	A12-8	Rev 0
A12-4	Rev 0	A12-9	Rev 0
A12-5	Rev 0	A12-10	Rev 0

## INTRODUCTION

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when equipped with S-TEC Fifty Five X autopilot device.



## GENERAL

The System Fifty Five X is a rate based autopilot. When in control of the roll axis, the autopilot senses turn rate, as well as closure rate to the selected course, along with the non-rate quantities of heading error, course error and course deviation indication.

When in control of the pitch axis, the autopilot senses vertical speed, acceleration, and closure rate to the selected glideslope, along with the non-rate quantities of altitude and glideslope deviation indication.

These sensed data provide feedback to the autopilot, which processes them in order to control the aircraft through the use of mechanisms coupled to the control system.

The "autotrim" function senses when the aircraft needs to be trimmed about the pitch axis, and responds by driving the trim servo in the proper direction to provide trim.

**LIMITATIONS (EASA APPROVED)**

*The S-TEC "Pilot's Operating Handbook Fifty Five X" (4<sup>th</sup> Edition – First Revision dated March 01, 2008 or a more updated version) must be carried in the aircraft and made available to the pilot at all time.*



*In accordance with FAA recommendation (AC 00-24B), use of basic "Altitude Hold" mode is not recommended during operation in severe turbulence.*

Following operating limitations shall apply when the aircraft is equipped with S-TEC Fifty Five X autopilot:

1. The Autopilot is certified for Category I – ILS Approaches [with a decision height not lower than 200 feet AGL (61m)]
2. Autopilot operation forbidden with flaps extended more than TO position
3. During Autopilot operation, a pilot with seat belt fastened must be seated at the left pilot position
4. The use of Autopilot during single engine operation is forbidden
5. Autopilot DISC during take-off and landing
6. Maximum speed for Autopilot operation is 135 KIAS
7. Minimum speed for Autopilot operation is 85 KIAS
8. Minimum altitude AGL for Autopilot operation is:
  - a. Cruise and Descent: 1000 ft
  - b. Climb after takeoff and not precision approach: 400 ft
  - c. ILS CAT I precision approach: 200 ft

On the instrument panel, in clear view of the pilot, it is placed the following placard reminding the observance of aircraft operating limitations during Autopilot operation:

**OPERATING LIMITATIONS FOR AUTOPILOT S-TEC 55X**

- Category I – ILS Approaches only (200 ft AGL)
- Do not use AP with flaps extended more than TO position
- Pilot with seat belt fastened must be seated at the left pilot position during AP operation
- Do not use AP during single engine operation
- Do not use AP during take-off and landing
- AP operating speeds range: 85 to 135 KIAS
- Min. altitude AGL for Autopilot operation is:  
Cruise and Descent: 1000 ft  
Climb after takeoff and not precision approach: 400 ft

**Section 9 - Supplements****Supplement no. A12 – S-TEC Fifty Five X Autopilot**

**EMERGENCY PROCEDURES****NOTE**

*In event of autopilot malfunction, or when the system is not performing as expected or commanded, take immediately the aircraft control disconnecting the autopilot which must be set inoperative until the failure has been identified and corrected.*

**Altitude lost during a pitch axis autopilot malfunction and recovery**

Following table addresses the altitude lost during a pitch axis malfunction and recovery for each reported flight phase:

<b>Flight phase</b>	<b>Altitude loss</b>
Climb	200 ft
Cruise	150 ft
Descent	200 ft
Manoeuvring	50 ft
Approach	80 ft

**Autopilot hardover or failure to hold the selected heading**

In case of Autopilot hardover or failure to hold the selected heading, apply following procedure:

**Accomplish items 1 and 2 simultaneously:**

- |                             |   |
|-----------------------------|---|
| 1. Airplane control wheel   | <i>GRASP FIRMLY and OVERPOWER if necessary to regain aircraft control</i> |
| 2. AP DISC/TRIM INTR switch | <i>PRESS</i>  |
| 3. AP MASTER SWITCH         | <i>OFF</i>  |
| 4. AP Circuit Breaker       | <i>PULL</i>   |



*When Autopilot is disconnected as a consequence of a malfunction, hold the control wheel firmly: it may be necessary up to 35 pounds (15.8 daN) of force on the control wheel to hold the airplane level.*



*When Autopilot is disconnected, it may be necessary operate the pitch trim through either the Manual Electric Trim Switch or the Trim Wheel.*

**Electric trim malfunction**

In case of Electric Trim malfunction (either in AP Autotrim mode or when manually operated through the Manual Electric Trim Switch), apply following procedure:

1. AP DISC/TRIM INTR switch                    *PRESS and HOLD*
2. TRIM MASTER SWITCH                        *OFF*
3. TRIM Circuit Breaker                        *PULL*
4. AP DISC/TRIM INTR switch                    *RELEASE*



*When Autopilot is disconnected because of a pitch trim malfunction, hold the control wheel firmly: it could be necessary up to 35 pounds (15.8 daN) of force on the control wheel to hold the airplane level.*



*When electric trim is disconnected, it may be necessary operate the pitch trim through the Trim Wheel.*



*When electric trim is disconnected, Autopilot system can be operated both in pitch and roll modes; nevertheless, when a pitch mode (ALT HOLD, VS, GS) is engaged, the Autopilot will provide an annunciation whenever it is necessary to manually trim the aircraft about the pitch axis using the Trim Wheel. Make reference to S-TEC "Pilot's Operating Handbook Fifty Five X" (4<sup>th</sup> Edition – First Revision dated March 01, 2008 or a more updated version).*



**GYRO DIRECTIONAL SIGNAL LOST**

When AP is engaged and the gyro directional electrical supply is lost (instrument warning flag displayed), an aural warning alerts the pilot to the failure; in this case the AP must be disconnected applying following procedure:

**Accomplish items 1 and 2 simultaneously:**

1. Airplane control wheel *GRASP FIRMLY and OVERPOWER if necessary to regain aircraft control*
2. AP DISC/TRIM INTR switch *PRESS*
3. AP MASTER SWITCH *OFF*
4. AP Circuit Breaker *PULL*
5. Refer to other navigation means for heading information



*When Autopilot is disconnected as a consequence of a malfunction, hold the control wheel firmly: it may be necessary up to 35 pounds (15.8 daN) of force on the control wheel to hold the airplane level.*



*When Autopilot is disconnected, it may be necessary operate the pitch trim through either the Manual Electric Trim Switch or the Trim Wheel.*

## **NORMAL OPERATIONS**

Normal operating procedures, including pre-flight checks, are described on S-TEC "Pilot's Operating Handbook Fifty Five X" (4th Edition – First Revision dated March 01, 2008 or a more updated version).



*The vertical speed mode is used to establish and hold a PILOT selected vertical speed. Since the autopilot receives no airspeed information, it is the responsibility of the pilot to ensure that the vertical speed selection is within the operating limits of the aircraft's capabilities. Selection of a vertical speed beyond the capability of the aircraft can create a condition of reduced airspeed, and possibly lead to a stall condition.*

## **PERFORMANCES**


S-TEC Fifty Five X Autopilot employment does not affect the aircraft performances.

## **WEIGHT AND BALANCE**

See Section 6 of this Manual.

**SYSTEMS**

The System Fifty Five X Block Diagram is shown in the following figure.

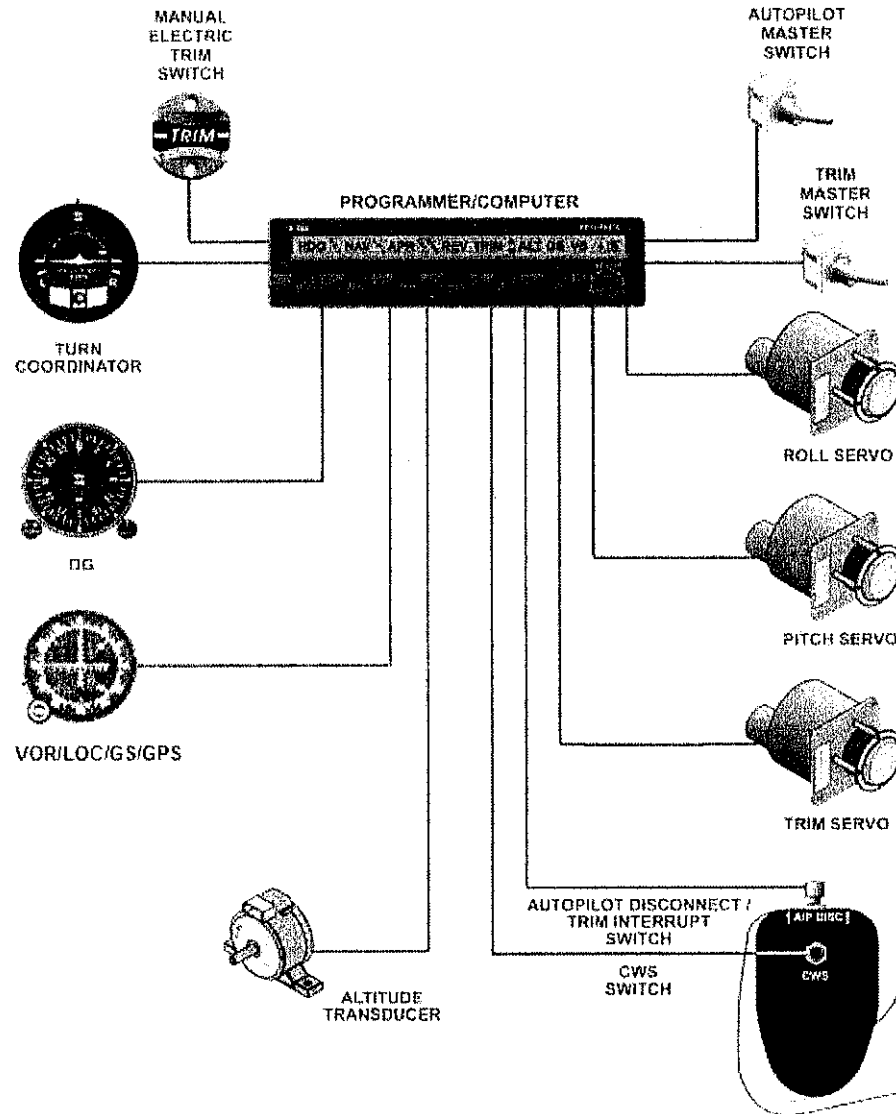

**Section 9 - Supplements**

**Supplement no. A12 - S-TEC Fifty Five X Autopilot**

**SUPPLEMENT NO. A13-B - GARMIN GTN-650/750 GPS/WAAS  
COMM/NAV**

**Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	All	Editorial Change	A. Sabino	C. Caruso	M. Oliva	Approved under DOA No. EASA.21J.335 privileges
1	All	Extension of applicability to GTN750	G.Valentino	D.Ronca	M.Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/382.200129)

**List of Effective Pages**

Page	Revision	Page	Revision
A13-B-1	Rev 1	A13-B-4	Rev 1
A13-B-2	Rev 1	A13-B-5	Rev 1
A13-B-3	Rev 1	A13-B-6	Rev 1


**INTRODUCTION**

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when equipped with Garmin GTN 650/750 COMM/NAV/GPS unit.


**GENERAL**

1. GTN 650/750 is an integrated unit with touchscreen interface that contains a GPS navigation system in addition to a VHF COMM radio transceiver and a VOR/ILS receiver.
2. The system consists of a GPS/WAAS antenna, a VOR/ILS antenna and a VHF COMM antenna.
3. The main function of the VHF Comm is to allow communication with the control tower.
4. The VOR/ILS section function is to receive and to demodulate VOR/LOC/GS signals.
5. The GPS section function is to acquire the GPS satellite signal and to supply in real time the information of position, speed and time.

The GTN 650 front panel is shown in the figure below.

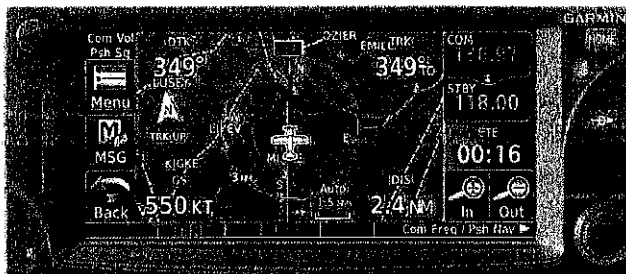

The GTN 750 front panel is shown in the figure below.

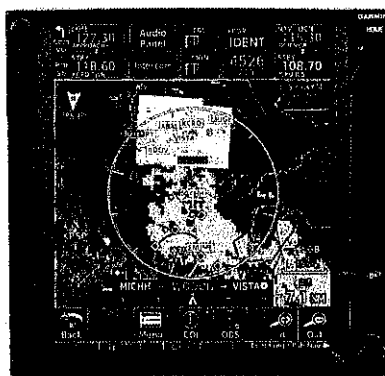

**Section 9 - Supplements**

**LIMITATIONS (EASA APPROVED)**

1. The GARMIN GTN 650/750 Pilot's Guide and Reference p/n 190-01004-03 rev. E / p/n 190-01007-03 Rev. B, or a more updated version, must be available on board for the correct device use.
2. The system employment is allowed in IFR flight conditions.  
  
Main subsystem software version is indicated for 5 seconds immediately after the GTN 650/750 system has been turned on. Other subsystems software versions can be verified on the SYSTEM PAGE, "SYSTEM STATUS".
3. The unit settings can be changed on the SYSTEM PAGE, "UNITS".

**EMERGENCY PROCEDURES**

1. Should the Garmin GTN 650/750 information be unavailable or manifestly wrong, it is necessary to use other navigation instruments.
2. If during navigation (only in ENROUTE mode) GPS signal is lost, the instrument continues to operate in DR (Dead Reckoning) mode. Aircraft position is estimated on the basis of the last GPS valid signal, but it can be significantly distorted by relative speed variations. On the lower left side of the maps the advice "DR" appears.
3. If during a GPS precision approach the vertical limits are overcome, the Vertical Guide is signalled as unavailable. The procedure must be carried out exclusively using the LNAV function.
4. During a GPS approach where the precision/no-precision overcoming limits warning come up, an "ABORT APPROACH" advice appears on the screen. GPS can be used to perform the abortive approach manoeuvre; also other approved instruments/devices shall be used.
5. In case of emergency flight conditions, press and hold volume knob or the external remote COM flip-flop key for two seconds, in order to set automatically the receiver on the emergency frequency: 121.500MHz.

**Section 9 - Supplements****Supplement no. A13-B - Garmin GTN 650/750 GPS/WAAS COMM/NAV**

**NORMAL OPERATIONS**

**DETAILED OPERATING PROCEDURES**

Normal operations procedures are reported on the GARMIN GTN 650/750 Pilot's Guide and Reference p/n 190-01004-03 rev. E / 190-01007-03 Rev. B or later.



GARMIN GTN 650 Pilot's Guide and Reference p/n 190-01004-03 rev. E / 190-01007-03 Rev. B or later - must be carried onboard the airplane at all times.

**PERFORMANCES**


The Garmin GTN-650/750 employment does not affect the aircraft performances.

**WEIGHT AND BALANCE**


See section 6 AFM.

Ref.	Description	P/N	Inst.	Weight	Arm
B36a	GTN 650 GPS/COMM/NAV unit.			3.20	-1.4
B36b	GTN 750 GPS/COMM/NAV unit.			4.20	-1.4

**INSTRUMENT PANEL**

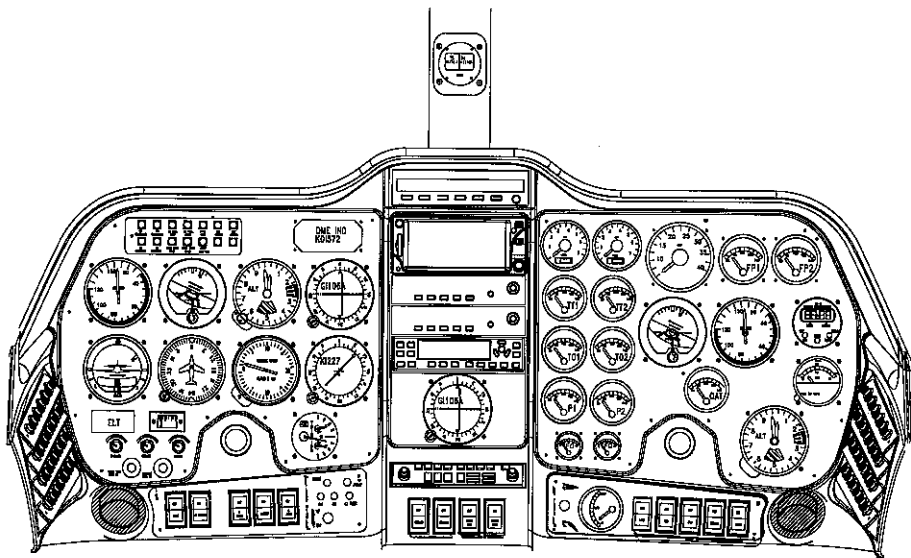



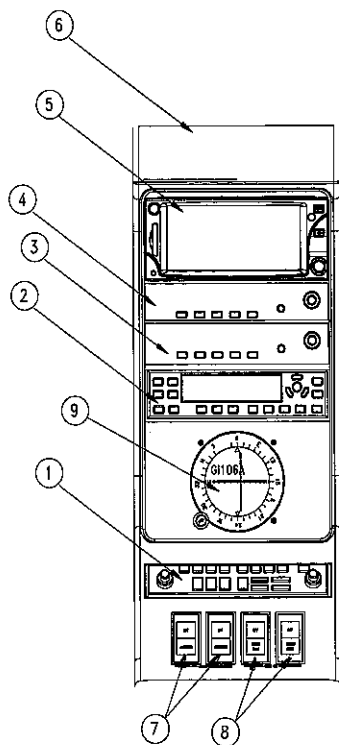

Tab 2

nr	DESCRIPTION
1	Audio Panel
2	Transponder
3	ADF (Kit B)
4	COM/NAV SL30 (Kit A)
5	GPS/NAV/COMM GTN 650
6	Available
7	Avionic Switches
8	Cross Bus Switches
9	VOR/ILS Indicator

**SYSTEMS**

Refer to GARMIN GTN 650 Pilot's Guide and Reference p/n 190-01004-03 rev. E / 190-01007-03 Rev. B or later for a complete system description.

**Section 9 - Supplements**

**SUPPLEMENT NO. A14 – ENGINE STARTING BATTERY**

**Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	Editorial Change	A. Sabino	C. Caruso	M. Oliva	Approved under DOA No. EASA.21J.335 privileges
1	A14-3	Typo error	A. Sabino	C. Caruso	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/290.170316)

**List of Effective Pages**

Page	Revision	Page	Revision
A14-1	Rev 1	A14-3	Rev 1
A14-2	Rev 0	A14-4	Rev 0

## **INTRODUCTION**

This section contains information to operate the airplane equipped with a supplemental battery dedicated to engines starting.

## **GENERAL**

The engine starting battery is housed in a dedicated box under the main battery box: both batteries are accessible through the inspection cap F10 on the left side of the tail cone.

## **LIMITATIONS**

See Section 2 of this Manual.

## **EMERGENCY PROCEDURES**

In event of the following failure conditions, addressed on Section 3 of this Manual and leading to fly without power generation system:

- **Both generators failure (Para. 3.1)**
- **Both generators overvoltage (Para 3.3)**

apply, at the end of related checklist, following procedure:

EMERG BATT switch *ON*

## **NORMAL OPERATIONS**

During Cockpit Inspections (see Para. 3.2 – Section 4 of this Manual), perform also following check:

Eng. Starting Battery Voltmeter *CHECK 12 to 14 Volt*

**PERFORMANCES**

See Section 5 of this Manual.

**WEIGHT AND BALANCE**

For weight and balance, make reference to Section 6 of this Manual; additionally, the equipment list reported on Para. 5 is so integrated:

EQUIPMENT LIST		AIRCRAFT S/N	DATE:		
REF.	DESCRIPTION	P/N	INST	WEIGHT [kg]	ARM [M]
<i>AVIONICS &amp; MISCELLANEOUS</i>					
A14-1	Engine Starting Battery (EnerSys SBS8)		X	2.7	3.7

**SYSTEMS**

When airplane embodies the design change in subject, in addition to the main battery, a dedicated engine starting battery is introduced.

The entire primary loads stand connected to the main battery itself and the engine starting battery is recharged by the LH generator.



This modification is transparent to the crew because it does not change deeply the usual normal and emergency procedures.

Additionally, in event of the overall loss of power generation, the starting battery can be put in parallel with the main battery by means of the EMERG BATT switch activation.

In order to allow the charging status check of the battery, a voltmeter is provided. Pushing the button close to the voltmeter, crew can read the battery status.

Both batteries are accessible through the inspection cap F10 on the left side of the tail cone.

When the design change in subject is embodied, following placards are installed on the airplane:

Description	Placard	Place
Engine starting battery voltmeter location		Close to the voltmeter
Batteries compartment location		Fuselage tail cone, left side

**Section 9 - Supplements**

**Supplement no. A14 - ENGINE STARTING BATTERY**

**SUPPLEMENT NO. A20 - VLO/VLE INCREASE**

**RECORD OF REVISIONS**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval Or Under DOA Privileges
			DO	OoA	HDO	
0	All	Editorial change (*)	A. Sabino	C. Caruso	M. Oliva	DOA Privileges

Note (\*): This Supplement has been originally issued under EASA approval 10041602

**LOEP**

<b>Page</b>	<b>Revision</b>
A20-1	Rev 0
A20-2	Rev 0
A20-3	Rev 0
A20-4	Rev 0
A20-5	Rev 0
A20-6	Rev 0

## **INTRODUCTION**

This Supplement provides supplemental information to increase the  $V_{lo}/V_{le}$  when the Tecnam Service Bulletin SB 106-CS or Design Change MOD 2006/033 has been embodied on the airplane.

The information contained herein supersedes the basic Aircraft Flight Manual.



## **SECTION 2 - LIMITATIONS**



## **SPEED LIMITATIONS**

On the left side instrument panel, above on the left, it is placed the following placard reporting the speed limitations:

**Maximum L.G. op. speed**

**$V_{LO}/V_{LE} = 122$  KIAS**

INTENTIONALLY LEFT BLANK

**SUPPLEMENT NO. A27 - GARMIN GMA345 AUDIO PANEL**

**Record of Revisions**


Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	All	First issue	G. Valentino	D. Ronca	M. Oliva	Approved under the authority of DOA ref. EASA.21J.335 (MOD2006/360.191108)

**List of Effective Pages**

Page	Revision	Page	Revision
A27-1	Rev 0	A27-3	Rev 0
A27-2	Rev 0	A27-4	Rev 0

**INTRODUCTION**

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when equipped with Garmin GMA345 device.

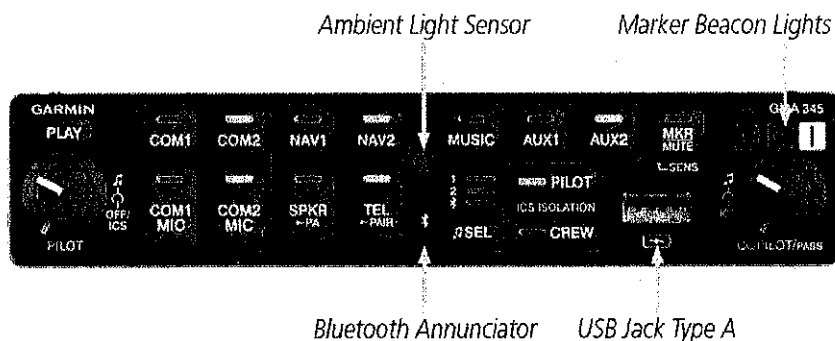

**GENERAL**

Garmin GMA345 is the audio management device used on P2006T.

The audio panel handles internal audio communications (INTERCOM), external audio communications (allowing COM1 to COM2 switching), those related to the markers during ILS approaches and, eventually, those related to the on board music entertainment.

**LIMITATIONS**

Garmin GMA345 manuals do not address operating limitations more severe than those usually applicable to the P2006T.

**EMERGENCY PROCEDURES**

No particular emergency procedures, related to the GMA345 audio panel employment, are applicable.

In case of internal electrical failures or in case of loss of electrical supply, Garmin GMA 345 automatically switches on COM1 selected frequency to allow the pilot for handling radio communications.

**NORMAL OPERATIONS****DETAILED OPERATING PROCEDURES**

Normal operating procedures are described on "GARMIN GMA 345 Pilot's guide" (P/N 190-01878-01) rev. C or later versions.



*GARMIN GMA 345 Pilot's guide" (P/N 190-01878-01) - rev. C or later versions - must be carried onboard the airplane at all times.*

**PERFORMANCES**

Garmin GMA345 audio panel employment does not affect the aircraft performances.

**WEIGHT AND BALANCE**

See Section 6 of this Manual.

**SYSTEMS**

Refer to "GARMIN GMA 345 Pilot's guide" (P/N 190-01878-01) rev. C or later versions for a complete system description.

INTENTIONALLY LEFT BLANK

**Section 9 - Supplements**

**Supplement no. A27 – Garmin GMA345 audio panel**

**SUPPLEMENT NO. A28 - GARMIN GTX345R TRANSPONDER**

**Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	-	Initial issue	G. Valentino	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/382.200129)

**List of Effective Pages**

Page	Revision	Page	Revision
A28-1	Rev 0	A28-3	Rev 0
A28-2	Rev 0	A28-4	Rev 0



**INTRODUCTION**

This section contains supplemental information to operate the aircraft in a safe and efficient manner when equipped with Garmin GTX345R device.

**GENERAL**

Garmin GTX345R is a transponder operating with A, C and S mode.

**LIMITATIONS**

Garmin GTX345R manuals do not address operating limitations more severe than those usually applicable to the P2006T.

**EMERGENCY PROCEDURES**

In case of emergency conditions, transponder is able to send codified messages to the Air Traffic Control; messages are classified as follows:

Code	Condition
7500	Aircraft subjected to illegal interference
7600	Loss of radio communications
7700	Emergencies

**NORMAL OPERATIONS****DETAILED OPERATING PROCEDURES**

Normal operating procedures are described on GTX345R Pilot's Guide, P/N 190-01499-00 Rev. F or later.

**PERFORMANCES**

Garmin GTX345R employment does not affect the aircraft performances

**WEIGHT AND BALANCE**

See Section 6 of this Manual.

**SYSTEMS**

GTX 345R is a Mode S transponder with ADS-B extended squitter capability and also includes UAT and 1090 receivers for ADS-B IN (optional)/OUT capabilities. It is mounted on a rack, located behind the PFD.

It delivers up to 250 watts of nominal power. GTX 345R is connected to GTN 650 (NAV/COM/GPS) for visual information.

The GTX 345R is connected to Audio Panel, Encoder and to XPDR antenna.

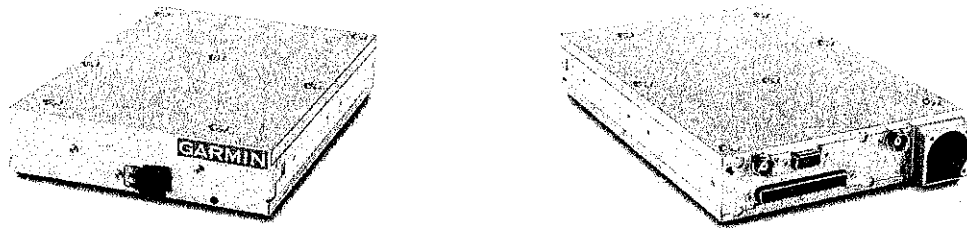


Figure 1 – Garmin GTX 345R

INTENTIONALLY LEFT BLANK

## **Section 9 - Supplements**

**Supplement no. A28 - GARMIN GTX345R Transponder**

**SUPPLEMENT NO. G28 - GARMIN GNC255 VHF COMM/NAV**
**Record of Revisions**

Rev	Revised page	Description of Revision	Tecnam Approval			EASA Approval or Under DOA Privileges
			DO	OoA	HDO	
0	All	First issue	G. Valentino L. De Salvi (OJT)	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/398.210318)
1	G28 - 1,2	Typo errors	L. De Salvi	D. Ronca	M. Oliva	Approved under the authority of DOA, ref. EASA.21J.335 (MOD2006/431.230117)

**List of Effective Pages**

Page	Revision	Page	Revision
G28-1	Rev 1	G28-3	Rev 0
G28-2	Rev 1	G28-4	Rev 0

## INTRODUCTION

This section contains supplemental information to operate, in a safe and efficient manner, the aircraft when equipped with Garmin GNC255 COMM/NAV.



## GENERAL

Combining a powerful VHF communications transceiver with 200 channel VOR, Localizer and Glideslope receivers, the GNC 255 provides a full functioned navigation and communications solution. Besides traditional NAV/COM features, the GNC 255 also incorporates workload-reducing functions such as automatic decoding of the Morse code station identifier for VOR/LOC, most-used frequency storage in memory, built-in course deviation indicator, and more.

The GNC 255 has the ability to monitor the standby COM frequencies. The GNC 255's COM radio operates in the aviation voice band, from 118.000 to 136.975 MHz, in 25 kHz steps (default). For European operations, configuration for 8.33 kHz steps is provided with the GNC 255A (10 watt) and GNC 255B (16 watt). The GNC 255 VHF NAV receiver operates from 108 MHz to 117.95 MHz decoding both the VHF Omni Range and Localizer navigation signals. The built-in Glideslope receiver will automatically tune the corresponding glideslope paired frequencies (328 MHz to 335 MHz) when the localizer is tuned.

**LIMITATIONS**

Refer to basic AFM.

**EMERGENCY PROCEDURES**

Refer to basic AFM.

**NORMAL OPERATIONS****DETAILED OPERATING PROCEDURES**

Normal operating procedures are described on GARMIN GNC255 Pilot's guide (P/N 190-01182-01).



*GARMIN GNC255 Pilot's guide (P/N 190-01182-01) must be carried on board the airplane at all times.*

**PERFORMANCES**

Refer to basic AFM.

**WEIGHT AND BALANCE**

See Section 6 of this Manual.

**AIRFRAME AND SYSTEMS DESCRIPTION**

Refer to GARMIN GNC255 Pilot's guide (P/N 190-01182-01) for a complete system description.

**AIRCRAFT CARE AND MAINTENANCE**

Refer to basic AFM.